



**Intermec**



# Programmer's Reference Manual

**IPL (Intermec Printer  
Language)**

Intermec Technologies Corporation

Corporate Headquarters  
6001 36th Ave. W.  
Everett, WA 98203  
U.S.A.

[www.intermec.com](http://www.intermec.com)

The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and service Intermec-manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec.

Information and specifications contained in this document are subject to change without prior notice and do not represent a commitment on the part of Intermec Technologies Corporation.

© 2000-2005 Intermec Technologies Corporation. All rights reserved.

The word Intermec, the Intermec logo, Norand, ArciTech, Beverage Routebook, CrossBar, dcBrowser, Duratherm, EasyADC, EasyCoder, EasySet, Fingerprint, INCA (under license), i-gistics, Intellitag, Intellitag Gen2, JANUS, LabelShop, MobileLAN, Picolink, Ready-to-Work, RoutePower, Sabre, ScanPlus, ShopScan, Smart Mobile Computing, SmartSystems, TE 2000, Trakker Antares, and Vista Powered are either trademarks or registered trademarks of Intermec Technologies Corporation.

Throughout this manual, trademarked names may be used. Rather than put a trademark (™ or ®) symbol in every occurrence of a trademarked name, we state that we are using the names only in an editorial fashion, and to the benefit of the trademark owner, with no intention of infringement.

There are U.S. and foreign patents pending.

The name Centronics is wholly owned by GENICOM Corporation.

IBM is a registered trademark of International Business Machines Corporation.

The software contained in the Intermec Printers and the accompanying materials are copyrighted.

Unauthorized copying of the software, including software that has been modified, merged, or included with other software, or the written materials is expressly forbidden without the prior written consent of Intermec. All right, title, and interest in all copies of this software are and shall at all times remain the sole and exclusive property of Intermec. Customer may be held legally responsible for any copyright infringement that is caused or encouraged by its failure to abide by these terms.

## **Document Change Record**

This page records changes to this document. The document was originally released as version -001.

<b>Revision</b>	<b>Date</b>	<b>Changes</b>
003	10/2000	Revised throughout to include EasyCoder F4 printer information.
004	04/2001	Revised to include 3400e series printer information.
005	12/2001	Revised to include 44X0 printer information.
006	03/2003	Revised to include: <ul style="list-style-type: none"><li>• IPL v1.4 and v2.0 functionality</li><li>• Command information for the EasyCoder PF2i, PF4i, and PM4i printers</li></ul>
007	10/2003	Revised to include minor changes. Added new Slash Zero, Enable or Disable command.
008	06/2004	Revised to include: <ul style="list-style-type: none"><li>• IPL v2.30 functionality</li><li>• Command information for the EasyCoder PX4i and PX6i printers</li></ul>
009	11/2004	Revised to include PC41 printer information.
010	02/2005	Revised to include changes for IPL v2.50, which includes support for the Planet bar code. Other minor changes were made throughout the manual.
011	06/2005	Revised to include changes for IPL v2.60, which includes support for RFID commands and new RFID tag formats. Other minor changes were made throughout the manual.
012	12/2005	Revised to include changes for IPL v2.70.0, which includes additional support for RFID commands.



# Contents

Before You Begin.....	xiii
Safety Information.....	xiii
Global Services and Support .....	xiii
Who Should Read This Document? .....	xiv
Related Documents .....	xv

<b>1 Introduction to IPL Commands.....</b>	<b>1</b>
What Is IPL?.....	2
What Are IPL Commands? .....	2
What's New for IPL v2.70.0?.....	3
Programming for Intermec Printers .....	3
Learning the Structure of IPL Commands .....	4
Using Control Characters in IPL Command Strings .....	4
Sending IPL Commands to the Printer .....	5
Downloading Commands From Windows .....	6
Sending a String of Commands Through an Application.....	7
Example 1.....	7
Example 2.....	7
Switching Between Print Mode and Program Mode .....	8
Working With RFID Tags.....	8
How to Write Data to an RFID Tag.....	9
How Data is Stored on an RFID Tag .....	9
Writing Hex or ASCII Formats .....	9
Writing Numerical Formats.....	9
What to Read Next.....	10

<b>2 Downloading Fonts to the Printer .....</b>	<b>11</b>
What Types of Fonts Can I Download? .....	12
Using PrintSet to Download Fonts .....	13
Installing International Character Sets Using GLOBE .....	15
What Types of Fonts Does GLOBE Support? .....	15
Do You Need to Purchase Additional RAM? .....	16
Licensing Your Fonts .....	17
Creating Bitmap Fonts From TrueType Fonts.....	17

Selecting the Printer Language.....	19
Installing Code Page Tables.....	19
Using IPL Commands to Download Fonts.....	20
Downloading Bitmap Fonts.....	20
Downloading Outline Fonts.....	20
Using Third-Party Software Applications to Download Fonts.....	21

## **3 Designing Bar Code Labels..... 23**

Introduction to Formats .....	24
Tutorial for Designing and Creating a Label Format.....	24
Defining Label Design Fields.....	29
Bar Code Fields .....	29
Human-Readable Fields.....	29
Line and Box Fields .....	30
Graphic Fields .....	32
Editing Label Formats and Working With Fields.....	33
Editing Existing Fields.....	35
Deleting Fields.....	36
Positioning Fields .....	36
Rotating Fields .....	37
Scaling Fields.....	38
Magnifying Fonts and Character Fields .....	38
Magnifying Bar Code Fields .....	39
Designing Pages.....	40
Label Format - Example.....	40
Graphic for Example.....	41
Format for Example.....	41
Data for Example.....	42
Label Format - RFID Example.....	44
Format for RFID Example.....	44
Data for RFID Example .....	44

## **4 Troubleshooting..... 47**

Troubleshooting Checklist.....	48
How the Printer Handles Error Conditions .....	48
Syntax Errors .....	48
Parameter Errors.....	49
Image Overrun Errors.....	49
Invalid Numeric Character Errors.....	49
Insufficient Storage Memory Errors .....	49
Interpreting Error Codes and Solving Problems.....	50

<b>5</b>	<b>Advanced Printer Programming</b>	53
	Using the Printer Memory Efficiently	54
	How Is the Printer Storage Memory Used?	54
	Making the Most of Your Storage Memory	54
	Increasing Throughput	55
	What Is an Image Band?	55
	How the Image Bands Command Works	56
	Optimizing Print Speed and Image Band Setting	56
	Reimaging Modified Fields	59
	Optimizing Image Bands for Batch Printing	60
	Using Emulation Mode	60
<b>6</b>	<b>Finding IPL Commands in This Manual</b>	65
	Commands Listed by Name	66
	Commands Listed by Syntax	71
	Commands Listed by Task	75
	Immediate Commands	75
	Program Mode Commands	76
	Print Mode Commands	80
	Test and Service Commands	82
<b>7</b>	<b>IPL Command Reference</b>	83
	Which Commands Does Your Printer Support?	84
	Immediate Commands	91
	Abort Print Job	91
	Error Code, Request	91
	Label and Gap Length, Transmit	92
	Remaining Quantity and Batch Count, Transmit	92
	Reset	92
	Status Dump	93
	Status Enquiry	94
	Print Commands	95
	Advanced Mode, Select	96
	Alphanumeric Field Separator	97
	Batch Count, Set	98
	Clear All Data	98
	Clear Data From Current Field	98
	Command Terminator 1	98
	Command Terminator 2	99
	Configuration Parameters, Transmit	99
	Cut	99
	Data Shift – International Characters	99
	Direct Graphics Mode, Select	101

Emulation Mode, Enter .....	102
Field, Select .....	102
Field Decrement, Set .....	103
Field Increment, Set.....	104
First Data Entry Field, Select .....	104
Font, Transmit .....	105
Form Feed .....	106
Format, Select.....	106
Format, Transmit .....	108
Increment and Decrement, Disable.....	109
Memory Usage, Transmit .....	110
Next Data Entry Field, Select .....	111
Numeric Field Separator.....	111
Options Selected, Transmit .....	112
Page, Select .....	113
Page, Transmit.....	113
Print .....	114
Printhead Parameters, Transmit.....	114
Program Mode, Enter .....	114
Program Number, Transmit .....	114
Quantity Count, Set .....	115
RFID Tag, Read.....	115
Start and Stop Codes (Code 39), Print.....	117
Storage Area Usage, Transmit .....	117
Test and Service Mode, Enter .....	117
User-Defined Characters, Transmit .....	117
User-Defined Tables, Transmit.....	118
Warm Boot.....	118
Configuration Commands .....	119
Amount of Storage, Define .....	120
Audible Alarm, Enable or Disable .....	120
Auto-Transmit 1, Enable .....	121
Auto-Transmit 2, Enable .....	121
Auto-Transmit 3, Enable .....	121
Auto-Transmit 1, 2, and 3, Disable .....	122
Communication Port Configuration, Set .....	122
Control Panel Access Permission, Set.....	123
Cutter, Enable or Disable .....	124
Dark Adjust, Set .....	124
Direct Graphics Emulation Mode, Enable or Disable .....	125
Emulation or Advanced Mode on Power-Up .....	125
End-of-Print Skip Distance, Set.....	126
IBM Language Translation, Enable or Disable.....	128
Intercharacter Delay, Set.....	128
Interlabel Ribbon Save, Enable or Disable .....	128
Label Rest Point, Adjust .....	129
Label Retract, Enable or Disable .....	129
Label Retract Distance, Set .....	130
Label Stock Type, Select .....	130
Label Width, Set.....	131
Maximum Label Length, Set.....	132
Media Fault Recovery Mode, Set .....	133



Media Sensitivity, Select .....	133
Message Delay, Set .....	134
Number of Image Bands, Set .....	135
Online or Offline on Power-Up.....	136
Pin 11/20 Protocol, Set.....	136
Postamble, Set .....	137
Preamble, Set.....	137
Print Speed, Set .....	138
Printer Language, Select.....	139
Printhead Loading Mode, Select .....	141
Printhead Pressure, Set.....	142
Printhead Test Parameters, Set.....	142
RFID Parameters, Set .....	143
RFID Tag Void Text, Set .....	144
Ribbon Save Zones, Set .....	144
Self-Strip, Enable or Disable .....	145
Serial Port Configuration, Set .....	146
Slash Zero, Enable or Disable .....	146
Takeup Motor Torque, Increase .....	147
Top of Form, Set .....	147
Program Mode Commands.....	148
Bar Code, Select Type .....	149
Code 39.....	150
Code 93.....	150
Interleaved 2 of 5.....	151
Code 2 of 5.....	151
Codabar.....	151
Code 11.....	152
Code 128.....	152
UPC/EAN.....	154
HIBC Code 39 .....	155
Code 16K.....	155
Code 49.....	156
POSTNET .....	156
PDF417.....	156
MaxiCode.....	159
JIS-ITF.....	161
HIBC Code 128.....	162
Data Matrix Symbolology Versions ECC-100 and ECC-200 .....	162
QR Code .....	164
MicroPDF417 .....	164
RSS .....	165
EAN.UCC Composite.....	168
Planet .....	171
Bar Code Field, Create or Edit.....	171
Bitmap Cell Height for Graphic or UDF, Define .....	172
Bitmap Cell Width for Graphic or UDF, Define .....	174
Bitmap User-Defined Font, Clear or Define .....	175
Border Around Human-Readable Text, Define.....	175
Box Field, Create or Edit .....	177
Character Bitmap Origin Offset, Define.....	177
Character Rotation or Bar Code Ratio, Define .....	178

Code 39 Prefix Character, Define .....	181
Command Tables, Load .....	182
Current Edit Session, Save .....	182
Data Source for Format in a Page, Define.....	183
Field, Delete .....	183
Field Data, Define Source.....	184
Field Direction, Define.....	186
Field Origin, Define .....	186
Font Character Width, Define.....	187
Font Type, Select.....	189
Format, Create or Edit.....	191
Format Direction in a Page, Define .....	192
Format, Erase.....	193
Format Offset Within a Page, Define.....	193
Format Page Position, Define Data Source .....	193
Format Position From Page, Delete .....	194
Format Position in a Page, Assign .....	194
Graphic, Select .....	195
Graphic or UDC, Define.....	195
Height Magnification of Bar, Box, or UDC, Define .....	196
Human-Readable Field, Create or Edit .....	198
Intercharacter Space for UDF, Define.....	199
Interpretive Field, Edit.....	200
Interpretive Field, Enable or Disable.....	201
Length of Line or Box Field, Define .....	201
Line Field, Create or Edit .....	202
Outline Font, Clear or Create.....	202
Outline Font, Download .....	204
Page, Create or Edit.....	205
Page, Delete.....	206
Pitch Size, Set .....	206
Point Size, Set.....	207
Print Line Dot Count Limit, Set.....	208
Program Mode, Exit .....	208
RFID Tag Field Setup .....	208
RFID Tag Protect.....	213
RFID Tag Write Field, Create or Edit .....	213
User-Defined Character, Clear or Create .....	214
User-Defined Character Field, Create or Edit .....	214
User-Defined Font Character, Create .....	215
Width of Line, Box, Bar, or Character, Define.....	216
Test and Service Commands.....	218
12 Volt Supply Value, Transmit .....	218
Ambient Temperature, Transmit .....	218
Command Terminator .....	218
Dark Adjust .....	218
Factory Defaults, Reset .....	219
Formats, Print .....	219
Hardware Configuration Label, Print .....	219
Label Path Open Sensor Value, Transmit .....	219
Label Taken Sensor Value, Transmit .....	219
Pages, Print.....	220

	Pitch Label, Print.....	220
	Print Quality Label, Print.....	220
	Printhead Resistance Test, Begin .....	220
	Printhead Resistance Values, Transmit.....	220
	Printhead Temperature Sensor Value, Transmit .....	220
	Printhead Volt Supply Value, Transmit.....	220
	Reflective Sensor Value, Transmit.....	221
	Software Configuration Label, Print .....	221
	Test and Service Mode, Exit .....	221
	Transmissive Sensor Value, Transmit.....	221
	User-Defined Characters (UDC) and Graphics, Print.....	221
	User-Defined Fonts, Print .....	221
<b>A</b>	<b>Full ASCII Table.....</b>	<b>223</b>
	Full ASCII Table .....	224
	Full ASCII Control Characters Table.....	226
<b>B</b>	<b>Character Sets .....</b>	<b>227</b>
	International Character Sets.....	228
	Advanced Character Table.....	228
	8636/46 Character Table.....	228
	IBM Translation Character Table.....	229
	Code Page 850 Character Table.....	230
	Extended Character Sets .....	231
<b>C</b>	<b>Creating User-Defined Bitmap Graphics and Fonts.....</b>	<b>237</b>
	Creating User-Defined Bitmap Graphics .....	238
	Creating One Bit Per Byte User-Defined Graphics .....	238
	Creating Six Bits Per Byte User-Defined Graphics .....	242
	Creating User-Defined Bitmap Fonts.....	245
	Creating One Bit Per Byte User-Defined Fonts .....	245
	Creating Six Bits Per Byte User-Defined Fonts .....	246
<b>D</b>	<b>User-Defined Interface Tables.....</b>	<b>249</b>
	Print Commands (t = 0) .....	250
	Escape Print Commands (t = 1).....	251
	Shift Print Commands (t = 2).....	252
	Status Responses and Auto-Transmit Commands (t = 3) .....	253

Protocol Commands (t = 4) .....	254
Communications Protocol Characters .....	255

## **E** Using Direct Graphics Mode .....

What Is Direct Graphics Mode? .....	258
What Is Run-Length Encoding? .....	258
How Do I Send a Direct Graphic to the Printer? .....	260
Direct Graphics Mode, Enter .....	260
Change Origin .....	261
End of Bitmap .....	261
End of Line .....	261
Raw Bitmap Data Follows .....	262
Repeat Last Line .....	262
Transition Black .....	262
Transition White .....	262
Using Direct Graphics Commands .....	263

## **I** Index .....

## Before You Begin

This section provides you with safety information, technical support information, and sources for additional product information.

### Safety Information

Your safety is extremely important. Read and follow all cautions in this document. Equipment and data can be damaged if you do not follow the safety cautions.

The next table explains how to identify and understand cautions and notes that are in this document.



**A caution alerts you to an operating procedure, practice, condition, or statement that must be strictly observed to prevent equipment damage or destruction, or corruption or loss of data.**

**Attention: Une précaution vous avertit d'une procédure de fonctionnement, d'une méthode, d'un état ou d'un rapport qui doit être strictement respecté pour empêcher l'endommagement ou la destruction de l'équipement, ou l'altération ou la perte de données.**



**Note:** Notes either provide extra information about a topic or contain special instructions for handling a particular condition or set of circumstances.

## Global Services and Support

### Warranty Information

To understand the warranty for your Intermec product, visit the Intermec web site at [www.intermec.com](http://www.intermec.com) and click **Service & Support**. The Intermec Global Sales & Service page appears. From the **Service & Support** menu, move your pointer over **Support**, and then click **Warranty**.

Disclaimer of warranties: The sample code included in this document is presented for reference only. The code does not necessarily represent complete, tested programs. The code is provided “as is with all faults.” All warranties are expressly disclaimed, including the implied warranties of merchantability and fitness for a particular purpose.

## **Web Support**

Visit the Intermec web site at [www.intermec.com](http://www.intermec.com) to download our current documents (in PDF). To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

Visit the Intermec technical knowledge base (Knowledge Central) at [intermec.custhelp.com](http://intermec.custhelp.com) to review technical information or to request technical support for your Intermec product.

## **Telephone Support**

These services are available from Intermec Technologies Corporation.

<b>Service</b>	<b>Description</b>	<b>In the U.S.A. and Canada call 1-800-755-5505 and choose this option</b>
Factory Repair and On-site Repair	Request a return authorization number for authorized service center repair, or request an on-site repair technician.	1
Technical Support	Get technical support on your Intermec product.	2
Service Contract Status	Inquire about an existing contract, renew a contract, or ask invoicing questions.	3
Schedule Site Surveys or Installations	Schedule a site survey, or request a product or system installation.	4
Ordering Products	Talk to sales administration, place an order, or check the status of your order.	5

Outside the U.S.A. and Canada, contact your local Intermec representative. To search for your local representative, from the Intermec web site, click **Contact**.

## **Who Should Read This Document?**

The document explains how to use the Intermec Printer Language (IPL) and provides a chapter on the IPL commands.

Before you use IPL, you should be familiar with your network, general networking terms, such as IP address, and your bar code label printers.

## **Related Documents**

The Intermec web site contains Intermec documents (in PDF) that you can download for free.

### **To download documents**

- 1** Visit the Intermec web site at [www.intermec.com](http://www.intermec.com).
- 2** Click **Service & Support > Manuals**.
- 3** In the **Select a Product** field, choose the product whose documentation you want to download.

To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.







# **1 Introduction to IPL Commands**

This chapter describes Intermec's approach to printing labels and introduces the Intermec Printer Language (IPL) command set. The chapter also explains how to switch between Print and Program modes, how to send IPL files to a printer, and how to use ASCII control characters in IPL commands. The chapter concludes with a roadmap to the rest of the manual.

In this manual, "printer" can refer to the 3240, 3400, 3440, 3600, 4100, 4400, 4420, 4440, 4630, 4830, 7421, PC41, EasyCoder F4, EasyCoder PF2i, EasyCoder PF4i, EasyCoder PM4i, EasyCoder PX4i, or EasyCoder PX6i, bar code printer.

## What Is IPL?

Intermec Printer Language (IPL) is one of the programming languages that has been developed for use with Intermec printers. IPL is an easy-to-use programming language that lets you:

- design formats (templates) for bar code labels (media).
- download bar code label formats to the printer.
- modify a bar code label that is stored in the printer.
- download data to fill in a bar code label and RFID tag information and print the label.
- enable or disable printer features and options.
- query the printer for hardware diagnostic data and status of print jobs.
- abort print jobs and reset the printer.

## What Are IPL Commands?

There are five types of IPL commands (Print, Program, Test and Service, Configuration, and Immediate) and these types are related to the printer's three operating modes (Print, Program, and Test and Service). That is, in order to execute an IPL command, the printer must be in the operating mode that corresponds to the IPL command's type.

### *IPL Command Types and Descriptions*

<b>IPL Command Type</b>	<b>Printer Operating Mode</b>	<b>Uses for This Type of IPL Command</b>
Print	Print mode	Download data to the printer and print bar code labels.  (RFID) Pass data to formats and print labels.
Program	Program mode	Design label formats.  (RFID) Handle interaction with the chip in the RFID tag.
Test and Service	Test and Service mode	Query the printer for hardware diagnostic information.
Configuration	Print mode	Enable or disable printer features and options.  (RFID) Handles how the RFID tag interacts with the printer.
Immediate	Any operating mode	Query the printer on the status of print jobs, abort print jobs, and reset the printer.



**Note:** The printer executes Immediate commands as soon as it receives them, even if there are other IPL commands waiting to be executed.

The printer does not execute a command that does not match the current operating mode. For example, if you send a Program command while the printer is in Print mode, the printer ignores the Program command. See “Switching Between Print Mode and Program Mode” on page 8, or refer to your printer user’s manual for help changing the mode of your printer.

## What’s New for IPL v2.70.0?

With this revision of the programmer’s reference manual, the following changes were added to support IPL v2.70.0:

- RFID Tag Field Setup command now supports EPCglobal Gen 2 tags. Other clarifications and corrections have been made.
- RFID Tag Write Field now supports the RFID Tag Protect command.
- Support for extended character sets c25, c26, and c28.

## Programming for Intermec Printers

When you program in IPL, you must understand the approach that Intermec uses to print bar code labels. It is a two-step process:

- 1 Design the format (or template) for the bar code label, and then send the format to the printer, where it is stored in memory.
- 2 Send another command to the printer that specifies the data for the fields of the format and prints the label.



**Note:** It is not always necessary to send the format and the data to the printer separately. You can send fixed data formats or even variable data formats that include the data in the same file.

If you skip Step 1 and do not specify a format, the printer assumes you want to use the default format, which is stored permanently in the printer. The printer will print the label using that format. The default format is called format 0.

You can store multiple formats on your printer. Many Intermec printers can store up to 19 formats, but some printers (such as the 3240 and 3440) can store up to 99. To learn how many formats your printer can store, see the “Format, Create or Edit” command on page 191.

## Learning the Structure of IPL Commands

This section describes general principles to follow when creating or downloading IPL commands.



**Note:** The syntax of each IPL command is described in detail in Chapter 7, “IPL Command Reference.”

- IPL commands are case sensitive. Type them as they appear in this manual. For example, if the command is an uppercase “A,” do not enter it as a lowercase “a.”
- Each command string that you download to a printer must begin with the start of text character <STX> and end with the end of text character <ETX>.



**Note:** When the printer is in XON/XOFF mode, you can send data and print multiple labels without using the <ETX> character.

- The <STX> and <ETX> commands mark the beginning and end of a message. The semicolon (;) is the command terminator. All commands in Program mode or Test and Service mode must end with this terminator except the last command in a string. Commands in Print mode do not require the semicolon command terminator.

For example, a simple IPL command string looks like this:

```
<STX>E2 ; F2<ETX>
```

## Using Control Characters in IPL Command Strings

Formats that you design with IPL commands require you to enter ASCII control characters in your command strings. To create ASCII control characters, either:

- enter a control code

or

- type the printable command characters.

Many word processing programs have the ability to represent ASCII control characters such as <ETX> by entering a control code. For example, to enter the hexadecimal equivalent of the ASCII character <ETX> on your computer, you would type the control code 03. For help finding the hexadecimal equivalent of a control character, consult the full ASCII table in Appendix A.

If it is difficult for you to edit or transmit IPL command files that contain ASCII control characters, you can use printable control characters instead.

A printable control character (or “readable character”) is a text string, enclosed in angle brackets, that represents an ASCII control character. For example, instead of entering a control code for the ASCII start of text character, you can type these five readable characters:

<STX>

To determine the readable character for each ASCII control character, see the full ASCII table in Appendix A. Simply enclose the text string in the ASCII column in angle brackets to create the readable character.

The printer automatically detects whether you are using ASCII control characters or readable characters by the start of text (<STX>) character, which marks the beginning of an IPL command message. All characters in a message must be in the same form (ASCII control character or readable characters) as the start of text character. For example, if you begin a message with the readable characters <STX>, the printer executes only the readable characters in the message and throws away any ASCII control characters in the message.

Using readable characters may consume more space and time, but it has the distinct advantage of displaying everything on the screen in readable characters.

### **Example of Using Control Codes**

`^B^Og1,567^C`

where:

`^B` is the control code representation of hex 02 (the <STX> character).

`^O` is the control code representation of hex 0F (the <SI> character).

`^C` is the control code representation of hex 03 (the <ETX> character).

### **Example of Using Printable Control Characters**

`<STX><SI>g1,567<ETX>`

## **Sending IPL Commands to the Printer**

Before you can send IPL commands to the printer, you need to:

- connect the printer to a PC.
- create an ASCII text file of IPL commands.

### **To connect the printer to a PC**

- 1 Connect the printer to the serial port on your PC using the correct cable. For help selecting a cable, see your user’s manual.
- 2 Configure the PC for a serial connection to the printer by typing this command at the DOS prompt and pressing **Enter**. This example assumes that your serial connection is COM1.

```
MODE COM1 96,E,7,1,N
```

These serial connection characteristics are the default for the printer.

- 3 Make sure the printer is configured for the hardware flow control (XON/XOFF) communications protocol. This protocol is the default. For help, see your printer user's manual.



**Note:** If you receive the “write fault error” error message, it indicates that either you are sending the data to the wrong COM port or your cable does not support hardware flow control. Try sending the data via Windows using the information below.

### To create an ASCII text file of IPL commands

- 1 Create a set of IPL commands. For help, see Chapter 2, “Downloading Fonts to the Printer,” or Chapter 3, “Designing Bar Code Labels.”
- 2 Type the commands into the text file using any text editor or word processor and save the file as an ASCII text file. Your ASCII text file can contain an entire label format or just a single configuration command that you use often.

For example, if you need to set the media sensitivity number often, you may want to create a text file that contains the IPL command line:

```
<STX><SI>g1,567<ETX>.
```

You can send IPL commands to the printer in many ways. This section describes two simple methods:

- Downloading commands from Windows
- Sending a string of commands through an application

## Downloading Commands From Windows

After you create a text file of IPL commands, you can use Windows HyperTerminal to send the file to the printer.

### To download commands using HyperTerminal

- 1 Start the HyperTerminal application.
- 2 In the Connection Description dialog box, enter a name for your new connection and click **OK**.
- 3 In the Phone number dialog box, select a serial port from the **Connect using** list box and click **OK**.
- 4 In the COM Properties dialog box, set the port settings to your printer communication settings. If you have not changed the printer default settings, enter the following information and click **OK**:

Bits per second	9600
Data bits	7
Parity	even
Stop bit	1
Flow control	XON/XOFF

**5** From the Main menu bar, select **Transfer**.

**6** From the Transfer list box, select **Send Text File**.

**7** In the Send Text File dialog box, locate your .txt file and click **Open**.

HyperTerminal sends the .txt file to your printer. Your command text file will either change a configuration setting in the printer or print your label format.

## Sending a String of Commands Through an Application

You can send a string of IPL commands through a PC communications application, a terminal emulation application, or a host terminal. See the application's documentation for instructions.

The disadvantage of sending a string of commands is that you must retype the entire command string if you make an error while entering the commands. It is easier to retype a command if you keep the command strings short; therefore, you should design your label formats as combinations of several short command strings rather than one very long string.

To illustrate this idea, consider the next examples, which show two ways to send a bar code label format to the printer. Example 1 uses several short command strings to define the format. Example 2 combines all of the commands into a single string.

### Example 1

```
<STX><ESC>P<ETX>
<STX>E3;F3;<ETX>
<STX>H0;o81,100;f0;c0;d0,16;h1;w1;<ETX>
<STX>H1;o81,120;f0;c0;d0,16;h1;w1;<ETX>
<STX>H2;o81,150;f0;c2;d0,14;h1;w1;<ETX>
<STX>H3;o81,190;f0;c2;d0,16;h1;w1;<ETX>
<STX>B4;o81,0;f0;c0,1;h50;w1;d0,11;i0;p@;<ETX>
<STX>R<ETX>
```

### Example 2

```
<STX><ESC>P;E3;F3;H0;o81,100;f0;c0;d0,16;h1;w1;H1;o81,120;
f0;c0;d0,16;h1;w1;H2;o81,150;f0;c2;d0,14;h1;w1;H3;o81,190;
f0;c2;d0,16;h1;w1;B4;o81,0;f0;c0,1;h50;w1;d0,11;i0;p@;
R<ETX>
```

In Example 1, each line begins with the start of text character <STX> and finishes with the end of text character <ETX>. If you make a mistake, you need to retype only the line with the mistake. In Example 2, if you made a mistake anywhere in the string, you must retype the entire format.

Example 1 takes slightly longer to download, but is much easier to read and debug.

## Switching Between Print Mode and Program Mode

Print mode and Program mode are two different operating modes of the printer. Before you download information to the printer, make sure that you are in the correct mode:

- Use Program mode to define formats, pages, fonts, and characters.
- Use Print mode to print labels, to download data to the printer, to download configuration commands to the printer, or to upload information from an RFID tag.

### To enter Program mode on any printer

- Type this command:

<STX><ESC>P<ETX>

Send this command every time that you download formats, even if you think the printer is already in Program mode. If the printer is already in Program mode, it ignores this command.

### To enter Print mode on any printer

- Type this command:

<STX>R<ETX>

Send this command before each set of data or as your last format command. If the printer is already in Print mode, it ignores this command.



**Note:** The R command may be treated as data if the data to the printer does not include a <CAN> or field pointer to clear the fields.

## Working With RFID Tags

If a printer has an RFID module installed, the RFID mode is automatically turned on. You need to configure the printer, declare a format that includes commands to write to the tag, and print the format to a label. The printer aligns the tag with the antenna, executes the RFID commands, repositions the label, prints the image buffer to the label, and then positions the next label for printing.



## How to Write Data to an RFID Tag

To write data to an RFID tag you need to do two things: specify an area in the tag's memory and define the data that will be written to the tag. To specify an area in the tag's memory, you define an RFID tag write field. This field specifies which segment is written to, the start position, length of data (in bytes) and the format of the data.

## How Data is Stored on an RFID Tag

Data written to the RFID tag is stored from the left starting with the byte that is defined as the start of field byte and then going the length of the defined field (in bytes).

### Writing Hex or ASCII Formats

If the tag format is hex or ASCII and the field source data string is shorter than the allocated number of bytes, the data string's least significant bytes (from the right) are padded with zeroes until they fill the length of the field.

If the field source data string is longer than the allocated number of bytes, the error <EOT> is sent and nothing is written to the tag. If auto-transmit level 3 is enabled, an <EOT> status response is returned to the host.

### Writing Numerical Formats

If the tag format is numerical (NUM), the data is stored as a numerical value. In this tag format, if the field source data string is shorter than the allocated number of bytes, the data string's most significant bytes (from the left) are padded with zeroes until they fill the length of the field.



**Note:** The number of bytes needed to represent a numerical value is never greater than the number of bytes needed to represent the number as a data string.

## What to Read Next

Now that you have been introduced to IPL commands, you can use this manual to learn how to perform these tasks:

For Help With This Task	See
To download any font to the printer	Chapter 2
To design and code the formats for bar code labels	Chapter 3
To diagnose and solve problems with IPL commands	Chapter 4
To learn how to use printer memory efficiently, how to increase throughput, and when to use Emulation mode	Chapter 5
To find a specific IPL command	Chapter 6
To look up the exact syntax and description of any IPL command	Chapter 7
To refer to the Full ASCII table	Appendix A
To see the character set tables	Appendix B
To create your own fonts and graphics	Appendix C
To refer to the user-defined interface tables	Appendix D
To download direct graphics	Appendix E



## **2 Downloading Fonts to the Printer**

This chapter explains how to download fonts to your Intermec printer. You can use PrintSet, IPL commands, or third-party software applications.

## What Types of Fonts Can I Download?

You can download these types of fonts to most Intermecc printers:

- Bitmap
- Outline (TrueType and Speedo)



**Note:** The 3400, 3400e, 3440, 4420, 4440, PF2i, PF4i, PM4i, F4, PX4i, and PX6i printers support the use of scaleable TrueType fonts. Bitmap fonts can be used on any Intermecc printer, including those TrueType fonts you have converted to bitmap using PrintSet. The PF2i, PF4i, PM4i, F4, PX4i, and PX6i do not support Speedo fonts.

In addition to the fonts permanently resident in your printer, you can download fonts in the form of user-defined bitmap or outline (scaleable) fonts. Use this section to learn about the differences between bitmap and outline fonts and how to choose the type of font you want to use.

Bitmap fonts commonly:

- print in one fixed size. (If you magnify the font, they print but are ragged.)
- print quickly.
- are memory intensive when defined as large characters.

Outline fonts commonly:

- vary in size. You can print any size character up to 10.16 cm (4 in).
- print smooth characters.
- image slower than bitmap fonts.

Your printer supports two types of outline fonts: TrueType (support available only on the 3400, 3400e, 3440, 4420, 4440, F4, PF2i, PF4i, PM4i, PX4i, and PX6i printers) and Speedo (not supported on the F4, PF2i, PF4i, PM4i, PX4i, or PX6i). TrueType fonts are the most popular outline fonts, and several are available through Windows on your PC. For help locating Speedo fonts, contact Intermecc Technical Support.

See the next table to decide which fonts best suit your needs.

**Font Selection Table**

Concern	Bitmap	TrueType	Speedo
image speed	fastest	medium	fast
availability	extensive	extensive with Windows	limited
storage space	varies	50 - 80K per font usually; Japanese, Chinese and Korean are considerably larger	20 - 30K per font
size	fixed	variable	variable

You can download fonts to the printer and store them in the non-volatile memory. Although the printer reserves 16 font ID numbers (3 to 6, and 8 to 19) for you to download fonts, memory constraints may limit the number of fonts you can store.

## Using PrintSet to Download Fonts

The easiest way to download fonts to the printer is with the PrintSet (v2.0 or later) printer configuration application. This application is on the CD that shipped with your printer. You can also download the latest release of PrintSet from the Intermec web site at [www.intermec.com](http://www.intermec.com). You can use PrintSet to select fonts and directly download them to your printer.


Bitmap fonts can be memory intensive, so you may decide not to download the entire font to the printer. You can use PrintSet to define a subset of the font (only the numbers, for example). Then you can download the subset, saving storage space on the printer. The printer requires that bitmap fonts be in one of these formats: one bit per byte or six bits per byte. PrintSet automatically converts all bitmap fonts into the six bits per byte format.

PrintSet automatically converts scaleable outline fonts into nibblized data that you can download to the printer. PrintSet can also convert fixed outline fonts into bitmap fonts that you can download to the printer.

### To select a font with PrintSet

- 1 Start PrintSet.
- 2 Make sure that the communications settings are correct.
- 3 From the **Configuration menu**, select **Fonts** or on the toolbar, click the **Font Setup** button.

The Font Setup dialog box appears.

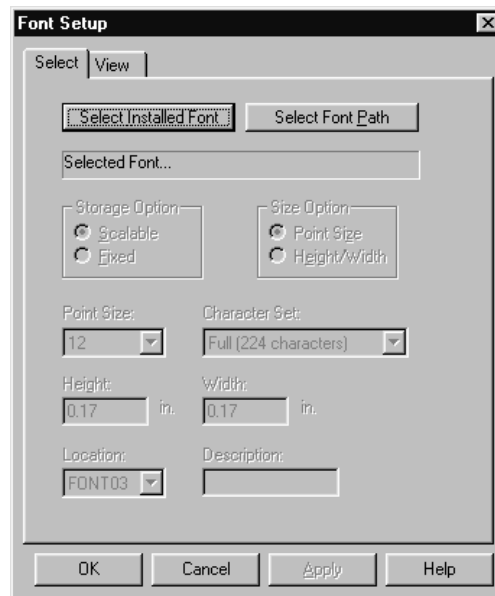

- 4 To select a font by font name, click the **Select Installed Font** button. From the list of installed fonts, select your TrueType font name.  
To select a font by pathname, click the **Select Font Path** button. Select a drive and a path. From the **File name** list box, select a TrueType font file (.ttf).
- 5 In the Storage Option box:
  - Click the **Scaleable option** button if you are downloading an outline font. (This option is disabled if your printer does not support TrueType.)
  - Click the **Fixed** option button if you are downloading a bitmap font.
- 6 (Bitmap fonts only) Select the size option, point size, and character set as needed.
- 7 In the **Location** list box, choose the font number you wish to assign to the font. Intermec printers identify each font by its font number.  
You may select additional fonts to add to local memory. Each font must have a unique location number.
- 8 Click **Apply**.
- 9 Click the **View** tab. The **Fonts to send** box displays the selected fonts and the designated printer locations.
- 10 Click **OK** to exit the Font Setup dialog box.

Now that you have defined your font, you need to either install it in your printer or save it to a file. Follow one of these procedures to complete the process.

**To install fonts in your printer**

- From the **DataXfer** menu, select **Send to printer** or on the toolbar, click the **Send Config to Printer** button.



**Note:** If you download an incompatible TrueType font, the font type will be 999. If you select the incompatible font for a text field, the printer will print the default font 0.

**To save a font to a file and copy it to your printer**

- 1 From the **File** menu, select **Save as** or on the toolbar, click the **Save As** button. The Save As dialog box appears.
- 2 In the Save As dialog box, enter a path and filename. The file must use a .pcf extension. For example, you could name your file newfont.pcf.
- 3 Click the **Save** button.

When you save the font to file, the IPL commands necessary to install the font are automatically written to the file.

- 4 Use Windows HyperTerminal to download the .pcf file to your printer.

## Installing International Character Sets Using GLOBE

Intermec's goal is to help you easily localize your printer with the font set you choose. To support this goal, Intermec printers now use GLOBE (Global Languages On Bar Code Equipment) technology to download and access single- and double-byte international character sets.

### What Types of Fonts Does GLOBE Support?

Use GLOBE technology to install international character sets on your printer. GLOBE technology is part of PrintSet, the Windows-based configuration program that came on the CD with your printer. You can use PrintSet to install these types of fonts:

- TrueType fonts
- Bitmap fonts generated from TrueType fonts using PrintSet

TrueType fonts are scaleable fonts that retain smooth contours at any size. Since TrueType fonts may be very complex, they tend to image slower than bitmap fonts. You cannot subset a TrueType font. You must download the entire font to the printer.



**Note:** When using TrueType fonts, your printer must be configured to operate in 8 bit mode. Intermec also recommends the following printer configuration: highest supported bits per second (Baud rate), 8 data bits, no parity, 1 stop bit, XON/XOFF flow control.

Your TrueType fonts must be compatible with Microsoft Windows. To generate bitmap fonts from TrueType fonts for a particular language, you must run PrintSet under that language version of Microsoft Windows. You can run PrintSet Version 2.0 and later under Windows 95/98/NT 4.0/2000/XP.

PrintSet 2.1 or later is required to install a Chinese, Japanese, or Korean TrueType font. You must locate and install the necessary code page tables to use with these language fonts. For help, see “Installing Code Page Tables” later in this chapter. The EasyCoder F4 does not support bitmap or TrueType Chinese, Japanese, or Korean fonts.

## Do You Need to Purchase Additional RAM?

If you wish to install a TrueType font in your printer, you must have enough memory available to contain the entire font file. The size of the TrueType font file, in bytes, is the minimum amount of memory you must have available in your printer. Bitmap fonts generated from TrueType files will vary in size, depending on the point size and number of characters you create. The larger the point size you choose, the larger the resulting file size.

Chinese, Japanese, and Korean languages contain thousands of characters. If you wish to use these languages, you will need to purchase expanded flash memory to store them in your printer. The amount of memory depends on the size and number of fonts you wish to install.

Use the next table to determine the approximate size of some Asian TrueType fonts. The approximate size is shown in dots per inch (dpi).

### Approximate Sizes – Asian TrueType Fonts

TrueType Font	Point Size	Approximate Size (400 dpi)	Approximate Size (200 dpi)
Korean KSC-5601	12 pt	1.6MB	0.5MB
	16 pt	2.7MB	0.8MB
	24 pt	5.8MB	1.5MB
Traditional Chinese Big 5	12 pt	3.1MB	0.9MB
	16 pt	5.25MB	1.6MB
Simplified Chinese GB	12 pt	3.5MB	1MB
	16 pt	6.2MB	1.8MB
Japanese Shift-JIS	12 pt	3.9MB	1.1MB
	16 pt	6.75MB	2MB



Some TrueType fonts require large amounts of dynamic RAM to operate. If you receive an error code 37 when printing a label using TrueType fonts, you may need to purchase expanded dynamic RAM.

## Licensing Your Fonts

Although Intermec provides you with a tool to download international characters sets, you must license the fonts that you purchase and install in your printers. Contact your font vendor for licensing information.

These companies resell TrueType fonts that work with Intermec printers:

### **Precision Type**

47 Mall Drive  
Commack, NY 11725  
Tel: 1-800-248-3668  
Fax: 516-543-5721  
e-mail: [info@precisiontype.com](mailto:info@precisiontype.com)

### **Galapagos Design Group**

256 Great Road  
Suite 15  
Littleton, MA 01360-1916  
Tel: 978-952-6200  
Fax: 978-952-6260  
e-mail: [info@galapagosdesign.com](mailto:info@galapagosdesign.com)

These companies also provide TrueType fonts compatible with Intermec printers:

### **Dynalab Inc.**

2055 Gateway Place  
Suite 400  
San Jose, CA 95110  
Tel: 408-490-4224  
Fax: 408-490-2233  
[www.dynalab.com](http://www.dynalab.com)

### **Microsoft Corporation**

One Microsoft Way  
Redmond, WA 98052-6399  
Tel: 425-882-8080  
[www.microsoft.com](http://www.microsoft.com)



**Note:** Dynalab Inc. provides Chinese, Japanese, and Korean fonts. You can also purchase fonts from their offices in Taiwan and Hong Kong. See the Dynalab web page for the address of these offices.

## Creating Bitmap Fonts From TrueType Fonts

To create bitmap fonts from TrueType fonts, you must run PrintSet under the correct language version of Windows. For example, to create a Traditional Chinese font, you must run PrintSet under Traditional Chinese Microsoft Windows. In addition, you must install the font using Microsoft Windows in order for PrintSet to correctly convert it to a bitmap font.


The advantage of bitmap fonts is that they may require less RAM and the printer can image them faster. When you download bitmap characters to the printer, you must select the size of the characters. Make sure that you select the size you want to use in your formats. If you magnify the character size in the printer, the edges of the characters will be jagged.



**Note:** You can create Traditional or Simplified Chinese bitmap fonts up to a size of 16 points at 400 dpi or 32 points at 200 dpi. The EasyCoder F4, PF2i, PF4i, PM4i, PX4i, and PX6i do not support bitmapped Chinese, Japanese, or Korean fonts.

### To create bitmap fonts from TrueType fonts

- 1 Start PrintSet.
- 2 Make sure that the communications settings are correct.
- 3 From the **Configuration** menu, select **Fonts** or on the toolbar, click the **Font Setup** button. The Font Setup dialog box appears.

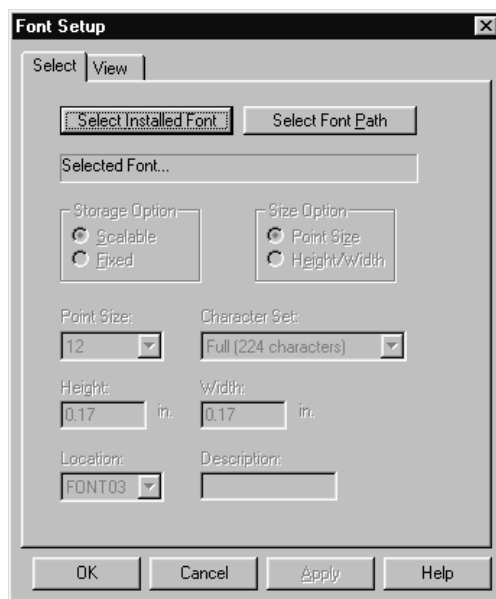

- 4 To select a font by font name, click **Select Installed Font**. Select the TrueType font name from the list of installed fonts.  
To select a font by pathname, click **Select Font Path**. Select a drive and a path. From the **File name** list box, select the TrueType font file (.ttf).
- 5 In the **Storage Option** box, click the **Fixed** option button.
- 6 In the **Size Option** box, click either the **Point Size** option button or the **Height/Width** option button.
- 7 If you select Point Size, in the **Point Size** list box, select the size of the bitmap characters. One point equals 1/72 of an inch.  
If you select Height/Width, in the **Height** box and **Width** box enter the height and width (in inches or centimeters) of the bitmap characters.



**Note:** If you enter 0 for the width, you preserve the aspect ratio of the font.

**8** In the **Character Set** list box, you may restrict the number of bitmap characters that you want created. Restricting the number of characters will create a smaller font that requires less memory and takes less time to install.

If you are creating a Chinese, Japanese, or Korean font, you must select the language you are using. You can choose from these selections:

- Japanese (Shift JIS)
- Traditional Chinese (BIG 5)
- Simplified Chinese (GB 2312)
- Korean (KSC 5601)

**9** In the **Location** list box, choose the font number you wish to assign to the font. Intermec printers identify fonts by their font number.

**10** Click the **View** tab. The selected font and the designated printer location appear in the fonts to send box.

You may select additional fonts to add to local memory. Each font must have a unique location number.

## Selecting the Printer Language

When you install a TrueType font, you must select the correct printer language. To choose the correct language, use the IPL command, Printer Language, Select. If the language setting you have chosen does not work, use the default language setting.

## Installing Code Page Tables

If you install a Japanese, Chinese, or Korean TrueType font, you must also install the code page tables. See the “Printer Language, Select” command on page 139 for a list of code pages. You can download code pages from Intermec’s web site at [www.intermec.com](http://www.intermec.com), and then from the **Service & Support** menu, choose **Software Downloads**. The files were compressed using Microsoft WinZip application and have the file extension .ZIP. After decompressing the file, install your code page as described in the procedure below.

### To install the code page tables in your printer

**1** Copy the tables you wish to use to your PC:

- SJIS.PCF - Japanese (Shift JIS)
- BIG5.PCF - Traditional Chinese (Big 5)
- GB.PCF - Simplified Chinese (GB 2312)
- KSC.PCF - Korean (KSC5601)

- 2 Use Windows HyperTerminal to configure the PC to match the printer settings. When using double-byte fonts, the recommended printer configuration is COM 1, 19,200 bits per second, no parity, 8 data bits, 1 stop bit, and XON\XOFF flow control.
  - a Start HyperTerminal. (HyperTerminal is often located inside the Accessories folder.) The Connection Description screen appears.
  - b In the **Name** field, enter a name for this connection (such as Printer) and select an icon (optional). Click **OK**. The Connect To screen appears.
  - c In the Connect Using list box, select the appropriate port. Click **OK**. The port properties screen appears.
  - d Enter data, matching the PC's settings to the printer settings. Click **OK**. The HyperTerminal main menu appears.
  - e From the **Transfer** menu, select **Send File**. The Send File screen appears.
  - f In the **Name** field, locate your file, and then click **Send**.

## Using IPL Commands to Download Fonts

Although the easiest way to download fonts is with PrintSet, you can also use the IPL command set to create and download user-defined bitmap and outline fonts to your Intermec printer.

### Downloading Bitmap Fonts

To learn more about bitmap font formats, see “Creating User-Defined Bitmap Fonts” on page 245.

### Downloading Outline Fonts

If you need to download an outline font but you cannot use PrintSet, you can:

- create a program to convert the outline font to a format you can download to the printer.
- manually convert the outline font to a format you can download to the printer.

When you convert an outline font to a format you can download to the printer, you must change the font character data into nibblized data that the printer can interpret. When you nibblize data, you divide each byte of data into two bytes.

For example:

byte 0xAB becomes two bytes: 0x41, 0x42 or text string “AB”

**To manually download an outline font to your printer****1** Nibblize the font data.

Divide the nibblized data into separate lines preceded by the `j` command. (See the “Outline Font, Download” command on page 204.) Remember to wrap the entire line in `<STX>` and `<ETX>`. You need short lines for limited message length protocols and to make modifying easier by using an editor or word processing program.

**2** Include IPL commands to instruct the printer what to do with the font data. For help, see the following example and Chapter 7, “IPL Command Reference.”**3** Send the commands to the printer using one of the methods described in Chapter 1.

This is an example of a nibblized outline font file that includes IPL commands to send it directly to a printer.

***Nibblized Outline Font File Example***

Command	Definition
<code>&lt;STX&gt;R&lt;ESC&gt;C&lt;ESC&gt;P&lt;ETX&gt;</code>	Enter Program mode.
<code>&lt;STX&gt;J03,Times,1;&lt;ETX&gt;</code>	Create TrueType font 3 and give it the name Times.
<code>&lt;STX&gt;j0001000000110100000400604c545348efe24cd00000;&lt;ETX&gt;</code>	TrueType data string.
<code>&lt;STX&gt;j00ebf468646d78d956f5ab0001135800001508686561;&lt;ETX&gt;</code>	TrueType data string.
<code>&lt;STX&gt;j0d2000012f04000006a3706f7374d43c8176000135a8;&lt;ETX&gt;</code>	TrueType data string.
<code>:</code> <code>:</code> <code>:</code>	Several TrueType data strings not shown due to space constraints.
<code>&lt;STX&gt;j00b3008200b0008725ba0000;&lt;ETX&gt;</code>	Last TrueType data string.
<code>&lt;STX&gt;R&lt;ETX&gt;</code>	Exit Program mode.

**Using Third-Party Software Applications to Download Fonts**

Use your third-party software to download fonts into a user-defined font format that the printer can interpret. Refer to your third-party documentation for more information.





## **3 Designing Bar Code Labels**

This chapter explains how to design and print your own labels using IPL commands. It covers the basic elements of label design and provides examples to guide you in designing your own labels.

## Introduction to Formats

To print a label on an Intermec printer, you must create a label format, send that format to the printer, send data to fill in the fields in the format, and then print the label.

A format is a template that defines how the information prints on a label. For example, if you want to print a number on a label, the format must indicate the location of the number, its font and size, and whether the number has a vertical or horizontal orientation.

You can define a format either by downloading IPL commands or by using a label generation program. The printer stores the format in its RAM or flash module. You can use the format at any time. You can call it up to print labels, or call it up in Program mode to modify one or more of its fields on the host.

If you intend to regularly reload a format, you can use the temporary format parameter (\*) with some printers. The use of format \* results in an optimal use of flash-based storage memory because the printer stores it in RAM and deletes it when the printer power is turned off.

## Tutorial for Designing and Creating a Label Format

Label formats are composed of several different fields that determine where and how different types of data appear in the label design. The fields on a label may differ in size, location, orientation, and data type. You must define information that you plan to print on the label as a field in the label format. Once you define the fields, you can pass data into the fields and print them.

This tutorial assumes that you are using IPL commands.

### To design a basic label format

**1** Using a label from your roll of media, sketch an example of a format that you want to create. Your format can include any or all of these fields:

- Human-readable
- Bar code
- Line
- Box
- User-defined characters (UDCs) or graphics

In this example, you will design a simple label that includes a human-readable field, a line field, and a bar code field.




- 2 Determine the placement of each field from the label origin. The label origin (oØ,Ø) is the top left corner of the label.
  - To determine the horizontal or X origin of each field, measure the distance from the left side of the label to the upper left corner of the field.
  - To determine the vertical or Y origin of each field, measure the distance from the top of the label to the upper left corner of the field.



**Note:** On the 4400, 7421, and PC41 printers, be sure to use the label width command to set the actual width of your labels; otherwise, the Y origins will be incorrect.

When you combine the two numbers, they form the field origin oX,Y.

In the illustration below, the horizontal or X origin of the human-readable field measures 12.7 mm (0.5 in) from the left side of the label and the vertical or Y origin measures 6.35 mm (0.25 in) from the top of the label.

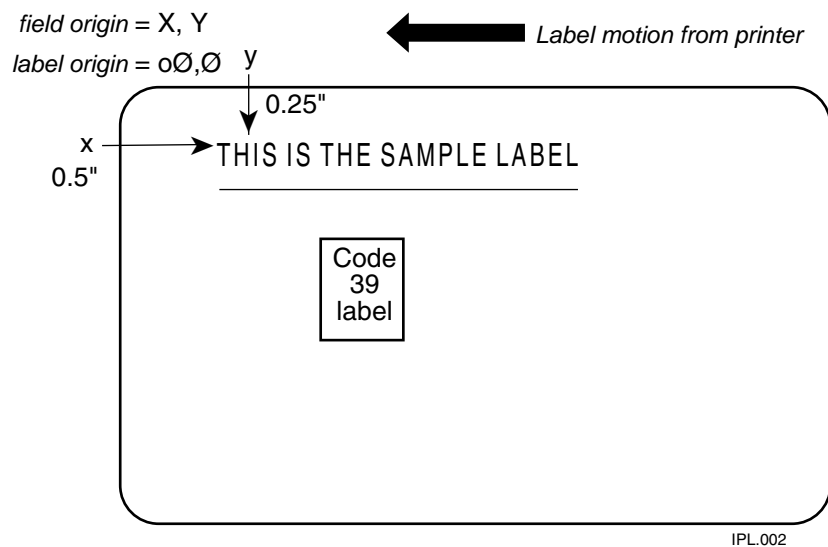

- 3 Convert the measurements for the human-readable field from inches to dots. Use this equation:

$$25.4 \text{ mm (1 in)} = 203 \text{ dots}$$

$$1 \text{ mm} = 16 \text{ dots}$$

In this example, the human-readable field origin in dots is:

$$12.7 \text{ mm (0.5 in)} \times 203 \text{ dots} = 102 \text{ dots (X dimension)}$$

$$6.35 \text{ mm (0.25 in)} \times 203 \text{ dots} = 51 \text{ dots (Y dimension)}$$

The origin for the human-readable field is o102,51 (oX,Y).



**Note:** If you have a 300 dpi or 406 dpi printer, substitute your dpi where you see 203 dots in these equations.

- 4 Convert the measurements for the line field and the bar code field to complete this example.

### To create or program the label format

- 1 Choose a bar code symbology and a human-readable font that suit your needs.

For this example, you are going to use the proportional outline font and the Code 39 symbology. See Chapter 7, “IPL Command Reference,” for information on the different symbologies and fonts available to you.

- 2 Define the parameters for each type of field in the format.

Field Type in Label	Represented By
Human-readable	H
Bar code	B
Line	L
Box	W
User-defined characters (UDCs) or graphics	U

See “Commands Listed by Task” in Chapter 6 for a list of the parameters you can define for each type of field. For example, you need to define the following parameters for a human-readable field:

Parameter	Value for this Example
Field type	H0
Field origin	o102, 51
Font	c25 (outline font)
Field direction	f0 (horizontal)
Height	h20 (multiplied 20 times)
Width	w20 (multiplied 20 times)
Field source and number of characters	d0, 30

- 3 Create command strings for each type of field. You must bracket your field information between the start of text character (<STX>) and the end of text character (<ETX>).

When you combine the parameters in the previous table into a command string, it should look like this:

```
<STX>H0;o102,51;c25;f0;h20;w20;d0,30;<ETX>
```

- 4 Combine the command strings you defined into one file and add the following commands bracketed by <STX> and <ETX>:

Command	Description
<ESC>C	Selects Advanced mode
<ESC>P	Enters Program mode
E4 ; F4 ;	Erases what was in format 4 and creates a new format 4
R	Saves the format and exits to Print mode
<ESC>E4	Accesses format 4
<ETB>	Prints the format

- 5 Create the data lines for the human-readable field and the bar code field. Do this by completing the following tasks:
- Type the information that you want to appear in the human-readable field and the bar code field in two separate lines.
  - Separate the information with a <CR> at the end of the first text string.

The <CR> tells the printer to enter the text into different fields. The first line will be the text for the human-readable field and so on.

- Preface the data lines with the <CAN> command. It erases all data in the current format.

Your command strings should look like this:

Command String	Definition
<CAN>	Erases all data in current format
THIS IS THE SAMPLE LABEL<CR>	Text for the human-readable field
SAMPLE	Text for the bar code field

- Bracket the command strings between <STX> and <ETX>.
- 6 Combine all of the command strings into one format and it should look like the following example.




**Note:** The difference between the lowercase letter “l” and the numeral “1” is not very noticeable in the Courier font. Make sure that you enter the correct command.

**Sample Label Command Strings**

Command	Definition
<STX><ESC>C<ETX>	Select Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>E4;F4;<ETX>	Erase format 4, create format 4
<STX>H0;o102,51;f0;c25;h20;w20;d0,30;<ETX>	Edit/create human-readable field 0
<STX>L1;o102,102;f0;l575;w5;<ETX>	Edit/create line field 1
<STX>B2;o203,153;c0,0;h100;w2;i1;d0,10;<ETX>	Edit/create Code 39 bar code field 2 with interpretive field enabled
<STX>I2;h1;w1;c20;<ETX>	Create interpretive field to go with bar code field 2
<STX>R;<ETX>	Save format and exit to Print mode
<STX><ESC>E4<ETX>	Access format 4
<STX><CAN><ETX>	Erase all data
<STX>THIS IS THE SAMPLE LABEL<CR><ETX>	Data for human-readable field 0
<STX>SAMPLE<ETX>	Data for bar code field 2
<STX><ETB><ETX>	Print



**Note:** The line breaks in the preceding example are shown for formatting purposes only and do not necessarily represent carriage returns.

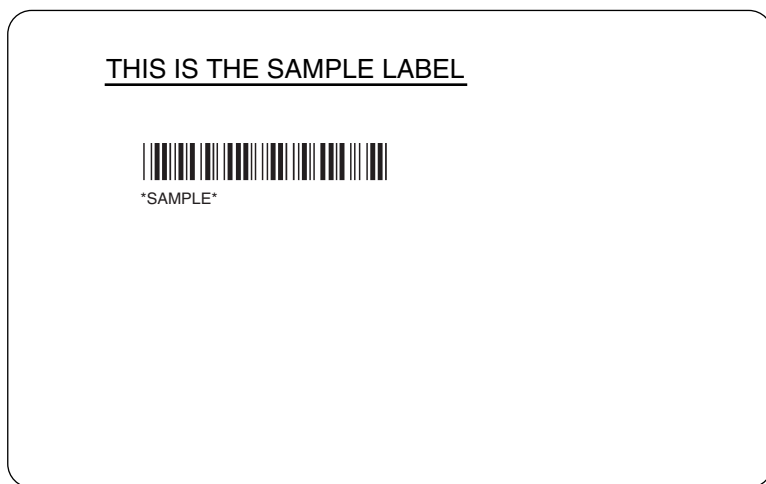

IPL004.eps

**Sample Label**

## Defining Label Design Fields

Define each type of field to hold a certain type of data. You can define:

- Bar code fields (with or without interpretive fields)
- Human-readable fields
- Graphic fields
- Line fields
- Box fields

You must define the data you plan to print on your label as a field in the label format. Each field type gives you options for interpreting your data. The fields that contain the most options are bar code fields and human-readable fields.

### Bar Code Fields

You can print bar codes in any of these symbologies:

- |               |                      |                |
|---------------|----------------------|----------------|
| • Codabar     | • Code 93            | • MaxiCode     |
| • Code 2 of 5 | • Code 128           | • MicroPDF 417 |
| • Code 11     | • Code One           | • QR Code      |
| • Code 16K    | • Data Matrix        | • PDF 417      |
| • Code 39     | • HIBC               | • POSTNET      |
| • Code 49     | • Interleaved 2 of 5 | • UPC/EAN      |

See Chapter 7, “IPL Command Reference,” for a complete list of commands to select the appropriate bar code symbology. “Commands Listed by Task” on page 75 lists the command options available for editing bar code fields.

### Human-Readable Fields

You can print human-readable fields in any one of the printer’s internal fonts or user-defined fonts. The printer contains several resident bitmap fonts in a range of sizes and styles.

You can change the size of the font character by using the width and height magnification or by using the pitch or point-size commands. The fonts themselves remain unchanged. The font character charts in Appendix B, “Character Sets,” illustrate the complete character set for each font.

The printer supports nine different international character sets for each command set mode. In Emulation mode, the international character substitution is compatible with Intermec 8636/8646 printers. In Advanced mode, the substitution complies with the ISO standards. The printer may also contain character sets for IBM translation and code pages.

The internal bitmap fonts of the printer include:

- Standard bitmap fonts measured in dots
- Bitmap fonts recognized by optical character recognition (OCR) programs
- Bitmap fonts measured in point sizes
- Outline fonts
- Bitmap monospaced fonts

## **Line and Box Fields**

Use the command set (see Chapter 7, “IPL Command Reference”) to define line or box fields on a label. You can use the commands to determine whether a box or line appears vertically or horizontally and to set the line length and thickness.

The following example uses vertical and horizontal lines to separate fields on a label and uses a box field to make a label border. This format uses bold text to highlight the lines that contain line or box fields. This label format prints the label shown on the next page.

## Lines and Boxes Format

```

<STX><ESC>C0<ETX>
<STX><ESC>P;<ETX>
<STX>E4;F4,DEMO 4;<ETX>
<STX>L1;o11,447;f0;l1207;w4;<ETX>
<STX>L2;o11,285;f0;l1207;w4;<ETX>
<STX>W3;o11,0;f0;l1207;h802;w4;<ETX>
<STX>B4;o658,650;f0;h102;w2;c0,0;i1;r1;d0,11;<ETX>
<STX>I4;o658,752;f0;h1;w1;c20;r0;b0;<ETX>
<STX>B5;o87,650;f0;h102;w2;c0,0;i1;r1;d0,11;<ETX>
<STX>I5;o87,752;f0;h1;w1;c20;r0;b0;<ETX>
<STX>H6;o34,183;f0;h1;w1;c22;r0;b0;d0,17;<ETX>
<STX>H7;o35,143;f0;h1;w1;c21;r0;b0;d3,BASIS WT. 39-4838;<ETX>
<STX>H8;o389,305;f0;h1;w1;c21;r0;b0;d3,ROLLS;<ETX>
<STX>H9;o40,305;f0;h1;w1;c21;r0;b0;d3,ROLL WIDTH;<ETX>
<STX>L10;o11,609;f0;l1207;w4;<ETX>
<STX>H12;o1022,508;f0;h1;w1;c22;r0;b0;d0,7;<ETX>
<STX>H13;o1022,467;f0;h1;w1;c21;r0;b0;d3,WEIGHT;<ETX>
<STX>H14;o539,508;f0;h1;w1;c22;r0;b0;d0,11;<ETX>
<STX>H15;o539,467;f0;h1;w1;c21;r0;b0;d3,LOCATION;<ETX>
<STX>H16;o42,508;f0;h1;w1;c22;r0;b0;d0,15;<ETX>
<STX>H17;o43,467;f0;h1;w1;c21;r0;b0;d3,CUSTOMER ORDER NUMBER;<ETX>
<STX>H18;o840,346;f0;h1;w1;c22;r0;b0;d0,13;<ETX>
<STX>H19;o840,305;f0;h1;w1;c21;r0;b0;d3,ORDER ITEM NUMBER;<ETX>
<STX>H20;o389,346;f0;h1;w1;c22;r0;b0;d0,7;<ETX>
<STX>H21;o34,346;f0;h1;w1;c22;r0;b0;d0,11;<ETX>
<STX>H22;o747,183;f0;h1;w1;c22;r0;b0;d0,15;<ETX>
<STX>H23;o743,143;f0;h1;w1;c21;r0;b0;d3,GRADE DESCRIPTION;<ETX>
<STX>H24;o13,0;f0;h51;w34;c25;r0;b3;d3,          SHIPPING LABEL          ;<ETX>
<STX>R<ETX>
<STX><ESC>E4<CAN><ETX>
<STX><ESC>F4<LF>INTERMEC<ETX>
<STX><ESC>F5<LF>372181192<ETX>
<STX><ESC>F6<LF>38448379237<ETX>
<STX><ESC>F12<LF>230<ETX>
<STX><ESC>F14<LF>3839494<ETX>
<STX><ESC>F16<LF>372181192<ETX>
<STX><ESC>F18<LF>234-LOFT<ETX>
<STX><ESC>F20<LF>12<ETX>
<STX><ESC>F21<LF>338438<ETX>
<STX><ESC>F22<LF>A-PLUS QTY<ETX>
<STX><ETB><FF><ETX>

```

SHIPPING LABEL			
BASIS WT. 39-4838		GRADE DESCRIPTION	
38448379237		A - PLUS QTY	
ROLL WIDTH	ROLLS	ORDER ITEM NUMBER	
338438	12	234 - LOFT	
CUSTOMER ORDER NUMBER	LOCATION	WEIGHT	
372181192	3839494	230	
 INTERMEC		 372181192	

IPL006.eps

**Sample Label in Lines and Boxes Format:** This illustration shows the label printed using the command strings on the previous page.

## Graphic Fields

You must define a graphic field if you want to print a graphic image on a label. Before you can use this field, you need to download the graphic to the printer. Once you download the graphic, you can use it in any format.

Use the PrintSet printer installation software to easily download graphics to the printer. PrintSet automatically converts the graphic into a six bits per byte format that your printer can understand.

If you are using third-party label-generation software, it converts your graphic file to a UDC format that the printer can interpret and downloads it to the printer.

If you want to design your own graphic, refer to “Creating User-Defined Bitmap Graphics” on page 238. You must send graphics as either one bit per byte or six bits per byte bitmap images. The maximum size that you can define a graphic to be is limited by the capacity of your printer. Due to message length constraints, you must design large graphics in the six bits per byte format.

You can use Direct Graphics mode to reduce the time it takes to download and print an image. For more information on direct graphics, see Appendix E, “Using Direct Graphics Mode.”



## Editing Label Formats and Working With Fields

In addition to understanding the different types of printable fields on the printer, you need to know how to arrange them to define or change the format of a label. The following sections use examples to describe the commands that position, size, rotate, and edit label fields. For a complete list of all programming commands, see Chapter 6, “Finding IPL Commands in This Manual.”

Whenever you create a format, the printer automatically creates a human-readable field zero (H0) along with it. The printer creates the H0 field with all field parameters set to the default setting. You can only delete field zero after you create one or more other fields. You cannot delete the last field in a format.

### Defaults for the H0 Field

Command	Definition
o0,0;	Field origin is 0,0.
f0;	Field direction is horizontal with respect to the label motion from printer.
h1;	Field height magnification is one.
w1;	Field width magnification is one.
c2;	Selects the 10 x 14 standard font.
b0;	Selects no border around human-readable field.
r0;	Selects horizontal orientation of characters.
d0,30;	You enter variable data in Print mode. The maximum number of characters you can enter into this field is 30.

When creating a new format field, it is not possible to specify field zero as anything other than human-readable field zero (H0) without creating another field first. For example, you cannot make field zero a bar code field by doing the following:

```
<STX><ESC>P;E1;F1;B0;<ETX>
```

To make field zero a bar code field, you have to delete human-readable field 0 and then define bar code field 0. To do this, you must create a temporary field (L39) before you delete human-readable field zero (H0):

```
<STX><ESC>P;E1;F1;L39;D0;B0;D39;<ETX>
```

The next table describes each command in the string.

### ***Label Format Editing Command Examples***

<b>Command</b>	<b>Definition</b>
<ESC>P ;	Enters Program mode
E1 ;	Erases format 1
F1 ;	Creates format 1
L39 ;	Creates line field (temporary field)
D0 ;	Deletes field zero
B0 ;	Creates bar code field zero
D39 ;	Deletes the temporary line field

When numbering the fields in a format, it is important to remember to give every field a different number. Never use a field number more than once. You can have up to 200 fields numbering from 0 to 199. The importance of field numbering comes into play when you are in Print mode and are entering data into the label format. At this point, you can only identify the fields by a number, not by the type of field.

Each bar code field can have an interpretive field associated with it. For example, bar code field B33 would have an interpretive field I33. All interpretive fields use up a field location, starting from the top of the field directory; if B33 is the first bar code field with interpretive text, then field I33 would use location 199. You can see how the printer uses the fields internally by uploading the format and examining where the interpretives appear. For help, see the Format, Transmit command on page 105. If you need to use more fields than IPL can accommodate in a single format (because of interpretive fields), you can use pages to combine several formats on one label.

Also keep in mind that you enter data into fields according to their numeric value if you use a <CR> to separate the data. In other words, the first string of data you enter goes into the lowest numbered field, the second string of data you enter goes into the next lowest numbered field, and so on.

## Editing Existing Fields

If you make a mistake in a label format, you may not have to download the entire format again depending on the severity of the mistake. You can change a specific field in a format by sending a command in Program mode. You can modify just the incorrect format fields instead of having to download the entire format again.

When the printer is in Program mode, it uses a field pointer to point to the field to be modified. The pointer continues to point to the most recently selected field until you select a different format or field.

For the next example, assume that you used the following format:

### Sample Format

Command	Description
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enters Program mode
<STX>E3;F3;<ETX>	Erases format 3, Creates format 3
<STX>H0;080,100;f0;c0;d0,16;h1;w1;<ETX>	Creates field H0
<STX>H1;080,120;f0;c0;d0,16;h1;w1;<ETX>	Creates field H1
<STX>H2;080,150;f0;c2;d0,14;h1;w1;<ETX>	Creates field H2
<STX>H3;080,190;f0;c2;d0,16;h1;w1;<ETX>	Creates field H3
<STX>B4;080,0;f0;c0,1;h50;w1;d0,11;i0;p@;<ETX>	Creates field B3
<STX>R;<ETX>	Saves and exits to Print mode

To change the height and width of field 3 to 2 dots, download this command string:

```
<STX><ESC>P;F3;H3;h2;w2;R;<ETX>
```

The following table describes each command in this string:

### Field Editing Commands in the Sample Format

Command	Description
<ESC>P;	Enters Program mode
F3;	Accesses format number 3 from memory
H3;	Accesses field 3
h2;	Sets the height to 2 dots
w2;	Sets the width to 2 dots
R;	Returns to Print mode



**Note:** The <STX> and <ETX> commands mark the beginning and end of a message. The semicolon (;) is the command terminator. Except for the last command in a message, all commands in Program mode must end with this terminator.

## Deleting Fields

It is possible to delete any field from a format except for the last field. Use the following command string to delete field 3 from format 4.

```
<STX><ESC>P;F4;D3;R;<ETX>
```

The following table describes each command in this string:

### Command String Descriptions

Command	Description
<ESC>P;	Enters Program mode
F4;	Accesses format 4
D3;	Deletes field 3
R;	Returns to Print mode

## Positioning Fields

Using the IPL command language to position fields is the trickiest part of designing labels. Since you cannot tell exactly how the field looks until it prints, you may need to make several test prints before you get the field positioned correctly.

For all types of fields, determine the print position by defining the coordinates of the upper left corner of the unrotated field.

The field origin is the upper left corner of an unrotated field. To define the coordinates of the field origin, use the origin command (oX,Y) where o is the command that specifies origin, X is the distance from the left side of the label, and Y is the distance from the top of the label.




**Note:** On the 4400, 7421, and PC41 printers, be sure to use the label width command to set the printer for the correct label width; otherwise, the Y origins will be incorrect.

The X and Y coordinates of the field origin use dots as their form of measurement. There are 203 dots per inch or 8 dots per millimeter.



**Note:** The 3400e with 400 dots per inch, 3240, and 3440 printers have 406 dots per inch or 16 dots per mm. The 4X30 printers have 300 dots per inch or 12 dots per mm.

To position a field to print approximately 0.25 inch from the left side and 0.5 inch from the top of your label, the origin command is o51,102.

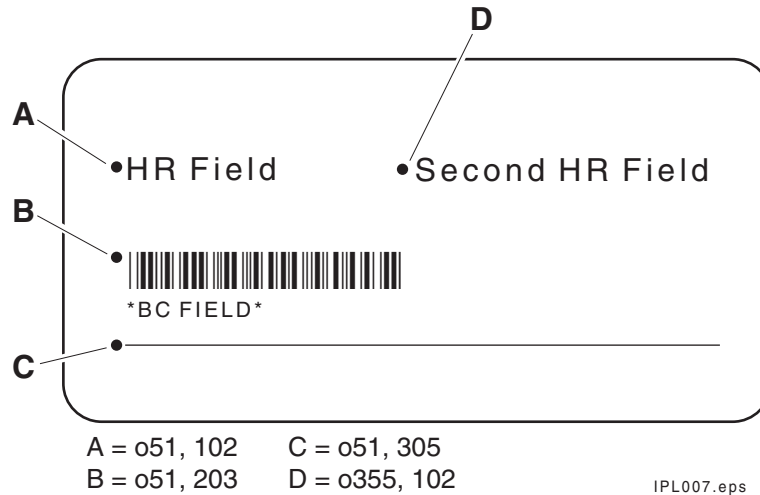

**Field Positioning:** This illustration shows the relative positions of four fields with different origin points.




**Note:** If you are operating your printer in Emulation mode, the dot sizes are doubled (101 dots per inch or 4 dots per mm), so the origin for 1 inch from the top of the label and 0.5 inch from the left side is o25,51.

## Rotating Fields

You can rotate any type of printable field in increments of 90 degrees counterclockwise around the field origin. To position a rotated field, you should keep in mind that the field origin remains on the corner where it was before you rotated the field. If you rotate a field 90 degrees counterclockwise, the origin that was at the upper left corner is now at the lower left corner. Use the Field Direction command *fn* to define the field rotation. See Chapter 7, “IPL Command Reference,” for more information.

- To rotate a field 90 degrees, you must position the lower left corner of the rotated field.
- To rotate a field 180 degrees, you must position the lower right corner of the rotated field.
- To rotate a field 270 degrees, you must position the upper right corner of the rotated field.

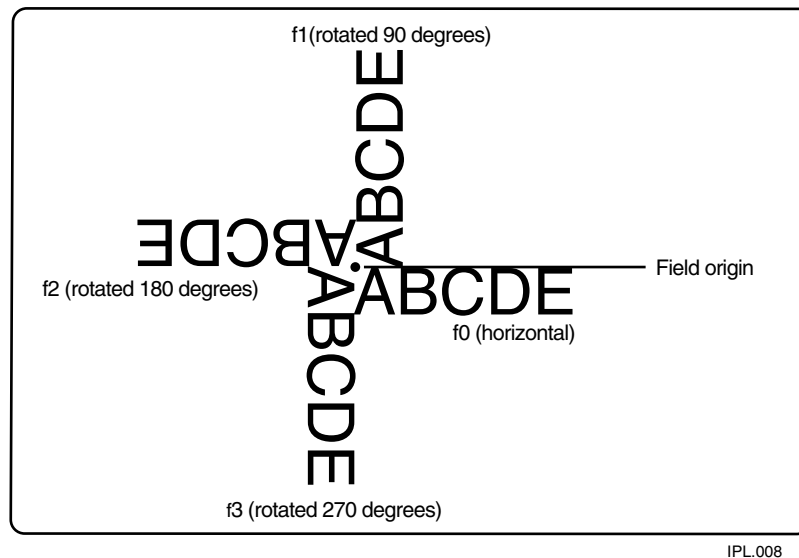

**Field Rotation:** This illustration shows the effects of rotating a field by using the Field Direction command.

## Scaling Fields

You can determine the size of a field by the font or graphic you use and the field magnification factors you apply. The human-readable fonts and bar code symbologies have default sizes, and the user-defined character fields print as large as you design them (up to the maximum), but you can scale each of these fields even further by using magnification commands.

### Magnifying Fonts and Character Fields

The internal fonts in the printer already have sizes associated with them. For example, the letters in font c0 are 7 dots wide by 9 dots high, with a 1-dot gap between characters. If you design a field that prints 10 letters in font c0, the field will be 79 dots wide by 9 dots high.

By applying magnification factors (h for height and w for width), you can increase a field's height or width. If you increase the height to 2 (h2) for the field described above, the field height doubles, and the final field prints 79 dots long by 18 dots high. If you change the height magnification to h3, the field height triples, and the field prints 79 dots by 27 dots.

The default human-readable field H0 prints the 7 x 9 font as follows (assuming you enter the word "example" as data):

EXAMPLE

When you apply a magnification factor of 3 to human-readable field H0, the font now prints the image below:

#### EXAMPLE

Increasing the width of a text field to 2 makes each letter in the field twice as wide. If you did this to the example above, with field height h2, the final field would print 158 dots wide by 18 dots high.

When you magnify a bitmap font, the edges of the characters become jagged. If you want to print large text characters (greater than 1 inch or 2.54 cm), use an outline font such as c25 (Swiss Mono 721 standard outline font).

### Magnifying Bar Code Fields

You can also use height and width commands to modify bar code fields, but the commands do not behave the same as with human-readable fields.

For bar code fields, the height magnification is the actual dot height of the bar code. If you choose a height magnification of h20, the height of the bar code field will be 20 dots.

Printing narrow bar codes conserves space on each label as well as media; however, if you plan to scan bar codes from a distance, you may need to magnify the bar code widths.

The width magnification factor for bar code fields refers to the width of the narrowest element of the bar code. When you specify a narrow element width of w3, the width of the narrowest element in the symbology is 3 dots wide. The spaces and large element widths grow according to preset ratios for each symbology.



**Note:** You can only print a bar width of 1 if you are printing in drag mode (bars perpendicular to the print head). If you select a width of 1 in picket mode (bars parallel to the print head), the printer defaults to 2.

The default height for bar code fields is 50 dots, and the default width for narrow elements is 1 dot.



**Note:** If you are using the POSTNET symbology, follow the rules for magnifying fonts.



## Designing Pages

A page is a collection of one or more formats that you combine to print at the same time. This feature is helpful when you need to print several different labels for an application at once. For example, you may need to attach one type of label to a product and a different type of label to its container. With the page printing capability, you can print both labels at the same time. Because you can print pages of several formats at once, you can also print labels on media rolls that have different sizes and shapes of labels already precut.

When you group label formats into a page, you assign the formats to positions designated by the letters a through z. You can print the formats used in pages independent of each other. The next example shows how to create a page that contains five different formats.

## Label Format - Example

The format example on this page is a complex label designed to demonstrate the different types of data that you can print with your printer. This example contains human-readable fields, a bar code field, line fields, a box field, and a graphic field (the diamond).

Cat. No.	432-3221	Std. Qty.	100
Size	1 3/4"	DUPLX ANGLE CONNECTOR	
Lot 23455 262948	- For Flexible Steel Conduit and .375" - .625" Diameter Armored and Nonmetallic Sheath Cables - For Smooth or Interlocking Sheath Metal Clad Cables .375" - .675" Dia. (UL only)		
 ACE CORP. ADDRESS 3010 FICTION USA		 *307 91747*	

IPL011.eps

**Complex Label:** This illustration shows a label that includes human-readable, box, bar code, line, and graphic fields.



## Graphic for Example

Download the six bits per byte diamond graphic explained in “Creating Six Bits Per Byte User-Defined Graphics” in Appendix C.

## Format for Example

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E5;F5;<ETX>
<STX>H0;o35,40;c25;d3,Cat.;k12;<ETX>
<STX>H1;o35,70;c25;d3,No.;k12;<ETX>
<STX>H2;o165,0;c25;d3,432-3221;k36;<ETX>
<STX>H3;o785,40;c25;d3,Std.;k12;<ETX>
<STX>H4;o785,70;c25;d3,Qty.;k12;<ETX>
<STX>H5;o915,0;c25;d3,100;k36;<ETX>
<STX>L6;o740,10;f3;l130;w8;<ETX>
<STX>L7;o25,140;l1130;w8;<ETX>
<STX>H8;o30,165;c25;f3;r1;d3,Size;k12;<ETX>
<STX>H9;o80,170;c25;d3,1 " ;k30;<ETX>
<STX>H10;o150,165;f3;r1;c25;d3,3/4;h3;w7;<ETX>
<STX>L11;o300,140;f3;l130;w8;<ETX>
<STX>L12;o25,270;l275;w8;<ETX>
<STX>H13;o60,560;f1;c25;d0,20;h3;w2;<ETX>
<STX>L14;o140,270;f3;l310;w8;<ETX>
<STX>H15;o360,120;c22;d3,DUPLEX ANGLE CONNECTOR;h3;w1;<ETX>
<STX>H16;o170,320;c25;d3,- For Flexible Steel Conduit and .375" -
.625";k12;<ETX>
<STX>H17;o212,375;c25;d3,Diameter Armored and Nonmetallic Sheath
Cables;k12;<ETX>
<STX>H18;o170,450;c25;d3,- For Smooth or Interlocking Sheath Metal
Clad;k12;<ETX>
<STX>H19;o212,505;c25;d3,Cables .375" - .675" Dia. (UL only);k12;<ETX>
<STX>L20;o25,580;l1130;w8;<ETX>
<STX>U21;o40,610;c2;h9;w9;<ETX>
<STX>H22;o210,600;c25;d3,ACE CORP.;k24;<ETX>
<STX>H23;o210,670;c25;d3,ADDRESS 3010;k12;<ETX>
<STX>H24;o210,710;c25;d3,FICTION USA;k12;<ETX>
<STX>B25;o685,615;c0,0;d0,20;i1;h100;p@;<ETX>
<STX>I25;h2;w2;<ETX>
<STX>L26;o590,580;f3;l185;w8;<ETX>
<STX>W27;o015,000;w10;l1150;h775;<ETX>
<STX>R<ETX>
```

## Data for Example

```
<STX><ESC>E5<CAN><ETX>
<STX>Lot 23455 262948<CR><FS>307 91747<FS><ESC>I2<ETX>
<STX><RS>5<ETB><ETX>
```

Use the <STX> and <ETX> characters to mark the beginning and end of the command strings. The other characters are explained in the following table. Most of the printer command lines explained below contain commands previously not discussed in this chapter. Refer to previous examples for clarification of the lines that are not explained, or see Chapter 7, “IPL Command Reference,” for a further explanation of the command language.

### Label Format Example Command Descriptions

Command	Description
<ESC>C	Selects Advanced mode.
<ESC>P	Selects Program mode.
E5 ; F5 ;	Erases anything previously stored as format five and accesses the location for format five.
H0 ;	Defines field 0 as a human-readable field.
o35 , 40 ;	Sets the origin of field 0 at coordinates (35,40).
c25 ;	Sets the font for field 0 to font 25.z
d3 , Cat . ;	Sets the data for field 0 to have the constant value: Cat.
k12 ;	Sets the point size to 12.
L6 ;	Defines field 6 as a line field.
o740 , 10 ;	Sets the origin for field 6 at (740,10).
f3 ;	Rotates field 6 by 270 degrees counterclockwise around the field origin.
l130 ;	Sets the length of the line in field 6 to 130 dots.
w8 ;	Sets the width of field 6 to 8 dots.
H8 ;	Defines field 8 as a human-readable field.
o30 , 165 ;	Sets the origin of field 8 at (30,165).
c25 ;	Defines the font for field 8 as font 25.
f3 ;	Rotates field 8 by 270 degrees counterclockwise around the origin.
r1 ;	Rotates the characters in field 8 by 90 degrees counterclockwise.
d3 , Size ;	Defines the constant data for field 8.
k12 ;	Sets the point size to 12.
H10 ;	Defines field 10 as a human-readable field.
o150 , 165 ;	Sets the origin for field 10 at (150,165).
f3 ;	Rotates field 10 by 270 degrees counterclockwise around the origin.
r1 ;	Rotates the characters in field 10 by 90 degrees counterclockwise.
c25 ;	Sets the font for field 10 to font 25.
d3 , 3/4 ;	Defines constant data for field 10.
k12 ;	Sets the point size to 12.

**Label Format Example Command Descriptions (continued)**

<b>Command</b>	<b>Description</b>
H13 ;	Defines field 13 as a human-readable field.
o60,560 ;	Sets the origin of field 13 at (60,560).
f1 ;	Rotates field 13 by 90 degrees around the origin.
c25 ;	Determines that field 13 prints in font 25.
d0,20 ;	Specifies that data for field 13 will be entered during Print mode and that the data will be a maximum of 20 characters long.
k10 ;	Sets the point size to 10.
U21 ;	Defines field 21 as a graphic field.
o40,610 ;	Sets the origin of field 21 at (40,610).
c2 ;	Determines that field 21 prints in font two.
h9 ;	Sets the height to nine times the original size.
w9 ;	Sets the width to 9 dots.
B25 ;	Defines field 25 as a bar code field.
o685,615 ;	Sets the origin of field 25 at (685,615).
c0,0 ;	Sets the bar code font to Code 39 with no check digit.
d0,20 ;	Determines that the data for field 25 is entered during Print mode and its maximum length is 20 characters.
i1 ;	Determines that an interpretation of the bar code prints with start and stop characters included.
h100 ;	Determines that the bar code height is 100 dots.
p@ ;	Clears all prefixes from the bar code field.
I25	Edits the interpretive field for bar code field 25.
h2	Sets the height of the interpretive field to twice its original height.
w2	Sets the width of the interpretive field to 2 dots.
W27 ;	Defines field 27 as a box field.
o015,000 ;	Sets the origin of field 27 at 15,0.
w10 ;	Defines the line width of the box as 10 dots.
l1150 ;	Defines the length of the box as 1150.
h775 ;	Sets the height of the box to 775.
R	Sets the printer in Print mode.
<ESC>E5	Accesses format 5 from the printer memory.
<CAN>	Clears all host-entered data for the current format and sets the field pointer to the lowest numbered data-entry field.
Lot 23455 262948<CR>	This is the data intended for the first data-entry field. <CR> instructs the printer to go to the next data-entry field.
<FS>	Specifies that the following data is to be incremented.
307 91747	This is the data intended for the next data-entry field (specified as data to be incremented).
<FS>	Specifies that the preceding data is to be incremented.
<ESC>I2	The data surrounded by <FS> commands is to be incremented by a value of 2 after each label is printed.
<RS>5	Sets the number of labels to print when the print command is executed.
<ETB>	Tells the printer to print the label.

## Label Format - RFID Example

The format on this page is a bar code label that contains an RFID tag.



**Label With RFID Tag**

### Format for RFID Example

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E4;F4;<ETX>
<STX>H0;o102,51;f0;c25;h20;w20;d0,30;<ETX>
<STX>L1;o102,102;f0;l575;w5;<ETX>
<STX>B2;o203,153;c0,0;h100;w2;i1;d0,10;<ETX>
<STX>I2;h1;w1;c20;<ETX>
<STX>Q3;a2,2,0,23;d3,MY FIRST RFID TAG WRITE;<ETX>
<STX>R;<ETX>
```

### Data for RFID Example

```
<STX><ESC>E4<ETX>
<STX><CAN><ETX>
<STX>MY FIRST RFID TAG WRITE<CR><ETX>
<STX>SAMPLE<ETX>
<STX><ESC>J2,2,0,23<ETX>
<STX><ETB><ETX>
```

Use the <STX> and <ETX> characters to mark the beginning and end of the command strings. The other characters are explained in the following table. Most of the printer command lines explained below contain commands previously not discussed in this chapter. Refer to previous examples for clarification of the lines that are not explained, or see Chapter 7, “IPL Command Reference,” for a further explanation of the command language.

**Label Format – RFID Example Command Descriptions**

Command	Description
<ESC>C	Selects Advanced mode.
<ESC>P	Selects Program mode.
E4 ; F4 ;	Erases anything previously stored as format four and accesses the location for format four.
H0 ;	Defines field 0 as a human-readable field.
o102 , 51 ;	Sets the origin of field 0 at coordinates (102,51).
f0 ;	Does not rotate field 0.
c25 ;	Sets the font to font 25.
h20 ;	Sets the height to 20 times original size.
w20 ;	Sets the width to 20 times original size.
d0 , 30 ;	Defines the variable data to be up to 30 characters.
L1 ;	Defines field 1 as a line field.
o102 , 102 ;	Sets the origin of field 1 at coordinates (102,102).
f0 ;	Rotates field 1 by 90 degrees counterclockwise around the origin.
l575 ;	Defines the length of the line as 575.
w5 ;	Sets the width of the line to 5 dots.
B2 ;	Defines field 2 as a bar code field.
o203 , 153 ;	Sets the origin of field 2 at coordinates (203,153).
c0 , 0 ;	Sets the bar code font to Code 39 with no check digit.
h100 ;	Sets the height to 100 dots.
w2 ;	Sets the width to 2 dots.
i1 ;	Determines that an interpretation of the bar code prints with start and stop characters included.
d0 , 10 ;	Defines the variable data to be up to 10 characters.
I2 ;	Defines field 2 to include an interpretive field with the bar code field.
h1 ;	Sets the height to original size.
w1 ;	Sets the width to original size.
c20 ;	Sets the font to font 20.
Q3 ;	Defines field 3 to be an RFID field.
a2 , 2 , 0 , 23	Sets the format to ASCII, writes to the Data segment, starts on byte 0 and writes up to 23 bytes.
d3 , MY FIRST RFID TAG WRITE	Defines constant data for field 3 to be “MY FIRST RFID TAG WRITE.”
R	Sets the printer in Print mode
<ESC>E4	Accesses format 4 from the printer memory.
<CAN>	Clears all host-entered data for the current format and sets the field pointer to the lowest numbered data-entry field.
MY FIRST RFID TAG WRITE<CR>	This is the data intended for the first data-entry field (human-readable field 0). <CR> instructs the printer to go to the next data-entry field.
SAMPLE	This is the data intended for the second data-entry field (bar code field 2).

***Label Format- RFID Example Command Descriptions (continued)***

<b>Command</b>	<b>Description</b>
<ESC>J2 , 2 , 0 , 23	Reads the data from the RFID tag. The data is in ASCII format on the Data segment, starting on byte 0 and having a length of 23 bytes.
<ETB>	Tells the printer to print the label.



# **4 Troubleshooting**

This chapter describes the problems that may occur as a result of using IPL commands incorrectly. If you do not find your problem listed here, see the troubleshooting information in your printer user's manual.

## Troubleshooting Checklist

Even though Intermec designed your printer to operate under harsh conditions, you may still encounter error messages. You can easily fix most of the errors you encounter and consequently not delay operation of the printer for very long.

If you receive an error message or encounter a functional problem with the printer, you should perform these steps:

### To troubleshoot your printer

- 1 Send a <BEL> command to the printer and see if the printer sends an error message to the host in response.
- 2 If there is an error message, find it in the section called “Interpreting Error Codes and Solving Problems” on page 50. Follow the instructions in the table to correct the problem.

Or:

If the printer does not send an error message to the host, try to locate the symptom in the “Printer Operation Problems” and “Print Quality Problems” sections of the printer user’s manual. Follow the instructions in the manual to correct the problem.

- 3 Clean the printer components and check all connections. See your user’s manual for instructions.
- 4 If the problem persists, contact Intermec Technical Support (1-800-755-5505) in North America. If you are an international customer, contact your local Intermec representative.

## How the Printer Handles Error Conditions

This section describes how the printer handles error conditions that may occur while you use IPL commands.

### Syntax Errors

The printer responds to syntax errors in the messages it receives from the host by attempting to execute the commands. It does not ignore a command with a syntax error; instead, the printer produces output, even if it is wrong. This output helps determine what went wrong and what should be done to correct the problem.



## Parameter Errors

Certain commands require optional parameters. If you do not supply these parameters, the printer substitutes default values. If a parameter is above its maximum range limit, the printer uses the maximum value. If it falls below the minimum range, the printer uses the minimum value. See Chapter 7, “IPL Command Reference,” for the range and default value for each command.

## Image Overrun Errors

Image overrun occurs when a label is too complex to image for a given print speed. An overrun will cause the printer to abort the label being printed. This error is most common on labels over 12.7 cm (5 in) long.

The printer automatically attempts to correct for this error condition by resetting to the lowest print speed and to the highest number of image bands, then repeats printing the label. The printer remains at this setting until you reset it. If an image overrun still occurs, printing for that batch of labels stops and the printer executes any following commands.



**Note:** Installing optional memory expansion may decrease image overrun errors.

## Invalid Numeric Character Errors

If you include non-numeric characters within a numeric data string in a command, the printer ignores them and continues to process the rest of the valid numeric characters. If a non-numeric character begins the numeric data string, however, the printer uses a default value for the affected command.

Here are two examples of valid numeric character strings and one example of an invalid string:

```
12a valid
1a2 valid
a12 invalid
```

## Insufficient Storage Memory Errors

Before storing new formats, graphics, or user-defined fonts in the static RAM or flash, the printer ensures that it has sufficient memory to store them. If there is insufficient memory, the printer ignores the last editing session. The printer preserves the existing data in the storage memory.


## Interpreting Error Codes and Solving Problems

Most of the problems you may encounter cause the printer to send an error code to the host. To correct the error, find the error code in the following table and complete the instructions in the solution column.

### Error Codes and Possible Solutions

Error Code	Description of Problem	Solution
00	No error.	No action is necessary.
02	Invalid number of bar code characters (UPC/EAN).	Verify the number of bar code characters used in the Bar Code, Select Type command on page 149.
06	Invalid supplemental character count (UPC/EAN).	Make sure that the supplemental data consists of either two or five characters.
07	More than one supplemental delimiter (UPC/EAN).	Make sure that you have only one supplemental delimiter (“.”) between the bar code data and the supplemental data.
11	Invalid bar code data.	Verify data in the label format.
12	Data count exceeded.	Data count should not exceed what is specified for the field.
13	Entering data in non-data entry field.	Check the field for accuracy.
21	Quantity or batch count out of range.	Quantity of labels or number of batches should be between 1 and 9999.
22	Field increment/decrement out of range.	Quantity should be between 1 and 9999.
23	Intercharacter/message delay out of range.	Delay should be between 0 and 9999.
24	Missing preamble/postamble data.	Change the configuration command to no preamble/postamble or include preamble/postamble data.
25	Invalid format transmission syntax.	Check the Format, Transmit command syntax. The correct syntax is <ESC>x <i>n</i> with <i>n</i> ranging from 0 to 19 on most printers. On some printers, such as the 3440, <i>n</i> ranges from 0 to 99. For more information, see the Format, Transmit command on page 108.
26	Invalid page transmission syntax.	Check the Page, Transmit command syntax. The correct syntax is <ESC>y <i>n</i> with <i>n</i> ranging from 0 to 9.
27	Invalid font transmission syntax.	Check the Font, Transmit command syntax. The correct syntax is <ESC>v <i>n</i> . Values for <i>n</i> vary depending on your printer model. For more information, see the Font, Transmit command on page 105.
28	Invalid UDC transmission syntax.	Check the User-Defined Characters, Transmit command syntax on page 117. The correct syntax is <ESC>u <i>n</i> with <i>n</i> ranging from 0 to 99.

**Error Codes and Possible Solutions (continued)**

Error Code	Description of Problem	Solution
32	Non-immediate command or data received after buffer full.	Allow the printer to empty the buffer contents before sending commands or data.
33	Invalid field delimiters.	Check for all pairs of field delimiters and make sure both are numeric, or both are alphanumeric.
34	Invalid escape command.	Correct the escape command syntax.
35	Invalid data shift command.	Correct the shift command syntax.
36	Invalid or undefined format number.	Verify that the format numbers are between 0 and 19.
37	Insufficient room in RAM to print format.	Reduce the number of data fields in the format or add more DRAM.
38	Invalid or undefined field number.	Verify the field number in the label format.
41	Syntax error for program commands.	Check the program command for proper syntax.
42	Insufficient room in RAM to store format.	Empty the buffer contents. If the format still does not fit, delete some fields or other data from the format. You may have to remove or reduce the UDCs, formats, or fonts if necessary.
		<b>Note:</b> Entering <ESC>m tells the host how much memory is installed and how much is available.
43	Too many fields in label format.	You can use up to 200 fields in a format and each field can use up to 250 characters. Reduce field size or delete some fields.
46	Undefined statement.	Check the statement syntax.
52	Invalid UDC/UDF bitmap cell height/width or intercharacter space.	Verify that the UDC/UDF bitmap cell height/width or intercharacter space is within the specified values for <i>n</i> . For more information, see the Bitmap Cell Height/Width for Graphic command on page 172 or the UDF, Define command on page 214 or the Intercharacter Space for UDF, Define command on page 199.
53	Insufficient room in RAM to store UDC or UDF.	Remove or reduce formats, fonts, or UDCs.
54	Invalid UDC command syntax.	Correct the UDC command syntax.
57	Invalid parameter.	Correct the syntax.
60	No RFID support.	The printer is unable to access the RFID module. Contact your local Intermec representative.
61	No RFID tag found.	The RFID module has determined that the printer does not have RFID media loaded. Load RFID media. Verify that the TAGADJUST value aligns the tag over the antenna. For help, see the RFID Parameters, Set command on page 143.
62	Access outside of the RFID tag memory.	The defined RFID tag field specifies a position outside of the tag's memory or the tag read/write operation was not successful (bad tag). Verify that the field specifies a position within the tag's memory. For help, see the RFID Tag Field Setup command on page 208.

**Error Codes and Possible Solutions (continued)**

Error Code	Description of Problem	Solution
63	RFID number conversion error.	You have entered an invalid hex or numerical (NUM) format in the data string. Enter a valid value.
64	RFID inactive (off).	You have a printer with an RFID module and you have defined RFID commands, but you have turned RFID mode off. Turn RFID mode on. For help, see the RFID Parameters, Set command on page 143.
65	RFID tag type does not support the selected option.	An application has sent a command with an argument that is not supported by the printer's tag type. Verify that the application commands match the printer's tag type.



# **5 Advanced Printer Programming**

This chapter discusses topics for advanced IPL programmers, such as using printer memory efficiently, increasing throughput, and using Emulation mode.

## Using the Printer Memory Efficiently

To receive the best performance from your printer, you must understand how to use the printer RAM efficiently. In general, if you use a significant amount of available memory for storage, you reduce the amount of memory used for imaging, which decreases printer performance.

### How Is the Printer Storage Memory Used?

Although the printer contains enough static RAM or flash to store several different label formats, downloaded fonts, graphics, and data, you should be careful of how you use your printer memory.

Printers use either static RAM or flash memory for storing tables, pages, formats, fonts, and user-defined characters (UDCs). Any storage memory that you are not using for storage is available for imaging. Some printers allow you to use PrintSet to adjust the amount of storage memory available for storage purposes. If you require additional storage memory, you can purchase a memory expansion option.

### Making the Most of Your Storage Memory

There are limits to the number of formats, fonts, graphics, or pages that you can store in the printer. You can define up to 16 fonts, but there may not be enough room depending on the amount of memory being used for other purposes. The more formats, graphics, and fonts you store, the less memory is available.

When you encounter a memory usage problem, use PrintSet to see how much memory is available. You must upload the memory information from the printer first. Refer to the PrintSet online help for more information.

You can increase your available memory by following one of these suggestions:

- In some printers, you can adjust the amount of RAM allocated for storage purposes. For help, see the PrintSet software or the “Amount of Storage, Define” command on page 120.
- Increase the amount of available memory by using the Memory Reset portion of the Test and Service menu. You can use the Memory Reset command to erase all or part of the information that you have downloaded to the printer. For help, see your user’s manual.
- Delete any unneeded user-defined fonts, graphics, pages, or formats. For help, see the PrintSet software or the specific commands in Chapter 7, “IPL Command Reference.”

- Purchase additional memory. Please contact your Intermec representative for information on purchasing additional memory for your printer model.

## Increasing Throughput



**Note:** This section does not apply to the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, or PX6i.

To print labels as quickly as possible, you must adjust the print speed in conjunction with the number of image bands (one image band equals 2.54 cm (1 in) of label). The print speed and image band settings determine the rate at which the printer processes the images of your labels, which affects the throughput of the entire printing process.

When the printer receives the command to select a format, <ESC>E, it immediately begins imaging the label; as a result, the imaging process is better able to keep up with the print speed and throughput improves. If the number of image bands is too low, however, the imaging process is unable to keep up with the print speed, and the printer stops printing and restarts at the lowest print speed with the maximum number of image bands. If the image band command is set too high, the printer spends more time than necessary imaging, and label production is slowed.

## What Is an Image Band?

An image band is a section of memory where a picture of a label format is drawn. This drawing process is known as imaging. Once the picture is imaged, the printer loads the picture from the image bands to the printhead for printing. Each image band is equal to 2.54 cm (1 in) of length of the label format. The number of image bands you use may be less than the length of the label being printed. The number of image bands (in inches) does not have to equal the length of the label since the printer recycles the image bands. Once the contents of an image band have been printed, it may be reused to image the next section of the label.

Keep in mind that the more complex the label, the longer it will take to image each section, thus requiring a slower print speed. To use a higher print speed, use more image bands to allow more of the imaging process to complete before printing begins.

It is possible to reduce the amount of time necessary to download and image a graphic by using Direct Graphics mode. In Direct Graphics mode, the printer images a graphic directly into the image bands without storing it in the printer. For help, see Appendix E, “Using Direct Graphics Mode.”

## How the Image Bands Command Works

The Number of Image Bands, Select command controls the amount of memory allotted to the imaging process. When you increase the image band adjustment to a higher number, you are adding more buffers to the imaging memory. As a result, more of the label format is imaged before printing begins.

The minimum number of required image bands is dependent upon the print speed and the complexity of the label. Labels that contain numerous fields with different rotations, graphics, or combinations of any number of these formatting options may require a higher number of image bands.

To set the number of image bands, use PrintSet or the Number of Image Bands, Set (<SI>I) IPL command. For help, see the PrintSet online help or the “Number of Image Bands, Set” (<SI>I) command on page 135.

## Optimizing Print Speed and Image Band Setting

The minimum number of image bands available is two. The maximum number of image bands varies between printer models. Use PrintSet to check for the maximum number of image bands available, or see the “Number of Image Bands, Set” (<SI>I) command on page 135.

### To optimize the number of image bands for your print speed

- 1 Set the image band setting at the lowest number (2).
- 2 Print a label at the desired speed.

If the label prints, the image band setting is optimal. You do not need to perform any more adjustments.

If the number of image bands is too low, the printer aborts the label before printing is completed and attempts to reprint the label at the slowest speed (2 ips) with the highest number of image bands. Continue with Step 3.

- 3 Return to the original print speed and increase the original number of image bands one at a time.

Continue to increase the number of image bands until the printer prints a label correctly.


If the printer still aborts and reprints at the highest image band setting, you may be trying to optimize at a print speed that is too high for your label format. Try optimizing the number of image bands at a lower print speed, or add expansion RAM.

To print very complex labels at high speeds, you must allocate enough image bands to completely image the label before printing. By allocating one band for each 2.54 cm (1 in) of label length, you can print at any speed; however, you may notice considerable delays before each label is printed.



### Image Band Example


This example shows how the printer prints a label format using image bands. The label is 12.7 cm (5 in) long and is divided into five image bands. The printer is configured for three image bands, which means that three bands will be imaged before printing begins.

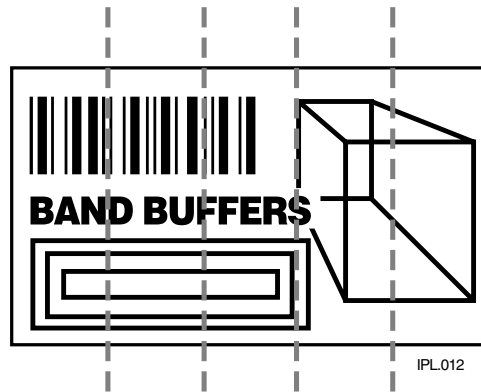


The dashed lines represent the divisions between the five image bands, and the arrow (↑) represents the portion of the image band that is being printed at that time.




**First Image Band:** This diagram shows the first 2.54 cm (1 in) of the label imaged into the first image band. The other two image bands are still empty. Printing is not started.

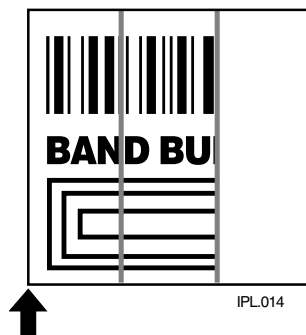


**Second Image Band:** This diagram shows the second 2.54 cm (1 in) section of the label imaged into the second image band. Printing still is not started.

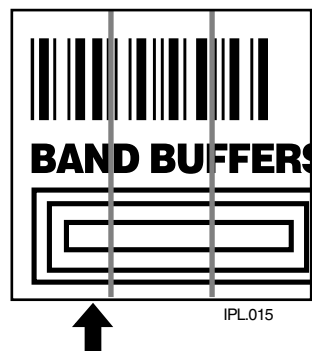

**Third Image Band:** This diagram shows the third 2.54 cm (1 in) section of the label imaged into the third image band. Printing begins from the first image band, as indicated by the arrow. At this point, all three available image bands have been filled. The first band will be reused after it has been completely printed.

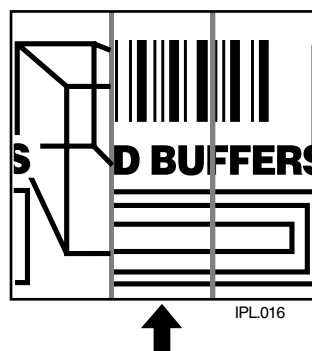

**Fourth Image Band:** When the first image band is emptied (printed), the fourth band is imaged into it. Printing continues from the second image band. As before, this band must be emptied before the final band can be imaged into it.

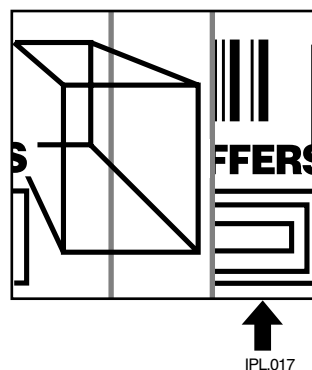

**Fifth Image Band:** The final section of the label is imaged into the second image band. Printing continues from the third band. At this point, the label has been completely imaged, but not printed.

Imaging of a second label could begin in the third image band while the first label is still printing. The second label could begin printing immediately after the first with no delay, which suggests that the only print delay encountered would be during the time when the first bands of the first label were imaged.

As labels become more complex, the influence that print speed and the number of buffers has on throughput is limited by imaging speed. You will encounter new considerations, such as delay between printing and perceived printer performance. Unfortunately, no formula exists to calculate an ideal configuration; instead, you will have to find it through trial and error.

## Reimaging Modified Fields

You can now choose to reimage only the fields in a label format that you modify instead of reimaging the entire label format. If you are updating data in only a few simple fields, it might be faster to use the modified field reimaging command; however, you need to take into account the type of fields you will be reimaging. If you choose to reimage a field that takes longer to erase and reimage than it takes an entire label format to erase and reimage, you will not be increasing throughput. Erasing a field requires reimaging it with zeros and erasing a label requires only clearing the RAM. When you use it correctly, this command parameter can greatly increase the throughput of your printer.

### To use the modified field reimaging command

- 1 Make sure that you select enough image bands to allow the printer to retain the entire label image.

One image band is equal to 2.54 cm (1 in) of label length.

- 2 Select the fields to reimage by using the following command:

`<ESC>En, m`

See the “Format, Select” command on page 106 for more information about reimaging modified fields.

## Optimizing Image Bands for Batch Printing

If you frequently print batches of identical labels (using the <US> command) or print a quantity of identical labels, you may want to optimize the number of image bands for batch printing. Optimizing the number of image bands for batch printing is especially helpful if you experience delays between the printing of each label.

To optimize the number of image bands for batch printing, you must select enough image memory to allow the printer to retain the entire label image. To optimize batch printing, select the number of image bands (1 band = 2.54 cm (1 in)) to equal the label size. For example, if the printed image stops at a distance of 10.16 cm (4 in) from the beginning of the label, you must select four image bands to prevent reimaging if the label is 12.7 cm (5 in) long.

The 3400C, 3400e, 3440, 4420, 4440, 7421, and PC41 printers automatically select the optimal number of image bands. If you increase the number of image bands on these printers, you may decrease performance.

## Using Emulation Mode



**Note:** The 4630 and 4830 printers do not support Emulation mode.

Emulation mode lets you print bar code labels that were designed on an 86XX printer in multiples of 10 or 15 mil. (“Emulation mode” is also called “86XX Emulation mode” in some printer manuals.)

Here is a summary of the features in Emulation mode:

- Pages are not available.
- Character size is specified by height and width magnification only.
- International characters are preceded by <SUB> or selectable by language.
- The bitmaps for user-defined characters (UDC) and user-defined fonts (UDF) are one bit per byte (instead of six bits per byte).
- Print resolution is in 10 mil dots.
- RFID commands are not available.

Two IPL commands place the printer in Emulation mode:

- Emulation or Advanced Mode on Power-Up.
- Emulation Mode, Enter.

The following table lists all the IPL commands and specifies if the command works when the printer is in Emulation mode.

**IPL Commands and Emulation Mode**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
12 Volt Supply Value, Transmit	U	214	Yes
Abort Print Job	<EM>	91	Yes
Advanced Mode, Select	<ESC>C	96	Yes
Alphanumeric Field Separator	<GS>	97	Yes
Auto-Transmit 1, Enable	<ESC>j	121	Yes
Auto-Transmit 2, Enable	<ESC>d	121	Yes
Auto-Transmit 3, Enable	<ESC>e	121	Yes
Auto-Transmit 1, 2, and 3, Disable	<ESC>k	122	Yes
Bar Code, Select Type	c	149	Yes
Bar Code Field, Create or Edit	B	171	Yes
Batch Count, Set	<US>	98	Yes
Bitmap Cell Height for Graphic or UDF, Define	y	172	Yes
Bitmap Cell Width for Graphic or UDF, Define	x	174	Yes
Bitmap User-Defined Font, Clear or Define	T	175	Yes
Border Around Human-Readable Text, Define	b	175	Yes
Box Field, Create or Edit	W	177	Yes
Character Bitmap Origin Offset, Define	X	177	Yes
Character Rotation or Bar Code Ratio, Define	r	178	Yes
Clear All Data	<CAN>	98	Yes
Clear Data From Current Field	<DEL>	98	Yes
Code 39 Prefix Character, Define	p	181	Yes
Command Tables, Load	C	182	Yes
Command Terminator	;	214	Yes
Command Terminator 1	<NUL>	98	Yes
Command Terminator 2	<LF>	99	Yes
Communication Port Configuration, Set	<SI>P	122	Yes
Configuration Parameters, Transmit	<ESC>p	99	Yes
Control Panel Access Permission, Set	<SI>A	123	Yes
Current Edit Session, Save	N	182	Yes
Cut	<SO>	99	Yes
Cutter, Enable or Disable	<SI>c	124	Yes
Dark Adjust	K	214	Yes
Dark Adjust, Set	<SI>d	124	Yes
Data Shift - International Characters	<SUB>	99	Yes
Data Source for Format in a Page, Define	e	183	No
Direct Graphics Mode, Select	<ESC>g	101	No
Emulation Mode, Enter	<ESC>c	102	Yes
Emulation or Advanced Mode on Power-Up	<SI>C	125	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
End-of-Print Skip Distance, Set	<SI>D	126	Yes
Error Code, Request	<BEL>	91	Yes
Factory Defaults, Reset	D	214	Yes
Field, Delete	D	183	Yes
Field, Select	<ESC>F	102	Yes
Field Data, Define Source	d	184	Yes
Field Decrement, Set	<ESC>D	103	Yes
Field Direction, Define	f	186	Yes
Field Increment, Set	<ESC>I	104	Yes
Field Origin, Define	o	186	Yes
First Data Entry Field, Select	<ACK>	104	Yes
Font, Transmit	<ESC>v	105	Yes
Font Character Width, Define	Z	187	Yes
Font Type, Select	c	189	Yes
Form Feed	<FF>	106	Yes
Format, Create or Edit	A or F	191	Yes
Format, Erase	E	193	Yes
Format, Select	<ESC>E	106	Yes
Format, Transmit	<ESC>x	108	Yes
Format Direction in a Page, Define	q	192	No
Format Offset Within a Page, Define	O	193	No
Format Position From Page, Delete	m	194	No
Format Position in a Page, Assign	M	194	No
Formats, Print	f	214	Yes
Graphic, Select	c	195	Yes
Graphic or UDC, Define	u	195	Yes
Hardware Configuration Label, Print	h	214	Yes
Height Magnification of Bar, Box, or UDC, Define	h	196	Yes
Human-Readable Field, Create or Edit	H	198	Yes
IBM Language Translation, Enable or Disable	<SI>I	128	Yes
Increment and Decrement, Disable	<ESC>N	109	Yes
Intercharacter Delay, Set	<SYN>	128	Yes
Intercharacter Space for UDF, Define	z	199	Yes
Interpretive Field, Edit	I	200	Yes
Interpretive Field, Enable or Disable	I	201	Yes
Label and Gap Length, Transmit	<ESC> L	92	Yes
Label Rest Point, Adjust	<SI>f	129	Yes
Label Retract, Enable or Disable	<SI>R	129	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
Label Retract Distance, Set	<SI>r	130	Yes
Label Stock Type, Select	<SI>T	130	Yes
Label Taken Sensor Value, Transmit	T	214	Yes
Length of Line or Box Field, Define	l	201	Yes
Line Field, Create or Edit	L	202	Yes
Maximum Label Length, Set	<SI>L	132	Yes
Media Fault Recovery Mode, Set	<SI>e	133	Yes
Media Sensitivity, Select	<SI>g	133	Yes
Memory Usage, Transmit	<ESC>m	110	Yes
Message Delay, Set	<ESC><SYN>	134	Yes
Next Data Entry Field, Select	<CR>	111	Yes
Number of Image Bands, Set	<SI>I	135	Yes
Numeric Field Separator	<FS>	111	Yes
Options Selected, Transmit	<ESC>O	112	Yes
Outline Font, Clear or Create	J	202	No
Outline Font, Download	j	204	No
Page, Create or Edit	S	205	No
Page, Delete	s	206	No
Page, Select	<ESC>G	113	No
Page, Transmit	<ESC>y	113	No
Pages, Print	p	214	Yes
Pin 11/20 Protocol, Set	<SI>p	136	No
Pitch Label, Print	C	214	Yes
Pitch Size, Set	g	206	No
Point Size, Set	k	207	No
Postamble, Set	<EOT>	137	Yes
Preamble, Set	<SOH>	137	Yes
Print	<ETB>	114	Yes
Print Quality Label, Print	Q	214	Yes
Print Speed, Set	<SI>S	138	Yes
Printer Language, Select	<SI>l	139	Yes
Printhead Loading Mode, Select	<SI>h	141	No
Printhead Parameters, Transmit	<ESC>H	114	Yes
Printhead Temperature Sensor Value, Transmit	P	214	Yes
Program Mode, Enter	<ESC>P	114	Yes
Program Mode, Exit	R	208	Yes
Program Number, Transmit	<ESC>M	114	Yes
Quantity Count, Set	<RS>	115	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
Reflective Sensor Value, Transmit	M	214	No
Remaining Quantity and Batch Count, Transmit	<ESC>Q	92	Yes
Reset	<DLE>	92	Yes
Self-Strip, Enable or Disable	<SI>t	145	Yes
Slash Zero, Enable or Disable	<SI>z	146	No
Software Configuration Label, Print	s	214	Yes
Start and Stop Codes (Code 39), Print	<ESC><SP>	117	Yes
Status Dump	<VT>	93	Yes
Status Enquiry	<ENQ>	94	Yes
Takeup Motor Torque, Increase	<SI>b	147	No
Test and Service Mode, Enter	<ESC>T	117	Yes
Test and Service Mode, Exit	R	214	Yes
Top of Form, Set	<SI>F	147	Yes
Transmissive Sensor Value, Transmit	G	214	Yes
User-Defined Character (UDC) and Graphics, Print	g	214	Yes
User-Defined Character, Clear or Create	G	214	Yes
User-Defined Character Field, Create or Edit	U	214	Yes
User-Defined Characters, Transmit	<ESC>u	117	Yes
User-Defined Font Character, Create	t	214	Yes
User-Defined Fonts, Print	t	214	Yes
User-Defined Tables, Transmit	<ESC>Z	118	Yes
Warm Boot	<BS>	118	Yes
Width of Line, Box, Bar, or Character, Define	w	214	Yes





## 6 Finding IPL Commands in This Manual

This chapter contains tables that show the page numbers in Chapter 7 where each IPL command is described. The tables are organized in various ways to help you find the command you are looking for.

Table	Page	How the Table is Organized
Commands Listed by Name	66	Alphabetized by the command name
Commands Listed by Syntax	71	Alphabetized by the command syntax
Commands Listed by Task	75	Divided into groups, further divided into the tasks you will perform, and finally alphabetized by the command name.

## Commands Listed by Name

IPL Command	Syntax	Page
12 Volt Supply Value, Transmit	U	218
Abort Print Job	<EM>	91
Advanced Mode, Select	<ESC>C	96
Alphanumeric Field Separator	<GS>	97
Ambient Temperature, Transmit	A	218
Amount of Storage, Define	<SI>N	120
Audible Alarm, Enable or Disable	<SI>a	120
Auto-Transmit 1, Enable	<ESC>j	121
Auto-Transmit 2, Enable	<ESC>d	121
Auto-Transmit 3, Enable	<ESC>e	121
Auto-Transmit 1, 2, and 3, Disable	<ESC>k	122
Bar Code, Select Type	c	149
Bar Code Field, Create or Edit	B	171
Batch Count, Set	<US>	98
Bitmap Cell Height for Graphic or UDF, Define	y	172
Bitmap Cell Width for Graphic or UDF, Define	x	174
Bitmap User-Defined Font, Clear or Define	T	175
Border Around Human-Readable Text, Define	b	175
Box Field, Create or Edit	w	177
Character Bitmap Origin Offset, Define	X	177
Character Rotation or Bar Code Ratio, Define	r	178
Clear All Data	<CAN>	98
Clear Data From Current Field	<DEL>	98
Code 39 Prefix Character, Define	p	181
Command Tables, Load	C	182
Command Terminator	;	218
Command Terminator 1	<NUL>	98
Command Terminator 2	<LF>	99
Communication Port Configuration, Set	<SI>P	122
Configuration Parameters, Transmit	<ESC>p	99
Control Panel Access Permission, Set	<SI>A	123
Current Edit Session, Save	N	182
Cut	<SO>	99
Cutter, Enable or Disable	<SI>c	124
Dark Adjust	K	218
Dark Adjust, Set	<SI>d	124
Data Shift - International Characters	<SUB>	99

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Data Source for Format in a Page, Define	e	183
Direct Graphics Mode, Select	<ESC>g	101
Direct Graphics Emulation Mode, Enable or Disable	<SI>o	125
Emulation Mode, Enter	<ESC>c	102
Emulation or Advanced Mode on Power-Up	<SI>C	125
End-of-Print Skip Distance, Set	<SI>D	126
Error Code, Request	<BEL>	91
Factory Defaults, Reset	D	219
Field, Delete	D	183
Field, Select	<ESC>F	102
Field Data, Define Source	d	184
Field Decrement, Set	<ESC>D	103
Field Direction, Define	f	186
Field Increment, Set	<ESC>I	104
Field Origin, Define	o	186
First Data Entry Field, Select	<ACK>	104
Font, Transmit	<ESC>v	105
Font Character Width, Define	z	187
Font Type, Select	c	189
Form Feed	<FF>	106
Format, Create or Edit	A or F	191
Format, Erase	E	193
Format, Select	<ESC>E	106
Format, Transmit	<ESC>x	108
Format Direction in a Page, Define	q	192
Format Offset Within a Page, Define	O	193
Format Position From Page, Delete	m	194
Format Position in a Page, Assign	M	194
Formats, Print	f	219
Graphic, Select	c	195
Graphic or UDC, Define	u	195
Hardware Configuration Label, Print	h	219
Height Magnification of Bar, Box, or UDC, Define	h	196
Human-Readable Field, Create or Edit	H	198
IBM Language Translation, Enable or Disable	<SI>i	128
Increment and Decrement, Disable	<ESC>N	109
Intercharacter Delay, Set	<SYN>	128
Intercharacter Space for UDF, Define	z	199
Interlabel Ribbon Save, Enable or Disable	<SI>s	128

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Interpretive Field, Edit	I	200
Interpretive Field, Enable or Disable	i	201
Label and Gap Length, Transmit	<ESC> L	92
Label Path Open Sensor Value, Transmit	L	219
Label Rest Point, Adjust	<SI>f	129
Label Retract, Enable or Disable	<SI>R	129
Label Retract Distance, Set	<SI>r	130
Label Stock Type, Select	<SI>T	130
Label Taken Sensor Value, Transmit	T	219
Label Width, Set	<SI>W	131
Length of Line or Box Field, Define	l	201
Line Field, Create or Edit	L	202
Maximum Label Length, Set	<SI>L	132
Media Fault Recovery Mode, Set	<SI>e	133
Media Sensitivity, Select	<SI>g	133
Memory Usage, Transmit	<ESC>m	110
Message Delay, Set	<ESC><SYN>	134
Next Data Entry Field, Select	<CR>	111
Number of Image Bands, Set	<SI>I	135
Numeric Field Separator	<FS>	111
Online or Offline on Power-Up	<SI>O	136
Options Selected, Transmit	<ESC>O	112
Outline Font, Clear or Create	J	202
Outline Font, Download	j	204
Page, Create or Edit	S	205
Page, Delete	s	206
Page, Select	<ESC>G	113
Page, Transmit	<ESC>y	113
Pages, Print	p	220
Pin 11/20 Protocol, Set	<SI>p	136
Pitch Label, Print	C	220
Pitch Size, Set	g	206
Point Size, Set	k	207
Postamble, Set	<EOT>	137
Preamble, Set	<SOH>	137
Print	<ETB>	114
Print Line Dot Count Limit, Set	v	208
Print Quality Label, Print	Q	220
Print Speed, Set	<SI>S	138

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Printer Language, Select	<SI>l	139
Printhead Loading Mode, Select	<SI>h	141
Printhead Parameters, Transmit	<ESC>H	114
Printhead Pressure, Set	<SI>H	142
Printhead Resistance Test, Begin	B	220
Printhead Resistance Values, Transmit	S	220
Printhead Temperature Sensor Value, Transmit	P	220
Printhead Test Parameters, Set	<SI>U	142
Printhead Volt Supply Value, Transmit	V	220
Program Mode, Enter	<ESC>P	114
Program Mode, Exit	R	208
Program Number, Transmit	<ESC>M	114
Quantity Count, Set	<RS>	115
Reflective Sensor Value, Transmit	M	221
Remaining Quantity and Batch Count, Transmit	<ESC>Q	92
Reset	<DLE>	92
RFID Parameters, Set	<SI>J	143
RFID Tag, Read	<ESC>J	115
RFID Tag Field Setup	a	208
RFID Tag Protect	n	213
RFID Tag Void Text, Set	<SI>K	144
RFID Tag Write Field, Create or Edit	Q	213
Ribbon Save Zones, Set	<SI>Z	144
Self-Strip, Enable or Disable	<SI>t	145
Slash Zero, Enable or Disable	<SI>z	146
Software Configuration Label, Print	s	221
Start and Stop Codes (Code 39), Print	<ESC><SP>	117
Status Dump	<VT>	93
Status Enquiry	<ENQ>	94
Takeup Motor Torque, Increase	<SI>b	147
Test and Service Mode, Enter	<ESC>T	117
Test and Service Mode, Exit	R	221
Top of Form, Set	<SI>F	147
Transmissive Sensor Value, Transmit	G	221
User-Defined Characters (UDC) and Graphics, Print	g	221
User-Defined Character, Clear or Create	G	214
User-Defined Character Field, Create or Edit	U	214
User-Defined Characters, Transmit	<ESC>u	117
User-Defined Font Character, Create	t	215

***Commands Listed by Name (continued)***

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
User-Defined Fonts, Print	t	221
User-Defined Tables, Transmit	<ESC>Z	118
Warm Boot	<BS>	118
Width of Line, Box, Bar, or Character, Define	w	216

## Commands Listed by Syntax

Syntax	IPL Command	Page
;	Command Terminator	218
<ACK>	First Data Entry Field, Select	104
<BEL>	Error Code, Request	91
<BS>	Warm Boot	118
<CAN>	Clear All Data	98
<CR>	Next Data Entry Field, Select	111
<DEL>	Clear Data From Current Field	98
<DLE>	Reset	92
<EM>	Abort Print Job	91
<ENQ>	Status Enquiry	94
<EOT>	Postamble, Set	137
<ESC>L	Label and Gap Length, Transmit	92
<ESC><SP>	Start and Stop Codes (Code 39), Print	117
<ESC><SYN>	Message Delay, Set	134
<ESC>c	Emulation Mode, Enter	102
<ESC>C	Advanced Mode, Select	96
<ESC>d	Auto-Transmit 2, Enable	121
<ESC>D	Field Decrement, Set	103
<ESC>e	Auto-Transmit 3, Enable	121
<ESC>E	Format, Select	106
<ESC>F	Field, Select	102
<ESC>g	Direct Graphics Mode, Select	101
<ESC>G	Page, Select	113
<ESC>H	Printhead Parameters, Transmit	114
<ESC>I	Field Increment, Set	104
<ESC>j	Auto-Transmit 1, Enable	121
<ESC>J	RFID Tag, Read	115
<ESC>k	Auto-Transmit 1, 2, and 3, Disable	122
<ESC>L	Label and Gap Length, Transmit	92
<ESC>m	Memory Usage, Transmit	110
<ESC>M	Program Number, Transmit	114
<ESC>N	Increment and Decrement, Disable	109
<ESC>O	Options Selected, Transmit	112
<ESC>p	Configuration Parameters, Transmit	99
<ESC>P	Program Mode, Enter	114
<ESC>Q	Remaining Quantity and Batch Count, Transmit	92

**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
<ESC>T	Test and Service Mode, Enter	117
<ESC>u	User-Defined Characters, Transmit	117
<ESC>v	Font, Transmit	105
<ESC>x	Format, Transmit	108
<ESC>y	Page, Transmit	113
<ESC>Z	User-Defined Tables, Transmit	118
<ETB>	Print	114
<FF>	Form Feed	106
<FS>	Numeric Field Separator	111
<GS>	Alphanumeric Field Separator	97
<LF>	Command Terminator 2	99
<NUL>	Command Terminator 1	98
<RS>	Quantity Count, Set	115
<SI>a	Audible Alarm, Enable or Disable	120
<SI>A	Control Panel Access Permission, Set	123
<SI>b	Takeup Motor Torque, Increase	147
<SI>c	Cutter, Enable or Disable	124
<SI>C	Emulation or Advanced Mode on Power-Up	125
<SI>d	Dark Adjust, Set	124
<SI>D	End-of-Print Skip Distance, Set	126
<SI>e	Media Fault Recovery Mode, Set	133
<SI>f	Label Rest Point, Adjust	129
<SI>F	Top of Form, Set	147
<SI>g	Media Sensitivity, Select	133
<SI>h	Printhead Loading Mode, Select	141
<SI>H	Printhead Pressure, Set	142
<SI>i	IBM Language Translation, Enable or Disable	128
<SI>I	Number of Image Bands, Set	135
<SI>J	RFID Parameters, Set	143
<SI>K	RFID Tag Void Text, Set	144
<SI>l	Printer Language, Select	139
<SI>L	Maximum Label Length, Set	132
<SI>N	Amount of Storage, Define	120
<SI>o	Direct Graphics Emulation Mode, Enable or Disable	125
<SI>O	Online or Offline on Power-Up	136
<SI>p	Pin 11/20 Protocol, Set	136
<SI>P	Communication Port Configuration, Set	122
<SI>r	Label Retract Distance, Set	130
<SI>R	Label Retract, Enable or Disable	129



**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
<SI>s	Interlabel Ribbon Save, Enable or Disable	128
<SI>S	Print Speed, Set	138
<SI>t	Self-Strip, Enable or Disable	145
<SI>T	Label Stock Type, Select	130
<SI>U	Printhead Test Parameters, Set	142
<SI>W	Label Width, Set	131
<SI>z	Slash Zero, Enable or Disable	146
<SI>Z	Ribbon Save Zones, Set	144
<SO>	Cut	99
<SOH>	Preamble, Set	137
<SUB>	Data Shift - International Characters	99
<SYN>	Intercharacter Delay, Set	128
<US>	Batch Count, Set	98
<VT>	Status Dump	93
a	RFID Tag Field Setup	208
A	Ambient Temperature, Transmit	218
A or F	Format, Create or Edit	191
b	Border Around Human-Readable Text, Define	175
B	Bar Code Field, Create or Edit	171
B	Printhead Resistance Test, Begin	220
c	Bar Code, Select Type	149
c	Font Type, Select	189
c	Graphic, Select	195
C	Command Tables, Load	182
C	Pitch Label, Print	220
d	Field Data, Define Source	184
D	Factory Defaults, Reset	219
D	Field, Delete	183
e	Data Source for Format in a Page, Define	183
E	Format, Erase	193
f	Field Direction, Define	186
f	Formats, Print	219
g	Pitch Size, Set	206
g	User-Defined Characters and Graphics, Print	221
G	Transmissive Sensor Value, Transmit	221
G	User-Defined Character, Clear or Create	214
h	Hardware Configuration Label, Print	219
h	Height Magnification of Bar, Box, or UDC, Define	196
H	Human-Readable Field, Create or Edit	198

**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
i	Interpretive Field, Enable or Disable	201
I	Interpretive Field, Edit	200
j	Outline Font, Download	204
J	Outline Font, Clear or Create	202
k	Point Size, Set	207
K	Dark Adjust	218
l	Length of Line or Box Field, Define	201
L	Label Path Open Sensor Value, Transmit	219
L	Line Field, Create or Edit	202
m	Format Position From Page, Delete	194
M	Format Position in a Page, Assign	194
M	Reflective Sensor Value, Transmit	221
N	Current Edit Session, Save	182
n	RFID Tag Protect	213
o	Field Origin, Define	186
O	Format Offset Within a Page, Define	193
p	Code 39 Prefix Character, Define	181
P	Pages, Print	220
P	Printhead Temperature Sensor Value, Transmit	220
q	Format Direction in a Page, Define	192
Q	Print Quality Label, Print	220
Q	RFID Tag Write Field, Create or Edit	213
r	Character Rotation or Bar Code Ratio, Define	178
R	Program Mode, Exit	208
R	Test and Service Mode, Exit	221
S	Page, Create or Edit	205
s	Page, Delete	206
S	Printhead Resistance Values, Transmit	220
s	Software Configuration Label, Print	221
t	User-Defined Font Character, Create	215
t	User-Defined Fonts, Print	221
T	Bitmap User-Defined Font, Clear or Define	175
T	Label Taken Sensor Value, Transmit	219
u	Graphic or UDC, Define	195
U	12 Volt Supply Value, Transmit	218
U	User-Defined Character Field, Create or Edit	214
v	Print Line Dot Count Limit, Set	208
V	Printhead Volt Supply Value, Transmit	220
w	Width of Line, Box, Bar, or Character, Define	216
W	Box Field, Create or Edit	177

**Commands Listed by Syntax (continued)**

Syntax	IPL Command	Page
x	Bitmap Cell Width for Graphic or UDF, Define	174
X	Character Bitmap Origin Offset, Define	177
y	Bitmap Cell Height for Graphic or UDF, Define	172
z	Intercharacter Space for UDF, Define	199
Z	Font Character Width, Define	187

**Commands Listed by Task**

This section focuses on the tasks that you will perform with IPL commands, such as editing bar code fields on a label. Each table presents a task and lists the IPL commands that you must use to perform that task. For example, to edit bar code fields while the printer is in Program mode, you must use all the commands shown in the second table in this section.



**Note:** This section does not list all the IPL commands, only the commands that are necessary to perform specific tasks. For a complete list of commands, see the table of contents, “Commands Listed by Name” starting on page 66 or “Commands Listed by Syntax” on page 71.

Some command names in this section have been modified slightly to indicate exactly how you will use the command to perform the task.

**Immediate Commands****System Commands**

Syntax	Command	Page
<BEL>	Error Code, Request	91
<DLE>	Reset	92
<EM>	Abort Print Job	91
<ENQ>	Status Enquiry	94
<VT>	Status Dump	93
<ESC>L	Label and Gap Length, Transmit	92
<ESC>Q	Remaining Quantity and Batch Count, Transmit	92

## Program Mode Commands

### *Bar Code Field Editing Commands*

Syntax	Command	Page
c	Bar Code, Select Type	149
d	Field Data, Define Source	184
f	Field Direction, Define	186
h	Height Magnification of Bar, Box, or UDC, Define	196
I	Interpretive Field, Enable or Disable	201
o	Field Origin, Define	186
p	Code 39 Prefix Character, Define	181
r	Character Rotation or Bar Code Ratio, Define	178
w	Width of Line, Box, Bar, or Character, Define	216

### *Bitmap User-Defined Font Editing Commands*

Syntax	Command	Page
t	User-Defined Font Character, Create	215
u	Graphic or UDC, Define	195
X	Character Bitmap Origin Offset, Define	177
x	Bitmap Cell Width for Graphic or UDF, Define	174
y	Bitmap Cell Height for Graphic or UDF, Define	172
Z	Font Character Width, Define	187
z	Intercharacter Space for UDF, Define	199

### *Box Field Editing Commands*

Syntax	Command	Page
f	Field Direction, Define	186
h	Height Magnification of Bar, Box, or UDC, Define	196
l	Length of Line or Box Field, Define	201
o	Field Origin, Define	186
w	Width of Line, Box, Bar, or Character, Define	216

**Format Editing Commands**

Syntax	Command	Page
B	Bar Code Field, Create or Edit	171
D	Field, Delete	183
H	Human-Readable Field, Create or Edit	198
I	Interpretive Field, Edit	200
L	Line Field, Create or Edit	202
Q	RFID Tag Write Field, Create or Edit	213
U	User-Defined Character Field, Create or Edit	214
W	Box Field, Create or Edit	177

**Human-Readable Field Editing Commands**

Syntax	Command	Page
b	Border Around Human-Readable Text, Define	175
c	Font Type, Select	189
d	Field Data, Define Source	184
f	Field Direction, Define	186
g	Pitch Size, Set	206
h	Height Magnification of Bar, Box, or UDC, Define	196
k	Point Size, Set	207
o	Field Origin, Define	186
r	Character Rotation or Bar Code Ratio, Define	178
w	Width of Line, Box, Bar, or Character, Define	216

**Interpretive Field Editing Commands**

Syntax	Command	Page
b	Border Around Human-Readable Text, Define	175
c	Font Type, Select	189
f	Field Direction, Define	186
g	Pitch Size, Set	206
h	Height Magnification of Bar, Box, or UDC, Define	196
k	Point Size, Set	207
o	Field Origin, Define	186
r	Character Rotation or Bar Code Ratio, Define	178
w	Width of Line, Box, Bar, or Character, Define	216

**Line Field Editing Commands**

Syntax	Command	Page
F	Field Direction, Define	186
l	Length of Line or Box Field, Define	201
o	Field Origin, Define	186
w	Width of Line, Box, Bar or Character, Define	216

**Page Editing Commands**

Syntax	Command	Page
e	Data Source for Format in a Page, Define	183
M	Format Position in a Page, Assign	194
m	Format Position From Page, Delete	194
O	Format Offset Within a Page, Define	193
q	Format Direction in a Page, Define	192

**Programming Commands**

Syntax	Command	Page
A	Format, Create or Edit	191
E	Format, Erase	193
F	Format, Create or Edit	191
G	User-Defined Character, Clear or Create	214
J	Outline Font, Clear or Create	202
N	Current Edit Session, Save	182
R	Program Mode, Exit	208
S	Page, Create or Edit	205
s	Page, Delete	206
T	Bitmap User-Defined Font, Clear or Define	175

**RFID Tag Editing Commands**

Syntax	Command	Page
a	RFID Tag Field Setup	208
d	Field Data, Define Source	184
n	RFID Tag Protect	213

**UDC Field Editing Commands**

Syntax	Command	Page
c	Graphic, Select	195
f	Field Direction, Define	186
h	Height Magnification of Bar, Box, or UDC, Define	196
o	Field Origin, Define	186
w	Width of Line, Box, Bar, or Character, Define	216

**UDC Editing Commands**

Syntax	Command	Page
u	Graphic or UDC, Define	195
x	Bitmap Cell Width for Graphic or UDF, Define	174
y	Bitmap Cell Height for Graphic or UDF, Define	172
j	Outline Font, Download	204
J	Outline Font, Clear or Create	202

## Print Mode Commands

### Configuration Commands

Syntax	Command	Page
<SI>a	Audible Alarm, Enable or Disable	120
<SI>A	Control Panel Access Permission, Set	123
<SI>b	Takeup Motor Torque, Increase	147
<SI>c	Cutter, Enable or Disable	124
<SI>C	Emulation or Advanced Mode on Power-Up	125
<SI>d	Dark Adjust, Set	124
<SI>D	End-of-Print Skip Distance, Set	126
<SI>e	Media Fault Recovery Mode, Set	133
<SI>f	Label Rest Point, Adjust	129
<SI>F	Top of Form, Set	147
<SI>g	Media Sensitivity, Select	133
<SI>h	Printhead Loading Mode, Select	141
<SI>H	Printhead Pressure, Set	142
<SI>i	IBM Language Translation, Enable or Disable	128
<SI>I	Number of Image Bands, Set	135
<SI>l	Printer Language, Select	139
<SI>J	RFID Parameters, Set	143
<SI>K	RFID Tag Void Text, Set	144
<SI>L	Maximum Label Length, Set	132
<SI>N	Amount of Storage, Define	120
<SI>o	Direct Graphics Emulation Mode, Enable or Disable	125
<SI>O	Online or Offline on Power-Up	136
<SI>p	Pin 11/20 Protocol, Set	136
<SI>r	Label Retract Distance, Set	130
<SI>R	Label Retract, Enable or Disable	129
<SI>s	Interlabel Ribbon Save, Enable or Disable	128
<SI>S	Print Speed, Set	138
<SI>t	Self-Strip, Enable or Disable	145
<SI>T	Label Stock Type, Select	130
<SI>U	Printhead Test Parameters, Set	142
<SI>W	Label Width, Set	131
<SI>z	Slash Zero, Enable or Disable	146
<SI>Z	Ribbon Save Zones, Set	144



**Print Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
<ACK>	First Data Entry Field, Select	104
<BS>	Warm Boot	118
<CAN>	Clear All Data	98
<CR>	Next Data Entry Field, Select	111
<DEL>	Clear Data From Current Field	98
<ESC>c	Emulation Mode, Select	102
<ESC>C	Advanced Mode, Select	96
<ESC>D	Field Decrement, Set	103
<ESC>E	Format, Select	106
<ESC>F	Field, Select	102
<ESC>g	Direct Graphics Mode, Select	101
<ESC>G	Page, Select	113
<ESC>H	Printhead Parameters, Transmit	114
<ESC>I	Field Increment, Set	104
<ESC>J	RFID Tag, Read	115
<ESC>m	Memory Usage, Transmit	110
<ESC>M	Program Number, Transmit	114
<ESC>N	Increment and Decrement, Disable	109
<ESC>O	Options Selected, Transmit	112
<ESC>p	Configuration Parameters, Transmit	99
<ESC>P	Program Mode, Enter	114
<ESC><SP>	Start and Stop Codes (Code 39), Print	117
<ESC>T	Test and Service Mode, Enter	117
<ESC>u	User-Defined Characters, Transmit	117
<ESC>v	Font, Transmit	105
<ESC>x	Format, Transmit	108
<ESC>y	Page, Transmit	113
<ESC>Z	User-Defined Tables, Transmit	118
<ETB>	Print	114
<FF>	Form Feed	106
<FS>	Numeric Field Separator	111
<GS>	Alphanumeric Field Separator	97
<LF>	Command Terminator 2	99
<NUL>	Command Terminator 1	98
<RS>	Quantity Count, Set	115
<SO>	Cut	99
<SUB>	Data Shift - International Characters	99
<US>	Batch Count, Set	98

**Protocol Modification Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
<EOT>	Postamble, Set	137
<ESC>d	Auto-Transmit 2, Enable	121
<ESC>e	Auto-Transmit 3, Enable	121
<ESC>j	Auto-Transmit 1, Enable	121
<ESC>k	Auto-Transmit 1, 2, and 3, Disable	122
<SI>p	Pin 11/20 Protocol, Set	136
<SI>P	Communication Port Configuration, Set	122
<ESC><SYN>	Message Delay, Set	134
<SOH>	Preamble, Set	137
<SYN>	Intercharacter Delay, Set	128

**Test and Service Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
;	Command Terminator	218
A	Ambient Temperature, Transmit	218
B	Printhead Resistance Test, Begin	220
C	Pitch Label, Print	220
D	Factory Defaults, Reset	219
f	Formats, Print	219
g	User-Defined Characters (UDC) and Graphics, Print	221
G	Transmissive Sensor Value, Transmit	221
h	Hardware Configuration Label, Print	219
K	Dark Adjust	218
L	Label Path Open Sensor Value, Transmit	219
M	Reflective Sensor Value, Transmit	221
p	Pages, Print	220
P	Printhead Temperature Sensor Value, Transmit	220
Q	Print Quality Label, Print	220
R	Test and Service Mode, Exit	221
s	Software Configuration Label, Print	221
S	Printhead Resistance Values, Transmit	220
t	User-Defined Fonts, Print	221
T	Label Taken Sensor Value, Transmit	219
U	12 Volt Supply Value, Transmit	218
V	Printhead Volt Supply Value, Transmit	220



# 7 IPL Command Reference

This chapter describes all of the IPL commands. The commands are grouped by type (Immediate, Print, Configuration, Program, and Test and Service) and alphabetized within each type.

The commands listed in this chapter are used for all Intermec printers. Each command explains syntax, defaults, ranges of values for the variables, and special notes for specific printers.

Convention	Description
< >	Angle brackets < > enclose mnemonic representations of ASCII control characters. For example, <ETX> represents the ASCII “End of Text” control character.
<i>data</i>	Italic text represents variable data, which you must replace with a real value. For example, <i>n</i> signifies a variable for which you must designate a constant value.
[ <i>data</i> ]	Italic text within brackets represents optional data.
<b>Ctrl</b>	Bold text represents a key on your keypad. For example, <b>Ctrl</b> represents the Ctrl key.
<b>Ctrl-Z</b>	When two keys are joined with a dash, press them simultaneously. For example, if you see the command <b>Ctrl-Z</b> , press the two keys at the same time.
E3 ; F3	Type all characters that appear in the Courier font by pressing an individual key on the keypad.

## Which Commands Does Your Printer Support?

The next table shows which commands are supported by each printer. A • indicates that the printer supports the command, and a blank space indicates that the printer ignores the command.

### Commands Supported By Each Printer

IPL Command	Page	3240	3400e	3400	3600	4100	4400	4400X	4400	741	P4C	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
12 Volt Supply Value, Transmit	218						•					
Abort Print Job	91	•	•	•	•	•	•	•	•	•	•	•
Advanced Mode, Select	96	•	•	•	•	•	•	•		•	•	•
Alphanumeric Field Separator	97	•	•	•	•	•	•	•	•	•	•	•
Ambient Temperature, Transmit	218						•					
Amount of Storage, Define	120	•	•			•	•			•	•	
Audible Alarm, Enable or Disable	120						•					• (i only)
Auto-Transmit 1, Enable	121	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 2, Enable	121	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 3, Enable	121	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 1, 2, and 3, Disable	122	•	•	•	•	•	•	•	•	•	•	•
Bar Code, Select Type	149	•	•	•	•	•	•	•	•	•	•	•
Bar Code Field, Create or Edit	171	•	•	•	•	•	•	•	•	•	•	•
Batch Count, Set	98	•	•	•	•	•	•	•	•	•	•	•
Bitmap Cell Height for Graphic or UDF, Define	172	•	•	•	•	•	•	•	•	•	•	•
Bitmap Cell Width for Graphic or UDF, Define	174	•	•	•	•	•	•	•	•	•	•	•
Bitmap User-Defined Font, Clear or Define	175	•	•	•	•	•	•	•	•	•	•	•
Border Around Human-Readable Text, Define	175	•	•	•	•	•	•	•	•	•	•	•
Box Field, Create or Edit	177	•	•	•	•	•	•	•	•	•	•	•
Character Bitmap Origin Offset, Define	177	•	•	•	•	•	•	•	•	•	•	•
Character Rotation or Bar Code Ratio, Define	178	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 0 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>P C 4 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Clear All Data	98	•	•	•	•	•	•	•	•	•	•	•	•
Clear Data From Current Field	98	•	•	•	•	•	•	•	•	•	•	•	•
Code 39 Prefix Character, Define	181	•	•	•	•	•	•	•	•	•	•	•	•
Command Tables, Load	182	•	•	•	•	•	•	•	•	•	•	•	•
Command Terminator	218	•	•	•	•	•	•	•	•	•	•	•	•
Command Terminator 1	98	•	•	•	•	•	•	•	•	•	•	•	•
Command Terminator 2	99	•	•	•	•	•	•	•	•	•	•	•	•
Communication Port Configuration, Set	122										•	•	•
Configuration Parameters, Transmit	99	•	•	•	•	•	•	•	•	•	•	•	•
Control Panel Access Permission, Set	123							•		•			• (i only)
Current Edit Session, Save	182	•	•	•	•	•	•	•	•	•	•	•	•
Cut	99		• (C, D)	•			•	•	•	•	•	•	•
Cutter, Enable or Disable	124		•	•			•	•	•	•	•	•	•
Dark Adjust	218				•								
Dark Adjust, Set	124	•	•	•	•	•	•	•	•	•	•	•	•
Data Shift – International Characters	99	•	•	•	•	•	•	•	•	•	•	•	•
Data Source for Format in a Page, Define	183	•	•	•	•	•	•	•	•	•	•	•	•
Direct Graphics Mode, Select	101		• (C, D)	•	•				•		•	•	•
Direct Graphics Emulation Mode, Enable or Disable	125											•	
Emulation Mode, Enter	102	•	•	•	•	•	•	•	•		•	•	•
Emulation or Advanced Mode on Power-Up	125	•	•	•	•	•	•	•	•		•	•	•
End-of-Print Skip Distance, Set	126	•	•	•	•	•	•	•	•	•	•	•	•
Error Code, Request	91	•	•	•	•	•	•	•	•	•	•	•	•
Factory Defaults, Reset	219	•	•	•	•	•	•	•	•	•	•	•	•
Field, Delete	183	•	•	•	•	•	•	•	•	•	•	•	•
Field, Select	102	•	•	•	•	•	•	•	•	•	•	•	•
Field Data, Define Source	184	•	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

IPL Command	Page	3	3	3	3	3	4	4	4	4	7	P	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
		2	4	4	4	6	1	4	4	X	4	C	
		4	0	0	4	0	0	0	X	3	2	4	
		0	0	0e	0	0	0	0	0	0	1	1	
Field Decrement, Set	103	•	•	•	•	•	•	•	•	•	•	•	•
Field Direction, Define	186	•	•	•	•	•	•	•	•	•	•	•	•
Field Increment, Set	104	•	•	•	•	•	•	•	•	•	•	•	•
Field Origin, Define	186	•	•	•	•	•	•	•	•	•	•	•	•
First Data Entry Field, Select	104	•	•	•	•	•	•	•	•	•	•	•	•
Font, Transmit	105	•	•	•	•	•	•	•	•	•	•	•	•
Font Character Width, Define	187	•	•	•	•	•	•	•	•	•	•	•	•
Font Type, Select	189	•	•	•	•	•	•	•	•	•	•	•	•
Form Feed	106	•	•	•	•	•	•	•	•	•	•	•	•
Format, Create or Edit	191	•	•	•	•	•	•	•	•	•	•	•	•
Format Direction in a Page, Define	192	•	•	•	•	•	•	•	•	•	•	•	•
Format, Erase	193	•	•	•	•	•	•	•	•	•	•	•	•
Format, Select	106	•	•	•	•	•	•	•	•	•	•	•	•
Format, Transmit	108	•	•	•	•	•	•	•	•	•	•	•	•
Format Offset Within a Page, Define	193	•	•	•	•	•	•	•	•	•	•	•	•
Format Position From Page, Delete	194	•	•	•	•	•	•	•	•	•	•	•	•
Format Position in a Page, Assign	194	•	•	•	•	•	•	•	•	•	•	•	•
Formats, Print	219		•	•	•				•		•	•	•
			(C, D)										
Graphic, Select	195	•	•	•	•	•	•	•	•	•	•	•	•
Graphic or UDC, Define	195	•	•	•	•	•	•	•	•	•	•	•	•
Hardware Configuration Label, Print	219		•	•	•				•		•	•	•
			(C, D)										
Height Magnification of Bar, Box, or UDC, Define	196	•	•	•	•	•	•	•	•	•	•	•	•
Human-Readable Field, Create or Edit	198	•	•	•	•	•	•	•	•	•	•	•	•
IBM Language Translation, Enable or Disable	128	•	•	•	•	•	•	•	•	•	•	•	•
Increment and Decrement, Disable	109	•	•	•	•	•	•	•	•	•	•	•	•
Intercharacter Delay, Set	128	•	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

IPL Command	Page	3 2 4	3 4 0	3 4 0	3 4 0e	3 6 0	4 1 0	4 4 0	4 4 X	4 X 3	7 4 2	P C 4	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
		0	0	0	0	0	0	0	0	0	1	1	
Intercharacter Space for UDF, Define	199	•	•	•	•	•	•	•	•	•	•	•	•
Interlabel Ribbon Save, Enable or Disable	128						•						
Interpretive Field, Edit	200	•	•	•	•	•	•	•	•	•	•	•	•
Interpretive Field, Enable or Disable	201	•	•	•	•	•	•	•	•	•	•	•	•
Label and Gap Length, Transmit	92	•	•	•	•	•	•	•	•	•	•	•	•
Label Path Open Sensor Value, Transmit	219	•		•	•			•	•	•	•	•	•
Label Rest Point, Adjust	129	•	•	•	•	•	•	•	•	•	•	•	•
Label Retract, Enable or Disable	129	•	•	•	•	•	•	•	•	•	•	•	•
Label Retract Distance, Set	130	•	•	•	•	•	•	•	•	•	•	•	•
Label Stock Type, Select	130	•	•	•	•	•	•	•	•	•	•	•	•
Label Taken Sensor Value, Transmit	219	•	•	•	•	•	•	•	•	•	•	•	•
				(400 dpi only)									
Label Width, Set	131							•	•		•	•	
Length of Line or Box Field, Define	201	•	•	•	•	•	•	•	•	•	•	•	•
Line Field, Create or Edit	202	•	•	•	•	•	•	•	•	•	•	•	•
Maximum Label Length, Set	132	•	•	•	•	•	•	•	•	•	•	•	•
Media Fault Recovery Mode, Set	133			•					•		•	•	•
Media Sensitivity, Select	133	•	•	•	•	•	•	•	•	•	•	•	•
Memory Usage, Transmit	110	•	•		•	•	•			•	•	•	•
Message Delay, Set	134	•	•	•	•	•	•	•	•	•	•		
Next Data Entry Field, Select	111	•	•	•	•	•	•	•	•	•	•	•	•
Number of Image Bands, Set	135	•	•	•	•	•	•	•			•	•	
Numeric Field Separator	111	•	•	•	•	•	•	•	•	•	•	•	•
Online or Offline on Power-Up	136							•		•			
Options Selected, Transmit	112	•	•	•	•	•	•	•	•	•	•	•	•
Outline Font, Clear or Create	202	•	•	•	•	•	•	•	•	•	•	•	•
Outline Font, Download	204	•	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 4 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>P C 4 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Page, Create or Edit	205	•	•	•	•	•	•	•	•	•	•	•	•
Page, Delete	206	•	•	•	•	•	•	•	•	•	•	•	•
Page, Select	113	•	•	•	•	•	•	•	•	•	•	•	•
Page, Transmit	113	•	•	•	•	•	•	•	•	•	•	•	•
Pages, Print	220		• (C, D)	•					•		•	•	•
Pin 11/20 Protocol, Set	136			•					•		•	•	
Pitch Label, Print	220	•	•	•	•			•	•	•	•	•	•
Pitch Size, Set	206	•	•	•	•	•	•	•	•	•	•	•	
Point Size, Set	207	•	•	•	•	•	•	•	•	•	•	•	•
Postamble, Set	137	•	•	•	•	•	•	•	•	•	•	•	•
Preamble, Set	137	•	•	•	•	•	•	•	•	•	•	•	•
Print	114	•	•	•	•	•	•	•	•	•	•	•	•
Print Line Dot Count Limit, Set	208												
Print Quality Label, Print	220	•	•	•	•	•	•	•	•	•	•	•	•
Print Speed, Set	138	•	•	•	•	•	•	•	•	•	•	•	•
Printer Language, Select	139	•	•	•	•	•	•	•	•	•	•	•	•
Printhead Loading Mode, Select	141		• (C, D)	•	•	•			•		•	•	•
Printhead Parameters, Transmit	114	•	•	•	•	•	•	•	•	•	•	•	•
Printhead Pressure, Set	142							•					
Printhead Resistance Test, Begin	220							•					
Printhead Resistance Values, Transmit	220							•					
Printhead Temperature Sensor Value, Transmit	220	•	•	•	•	•	•	•	•	•	•	•	•
Printhead Test Parameters, Set	142							•					
Printhead Volt Supply Value, Transmit	220							•					
Program Mode, Enter	114	•	•	•	•	•	•	•	•	•	•	•	•
Program Mode, Exit	208	•	•	•	•	•	•	•	•	•	•	•	•
Program Number, Transmit	114	•	•	•	•	•	•	•	•	•	•	•	•
Quantity Count, Set	115	•	•	•	•	•	•	•	•	•	•	•	•



**Commands Supported By Each Printer (continued)**

IPL Command	Page	3	3	3	3	3	4	4	4	4	7	P	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
		2	4	4	4	6	1	4	4	X	4	C	
		4	0	0	4	0	0	0	X	3	2	4	
		0	0	0e	0	0	0	0	0	0	1	1	
Reflective Sensor Value, Transmit	221	•	•	•	•	•	•	•	•	•	•	•	•
Remaining Quantity and Batch Count, Transmit	92	•	•	•	•	•	•	•	•	•	•	•	•
Reset	92	•	•	•	•	•	•	•	•	•	•	•	•
RFID Parameters, Set	143												• (PM4i)
RFID Tag, Read	115												• (PM4i)
RFID Tag Field Setup	208												• (PM4i)
RFID Tag Protect	213												• (PM4i)
RFID Tag Void Text, Set	144												• (PM4i)
RFID Tag Write Field, Create or Edit	213												• (PM4i)
Ribbon Save Zones, Set	144						•						
Self-Strip, Enable or Disable	145	•	•	•	•	•	•	•	•	•	•	•	•
Slash Zero, Enable or Disable	146			•						• (e)			•
Software Configuration Label, Print	221		• (C, D)	•	•					•		•	•
Start and Stop Codes (Code 39), Print	117	•	•	•	•	•	•	•	•	•	•	•	•
Status Dump	93	•	•	•	•	•	•	•	•	•	•	•	•
Status Enquiry	94	•	•	•	•	•	•	•	•	•	•	•	•
Takeup Motor Torque, Increase	147									•			
Test and Service Mode, Enter	117	•	•	•	•	•	•	•	•	•	•	•	•
Test and Service Mode, Exit	221	•	•	•	•	•	•	•	•	•	•	•	•
Top of Form, Set	147	•	•	•	•	•	•	•	•	•	•	•	•
Transmissive Sensor Value, Transmit	221	•	•	•	•	•	•	•	•	•	•	•	•
User-Defined Characters (UDC) and Graphics, Print	221		• (C, D)	•	•					•		•	•
User-Defined Character, Clear or Create	214	•	•	•	•	•	•	•	•	•	•	•	•
User-Defined Character Field, Create or Edit	214	•	•	•	•	•	•	•	•	•	•	•	•
User-Defined Characters, Transmit	117	•	•	•	•	•	•	•	•	•	•	•	•
User-Defined Font Character, Create	215	•	•	•	•	•	•	•	•	•	•	•	•
User-Defined Fonts, Print	221		• (C, D)	•	•					•			•

**Commands Supported By Each Printer (continued)**

IPL Command	Page	3	3	3	3	3	4	4	4	4	7	P	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
		2	4	4	4	6	1	4	4	X	4	C	
		4	0	0	4	0	0	0	X	3	2	4	
		0	0	0e	0	0	0	0	0	0	1	1	
User-Defined Tables, Transmit	118	•	•	•	•	•	•	•	•	•	•	•	
Warm Boot	118	•	•	•	•	•	•	•	•	•	•	•	•
Width of Line, Box, Bar, or Character, Define	216	•	•	•	•	•	•	•	•	•	•	•	•

## Immediate Commands

You can use Immediate commands to query the printer about the status of the printer and any print jobs, to abort print jobs, to request error conditions, and to reset the printer.

Unlike other commands that the printer stores in the data buffer and executes in the order received, the printer executes immediate commands when it receives them, regardless of printer mode.

For help downloading Immediate commands to the printer, see “Sending IPL Commands to the Printer” on page 5.

### Abort Print Job

**Purpose:** Stops batch printing.

**Syntax:** <EM>

**Notes:** The printer stops the current batch print job. The batch quantity count is reset to the original setting. The printer continues to execute other commands remaining in the buffer.

### Error Code, Request

**Purpose:** Solicits error codes from the printer.

**Syntax:** <BEL>

**Notes:** The printer sends back the most recent error code as an ASCII number. The error code represents a command syntax error or a printer RAM usage error.

If no errors have occurred since the printer was turned on, the printer sends a zero. It also resets the error code to 00.

See Chapter 4, “Troubleshooting,” for a list of error codes.

## Label and Gap Length, Transmit

**Purpose:** Transmits the label and gap length as measured by the number of 5 mil increments.

**Syntax:** <ESC>L

**Notes:** Label length refers to the length of the label currently being processed. If the label is longer than the distance between the label sensor and the printhead, the printer transmits the length of the previous label.

If you select continuous stock, the printer transmits the length defined by the Maximum Label Length, Set command (<SI>L).

## Remaining Quantity and Batch Count, Transmit

**Purpose:** Uploads the remaining quantity and batch counts for the current print job.

**Syntax:** <ESC>Q

## Reset

**Purpose:** Executes a printer power-up reset immediately.

**Syntax:** <DLE>

**Notes:** The printer erases all data and commands in the input buffer upon reset. In the following example, the first DLE is a transparency character. It instructs the printer to use the <DLE> as a reset command.

<STX><DLE><DLE><ETX>

## Status Dump

**Purpose:** Causes the printer to upload all current printer status.

**Syntax:** <VT>

**Printers:**

Printer	Notes
3240	The 3240 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3400	The 3400 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
3400e	The 3400e printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail. Only the 400 dpi version uploads <US> label path open.
3440	The 3440 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3600	The 3600 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4100	The 4100 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4400	The 4400 printer does not upload <BS> Takeup reel full.
44X0	The 4420 and 4440 printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.
4X30	The 4630 and 4830 printers do not upload <SO> Printhead test fail.
7421, PC41	The 7421 and PC41 printers do not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	These printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.

**Notes:** The printer uploads the status in the following order of priority for Intermec Standard Protocol. See Appendix D for codes for other protocols.

<GS>	Buffer already full	<BS>	Takeup reel full
<SO>	Printhead test fail	<SI>	Printhead hot
<US>	Label path open	<FS>	Label at strip pin
<US>	Ribbon fault	<ACK>	RFID tag write okay
<EM>	No label stock	<DC1>	Skipping
<DC3>	Buffer now full	<DC1>	Printing
<EOT>	RFID tag write error	<DC1>	Ready
<VT>	RFID Tag read error		

## Status Enquiry

**Purpose:** Transmits the current printer status to the host.

**Syntax:** <ENQ>

**Printers:**

Printer	Notes
3240	The 3240 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3400	The 3400 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
3400e	The 3400e printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail. Only the 400 dpi version uploads <US> Label path open.
3440	The 3440 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3600	The 3600 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4100	The 4100 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4400	The 4400 printer does not upload <BS> Takeup reel full.
44X0	The 4420 and 4440 printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.
4X30	The 4630 and 4830 printers do not upload <SO> Printhead test fail.
7421, PC41	The 7421 and PC41 printers do not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	These printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.

**Notes:** The printer uploads the status in the following order of priority for Intermec Standard Protocol. See Appendix D for codes for other protocols.

<GS>	Buffer already full	<BS>	Takeup reel full
<SO>	Printhead test fail	<SI>	Printhead hot
<US>	Label path open	<FS>	Label at strip pin
<US>	Ribbon fault	<ACK>	RFID tag write okay
<EM>	No label stock	<DC1>	Skipping
<DC3>	Buffer now full	<DC1>	Printing
<EOT>	RFID tag write error	<DC1>	Ready
<VT>	RFID Tag read error		

## Print Commands

You can use print commands to pass data to formats and print labels. When using print commands with printers with RFID modules, these commands pass data to formats and print labels. Print mode is used for uploading information from an RFID tag, for example, reading tag information.

When you enter data into a format for printing, the printer uses a field pointer to designate the field in the format where the data should print. If you choose a new format, the field pointer automatically points to the lowest numbered data entry field and continues to point to that field until you select a different field or format. If you select a field by using the <CR> or <ESC>F command, new data entered into the field overwrites any data already existing in the field.

Print commands are effective when the printer is in Print mode. You can switch to Print mode with this command:

```
<STX>R<ETX>
```

For help downloading print commands to the printer, see “Sending IPL Commands to the Printer” on page 5.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The next command in the message terminates all Print mode commands. The command separator (<NUL> or <LF>) is optional between commands, but is necessary to separate commands from data. For example, to separate the <ESC>F command from data, type:

```
<ESC>F4<NUL>data
```

## Advanced Mode, Select

**Purpose:** Instructs the printer to operate in Advanced mode. Advanced mode is the default mode; the alternative operating mode is Emulation mode.

**Syntax:** <ESC>C*n*  
where *n* specifies the dot size.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
3240	<i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	
3400e	200 dpi: Not available 400 dpi: <i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	The <i>n</i> parameter is not available on the 3400e with the 200 dpi option.
3440	<i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	
44X0	4420: Not available 4440: <i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	The <i>n</i> parameter is not available on the 4420.

**Notes:** The field pointer designates the first field in format 0. Page 0 is the default page.

You will lose all previously host-entered data when you switch operating modes.



## Alphanumeric Field Separator

**Purpose:** Increments or decrements alphanumeric characters within a field-separated region. You must enclose the data between two sets of <GS> commands:

<GS>data<GS>

**Syntax:** <GS>

Alphanumeric characters are 0 to 9 and A to Z. The order of the characters is 0, 1, 2...8, 9, A, B, C...Y, Z, 0, 1...9, A, B....

**Notes:** You may have more than one region in a field as long as they do not overlap. Each region independently increments or decrements according to the increment or decrement value specified for the field. The length of data does not change. Rather, the values increment or decrement as in an odometer. For example, 9 increments to 0, and Z increments to A.

This command marks the region of characters to increment or decrement, but it does not actually increment or decrement. The printer ignores any non-alphanumeric characters within this region.

The following example illustrates the Alphanumeric Field Separator command:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H1;o175,10;f3;c2;h2;w2;b10;<ETX>
<STX>H2;o75,10;f3;c2;h2;w2;b10;<ETX>
<STX>H3;o200,10;f3;c7;h2;w2<ETX>
<STX>H4;o100,10;f3;c7;h2;w2<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><CR><ESC>I1<GS>A<GS><ETX>
<STX><CR><ESC>D1<GS>C<GS><ETX>
<STX><CR>Increment Field<ETX>
<STX><CR>Decrement Field<ETX>
<STX><RS>3<ETB><ETX>
```

## Batch Count, Set

**Purpose:** Sets the number of labels to be printed in the next batch.

**Syntax:** <US>*n*  
where *n* is the number of labels.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	1 to 9999	All printers support this command the same way.

**Notes:** This command causes the printer to make *n* copies of the same label. The total number of labels printed per print command is equal to the quantity in each batch multiplied by the number of batches.

The printer generates an error code (21) if *n* is out of range.

See your printer user's manual for help optimizing image bands for batch printing.

## Clear All Data

**Purpose:** Clears all host-entered data from the current page or format.

**Syntax:** <CAN>

**Notes:** If you select a format, the pointer indicates the first data entry field in the format after you clear the data. If you select a page, the pointer designates the first data entry field in the first format.

## Clear Data From Current Field

**Purpose:** Deletes data from the current field.

**Syntax:** <DEL>

**Notes:** The field pointer continues to designate the current field even after you clear the data.

## Command Terminator 1

**Purpose:** Terminates the current command.

**Syntax:** <NUL>

## Command Terminator 2

**Purpose:** Terminates the current command.

**Syntax:** <LF>

## Configuration Parameters, Transmit

**Purpose:** Uploads the current configuration commands from the printer.

**Syntax:** <ESC>p

**Notes:** The printer transmits only the configuration parameters that you can set from the host.

Use this command to view, edit, or copy the current configuration command settings.

See your printer user's manual for a list of the configuration parameters that the printer uploads to the host.

## Cut

**Purpose:** Advances the label out to the cutter and cuts the label stock.

**Syntax:** <SO>

**Notes:** This command is executed only if the cutter is installed but not enabled. Use this command only after you have printed a batch of labels.

## Data Shift – International Characters

**Purpose:** Allows you to enter selected command characters as data.

**Syntax:** <SUB> or <DLE>

**Notes:** In Emulation mode, this command shifts the next character (if not a control character) into the upper character bank (setting the eighth bit to 1) to print international characters.

This command lets you enter selected command characters as data instead of commands in both Advanced and Emulation mode. For example, use this command to enter a <GS> or <CR> as data in a bar code or text field.

**Data Shift – International Characters (continued)**

Use <SUB> to send the following command characters as data:

<ACK>	<DC4>	<FF>	<NUL>	<SYN>
<BEL>	<EM>	<FS>	<RS>	<US>
<BS>	<ENQ>	<GS>	<SI>	<VT>
<CAN>	<EOT>	<HT>	<SO>	
<CR>	<ESC>	<LF>	<SOH>	
<DC2>	<ETB>	<NAK>	<SUB>	

Use <DLE> to send these command characters as data:

<DC1>	<DC3>	<STX>	<ETX>
-------	-------	-------	-------

To send <DLE> as data, preface it with the command <SUB><DLE>.

This example illustrates using the Data Shift command to print control or command characters in a data field.

```

<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o750,10;f3;c0;h3;w2;b10;d0,50<ETX>
<STX>B1;o300,10;f3;c0;h200;w1;i1;r2<ETX>
<STX>B2;o600,10;f3;c0;h200;w1;i1;r2<ETX>
<STX>I1;o75,10;f3;c0;h3;w3<ETX>
<STX>I2;o375,10;f3;c0;h3;w3<ETX>
<STX>R<ETX>
<STX><ESC>E1<ETX>
<STX><CAN><ETX>
<STX>Example for printing control codes<CR><ETX>
<STX><SUB><NUL><SUB><SOH><DLE><STX><DLE><ETX><SUB><EOT>
<SUB><ENQ><SUB><ACK><SUB><BEL><SUB><BS><SUB><HT><SUB><LF>
<SUB><VT><SUB><FF><SUB><CR><SUB><SO><SUB><SI>
<SUB><DLE><DLE>
<SUB><DC1><SUB><DC2><ETX>
<STX><CR><ETX>
<STX><SUB><DC3><SUB><DC4><SUB><NAK><SUB><SYN><SUB><ETB>
<SUB><CAN><SUB><EM><SUB><SUB><SUB>
<ESC><SUB><FS><SUB><GS><SUB><RS><SUB><US><ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>

```

## Direct Graphics Mode, Select

**Purpose:** Allows you to download graphic images directly into image memory without storing them in nonvolatile RAM.

**Syntax:** <ESC>*gm*  
where *m* specifies the format of the data to follow.

### Printers:

Printer	Default	Values for <i>m</i>	Notes
3400C, 3400e	<i>m</i> = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	When the printer is in Direct Graphics mode, the printer treats all Immediate commands as Direct Graphics commands.
3440	<i>m</i> = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
44X0	<i>m</i> = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
7421, PC41	<i>m</i> = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	<i>m</i> = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	When the printer is in Direct Graphics mode, the printer treats all Immediate commands as Direct Graphics commands.

**Notes:** For more information on direct graphics, see Appendix E, “Using Direct Graphics Mode.”

## Emulation Mode, Enter

**Purpose:** Instructs the printer to operate in Emulation mode. The default is Advanced Mode.

**Syntax:** <ESC>*cn*  
where *n* specifies the dot size.

**Printers:**

Printer	Default	Values for <i>n</i>
All	<i>n</i> = 0	0 = 10 mil (0.010 inch) dot size 1 = 15 mil (0.015 inch) dot size for bar codes only (other fields are 10 mil)

**Notes:** Emulation mode lets you print bar code labels that were designed on an 86XX printer in multiples of 10 or 15 mil.

The field pointer designates the first field in format 0.

You disable the page select command and lose all previously host-entered data.

## Field, Select

**Purpose:** Selects a data field for entering or working with data.

**Syntax:** <ESC>*F**n* or <ESC>*F*"*name*"  
where *n* is the number of the field.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 0	0 to 199	All printers support this command the same way.

**Notes:** The parameter for this command can either be the field number or the field name, but not both. If neither is present, the printer defaults to 0.

If you use the field number, the printer enters all following data into field *n*. If you use the field *name*, the printer enters all following data into all fields with the specified name in the current format or page. You must bracket the field *name* with quotation marks (" ").

The printer generates an error code (38) if you enter an invalid field number.

**Field, Select (continued)**

The following example illustrates employing the Field, Select command to enter data into a field identified by a number:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o450,50;c0;f3;h3;w2;b10;d0,35<ETX>
<STX>H1;o300,50;c0;h2;w2;f3<ETX>
<STX>B2;o250,50;c0,3;f3;h200;w2;i1;<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><ESC>F0<DEL>Example printing by field number<ETX>
<STX><ESC>F1<DEL>This is a test<ETX>
<STX><ESC>F2<DEL>Test<ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
```

The following example illustrates employing the Field, Select command to enter data into a field identified by a name:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0,Example;o450,50;c0;f3;h3;w2;b10;d0,35<ETX>
<STX>H1,Text;o300,50;c0;h2;w2;f3<ETX>
<STX>B2,Barcode;o250,50;c0,3;f3;h200;w2;i1;<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><ESC>F"Example"<DEL>Example printing by field
name<ETX>
<STX><ESC>F"Text"<DEL>This is a test<ETX>
<STX><ESC>F"Barcode"<DEL>Test<ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
```

**Field Decrement, Set**

**Purpose:** Sets the field decrement value for the selected field.

**Syntax:** <ESC>D*n*  
where *n* is the field decrement value.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	0 to 9999	All printers support this command the same way.

**Field Decrement, Set (continued)**

**Notes:** In the section of data separated by <FS> or <GS>, the printer decrements the values in data entry fields by *n* after it prints each batch.

The printer generates an error code (22) if the decrement value is out of range.

**Field Increment, Set**

**Purpose:** Sets the increment value for the selected field.

**Syntax:** <ESC>I*n*  
where *n* is the increment value.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	1 to 9999	All printers support this command the same way.

**Notes:** In the section of data separated by <FS> or <GS>, the printer increments the values in data entry fields by *n* after it prints each batch. You must use this command when you are defining a format in Programming mode. This example shows how to use the field increment command:

```
<STX><ESC>E5<CAN><ETX>
<STX>Lot 23455 262948<CR><FS>307 91747<FS><ESC>I2<ETX>
<STX><RS>5<ETB><ETX>
```

The printer generates an error code (22) if the increment value is out of range.

**First Data Entry Field, Select**

**Purpose:** Sets the field pointer to the lowest numbered data entry field that can accept Print mode data.

**Syntax:** <ACK>

**Notes:** This command ensures that data prints in the field with the lowest number if you do not want to specify a data field by its field number.



## Font, Transmit

**Purpose:** Uploads a font from the printer in the form of commands and data the printer receives to create the font.

**Syntax:** <ESC>vn  
where *n* is the font ID number.

**Printers:**

Printer	Default	Values for n
3240	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
3400A	None	0 to 24
3400B 3400C 3400D	None	0 to 25, 30 to 41, and 50 to 56 with the Kanji option
3400e	None	0 to 28, 30 to 41 and 50 to 56 with the Kanji option
3440	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
3600	None	0 to 25, 30 to 41, and 50 to 56 with the Kanji option
4100	None	0 to 24
4400	None	0 to 25
44X0	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
4X30	None	0 to 28, 30 to 41
7421, PC41	None	0 to 28, 30 to 41
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	None	0 to 28, 30 to 41

**Notes:** You can set *n* to a number from 0 to 56, depending on the fonts your printer supports. The font names are listed in the “Values for *n*” table on page 190.

**Font, Transmit (continued)**

If you send <ESC>v to the printer without specifying a value for the *n* parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire user-defined fonts directory. The directory appears in this format:

```
IDnumber, name, type, storagesize<CR><LF>
```

where:

*IDnumber* is the font number that was specified by *n* in the command that created the user-defined font.

*name* is the optional font name that may have been specified by *,name* in the command that created the user-defined font.

*type* is 200 for Bitmap fonts, 300 for Speedo outline fonts, or 301 for TrueType fonts.

*storagesize* is 0 for resident fonts.

Always transmit fonts in Advanced mode.

The target printer remains in Advanced mode. The printer generates an error code (27) if you enter an invalid number.

**Form Feed**

**Purpose:** Feeds a label out to the next print point.

**Syntax:** <FF>

**Notes:** If you use self-strip, the printer feeds out one blank label to the strip pin, skipping an entire label. If you use batch operation with die-cut label stock, the label moves to the tear bar.

If you use continuous label stock, the label stock moves the same amount as the end-of-print skip distance.

**Format, Select**

**Purpose:** Selects a format for data entry or printing.  
(RFID) If you have fixed data, this command writes to the RFID tag.

**Syntax:** <ESC>En [ , m]

where:

*n* is the numeric format ID.

*m* specifies to reimage only changed fields.

**Format, Select (continued)****Printers:**

Printer	Default	Values for n	Values for m	Notes
3240	n = 0	0 to 99	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
3400A 3400B	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
3400C 3400D	n = 0	*, 0 to 19	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3400e	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3440	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3600	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
4400	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
44X0	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
4X30	n = 0	0 to 19	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
7421, PC41	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.

**Format, Select (continued)**

**Notes:** If you select a page other than 0, *n* is an alphabetic format position within the page with a range from a to z.

After you select the format, the field pointer points to the lowest numbered data entry field.

The printer must be able to completely image a label, within the available number of image bands, for the reimaging command to work and retain the image. The printer starts imaging the label as soon as it receives the command to select a format.

The printer clears all host entered/variable data from this format.

The printer generates an error code (36) if you enter an invalid format number.

**Format, Transmit**

**Purpose:** Uploads a format from the printer in the form of commands and data the printer uses to create the format.

**Syntax:** <ESC>*xn*  
where *n* is the format ID number.

**Printers:**

Printer	Default	Values for <i>n</i>
3240	None	0 to 19
3400A 3400B	None	0 to 19
3400C 3400D 3400e	None	0 to 99
3440	None	0 to 99
3600	None	0 to 19
4100	None	0 to 19
4400	None	0 to 19
44X0	None	0 to 99
4X30	None	0 to 19
7421, PC41	None	0 to 99
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	None	0 to 99

**Format, Transmit (continued)**

**Notes:** If you send <ESC>x to the printer without specifying a value for the n parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire format directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storagesize] <CR><LF>
```

where:

*IDnumber* is the format number that was specified by n in the command that created the format.

*name* is the optional format name that may have been specified by ,name in the command that created the format.

*type* is 0 for formats.

*storagesize* is the number of bytes needed to store the format.

The target printer remains in Advanced mode.

The printer generates an error code (25) if you enter an invalid number.

**Increment and Decrement, Disable**

**Purpose:** Resets any increment or decrement flags for the current field.

**Syntax:** <ESC>N

## Memory Usage, Transmit

**Purpose:** Uploads information on the amount of memory installed or allocated and the amount of memory not being used.

**Syntax:** <ESC>mn

where *n* specifies the type of the memory.

**Printers:**

Printer	Default	Values for n
3400e	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
3440	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
44X0	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.

**Notes:** The printer uploads the amount of total storage memory available for formats, fonts, and UDCs. The amount of available RAM not being used follows the amount of total RAM. The printer separates the numbers by a comma: 32,10.

This command was called Storage Area Usage, Transmit in older versions of the 3240, 3400, and 3600 printer manuals. This command is called Static RAM Usage, Transmit in the 4400 printer manual.

## Next Data Entry Field, Select

**Purpose:** Moves the field pointer to the next data entry field.

**Syntax:** <CR>

**Notes:** If you have not selected a page and the pointer is designating the last field, the field pointer moves back to the first data entry field in the format. If you selected a multifORMAT page and the field pointer is pointing to the last field in a format, it moves to the first field in the next format.

## Numeric Field Separator

**Purpose:** Specifies which numeric data within a field to increment or decrement. You must enclose the data between two sets of <FS> commands:

<FS>data<FS>

**Syntax:** <FS>

**Notes:** You can have more than one region per field as long as they do not overlap. The printer independently increments or decrements each region according to the increment or decrement value specified for the field. The length of data does not change. Rather, the values increment or decrement as in an odometer: 9 increments to 0. The printer ignores any non-numeric characters within the region.

The following example illustrates the Numeric Field Separator command:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H1;o175,10;f3;c2;h2;w2;b10;<ETX>
<STX>H2;o75,10;f3;c2;h2;w2;b10;<ETX>
<STX>H3;o200,10;f3;c7;h2;w2<ETX>
<STX>H4;o100,10;f3;c7;h2;w2<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><CR><ESC>I1<FS>1<FS><ETX>
<STX><CR><ESC>D1<FS>10<FS><ETX>
<STX><CR>Increment Field<ETX>
<STX><CR>Decrement Field<ETX>
<STX><RS>3<ETB><ETX>
```

## Options Selected, Transmit

**Purpose:** Uploads the list of selected options.

**Syntax:** <ESC>O

**Printers:**

Printer	Values Returned by Printer
3240	0 = No options selected 4 = Self-strip
3400A 3400B	0 = No options selected 4 = Self-strip
3400C 3400D	0 = No options selected 1 = Cutter 4 = Self-strip
3400e	0 = No options selected 1 = Cutter 4 = Self-strip
3440	0 = No options selected 4 = Self-strip
3600	0 = No options selected 4 = Self-strip
4100	0 = No options selected 1 = Cutter 4 = Self-strip 5 = Ribbon save
4400	0 = No options selected 1 = Cutter 2 = Batch takeup 3 = Self-strip and applicator 4 = Self-strip
44X0	0 = No options selected 1 = Cutter 2 = Batch takeup (if you have the option installed) 4 = Self-strip
4X30	0 = No options selected 1 = Cutter 2 = Batch takeup 3 = Self-strip and applicator 4 = Self-strip
7421, PC41	0 = No options selected 1 = Cutter
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	0 = No options selected 1 = Cutter 4 = Self-strip
EasyCoder PM4i (RFID)	0 = No options selected 1 = Cutter 4 = Self-strip 6 = RFID



## Page, Select

**Purpose:** Selects a page for data entry or printing.

**Syntax:** <ESC>G*n*  
where *n* is the page ID number.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 0	0 to 9	All printers support this command the same way.

**Notes:** After you select the page, the field pointer points to the lowest numbered data entry field of the lowest position format.

The printer clears all host-entered data from this page.

The printer generates an error code (36) if you enter an invalid page number.

## Page, Transmit

**Purpose:** Uploads a page from the printer in the form of commands used to create a format. It also uploads all formats in a page.

**Syntax:** <ESC>y*n*  
where *n* is the page ID number.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	None	1 to 9	All printers support this command the same way.

**Notes:** If you send <ESC>y to the printer without specifying a value for the *n* parameter, the printer uploads the entire page directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storage size]<CR><LF>
```

where:

*IDnumber* is the page number that was specified by *n* in the command that created the page.

*name* is the optional page name that may have been specified by ,name in the command that created the page.

### **Page, Transmit (continued)**

*type* is 1 for pages.

*storagesize* is always 0 for a page.

The target printer remains in Advanced mode. The printer generates an error code (26) if you enter an invalid number.

## **Print**

**Purpose:** Prints the current page or format with previously entered data.  
(RFID) Writes data to the RFID tag.

**Syntax:** <ETB>

## **Printhead Parameters, Transmit**

**Purpose:** Transmits the number and size of dots in the printhead back to the host.

**Syntax:** <ESC>H

**Notes:** Here is an example of what you can expect to see: 896,5.0.

## **Program Mode, Enter**

**Purpose:** Causes the printer to enter Program mode for the purpose of creating or editing pages, formats, fonts, or graphics.

**Syntax:** <ESC>P

**Notes:** When this command is executed, you lose all previously entered data.

## **Program Number, Transmit**

**Purpose:** Transmits both the program number and the version number.

**Syntax:** <ESC>M*n*

where:

*n* = 0 returns program # and version # and *n* = 1 returns program #, version #, and model #. The default for *n* is 0.

<ESC>M1 is supported by 4420, 4440, and 3400e only.

Here is an example of what you might see: 059877,1.4.

3400e: <ESC>M1 returns program #, version # 3400E2 or E4 (200 dpi/400 dpi)

**Notes:** This command uploads the program and software version number to the host as an ASCII alphanumeric character string.

## Quantity Count, Set

**Purpose:** Sets the quantity of label batches to be printed by the next print command.

**Syntax:** `<RS>n`  
where *n* is the number of batches.

**Printers:**

Printer	Default	Values for n	Notes
All	n = 1	1 to 9999	All printers support this command the same way.

Here is an example of how to use this command:

`<STX><RS>5<ETB><ETX>`

**Notes:** The printer generates an error code (21) if the quantity is out of range.  
Data increments or decrements between batches of labels.

## RFID Tag, Read

**Purpose:** Tells the printer to read the data from the RFID tag.

**Syntax:** `<ESC>Jn, m, p, q`  
where:

- n* specifies the format on which the data shall be read.
- m* specifies a tag segment from which data is read.
- p* specifies the first byte of the declared segment (*m*) from which the data is read (start of read).
- q* specifies how many bytes of data that are read (length of read).

**RFID Tag, Read (continued)****Printers:**

Printer	Default	Values	Notes
EasyCoder PM4i (RFID)	n = 1	0-18	
	m = 1	1 = ID 2 = Data 3 = All	
	p = 0	Varies by RFID tag type	The first byte of the segment is always 0, regardless of the segment's physical location on the tag.
	q = 8	Varies by RFID tag type	The length of field data may differ, depending on the segment and tag air interface ISO standard.

**Notes:** If the tag read fails, an error status of <SOH> is set. If auto-transmit level 3 is enabled, an <SOH> status response is returned to the host.

**Tag Format Field Parameters**

Format Number	Format Name
0	NUM
1	HEX
2	ASCII
3	SSCC-96
4	SSCC-64
5	SGTIN-96
6	SGTIN-64
7	EPC-URN
8	EPC-HEX96
9	EPC-HEX64
10	SGLN-96
11	SGLN-64
12	GRAI-96
13	GRAI-64
14	GIAI-96
15	GIAI-64
16	GID-96
17	USDOD-96
18	USDOD-64

## Start and Stop Codes (Code 39), Print

**Purpose:** Instructs the current Code 39 field to print only the start and stop characters.

**Syntax:** <ESC><SP>  
where <SP> is the space character.

**Notes:** The printer clears all previous data from the current field.

## Storage Area Usage, Transmit

See the Memory Usage, Transmit command.

## Test and Service Mode, Enter

**Purpose:** Enters Test and Service mode.

**Syntax:** <ESC>T

**Notes:** The printer completes all print jobs before executing this command. When the printer enters Test and Service mode, it erases any host-entered data that was sent prior to the command.

## User-Defined Characters, Transmit

**Purpose:** Uploads a graphic (user-defined character) from the printer in the form of commands and data the printer receives to create the graphic.

**Syntax:** <ESC>un  
where *n* is the graphic ID number.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	None	0 to 99	All printers support this command the same way.

**Notes:** If you send <ESC>u to the printer without specifying a value for the *n* parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire graphics directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storage size]<CR><LF>
```

where:

*IDnumber* is the graphic number that was specified by *n* in the command that created the graphic.

**User-Defined Characters, Transmit (continued)**

*name* is the optional graphic name that may have been specified by *,name* in the command that created the graphic.

*type* is 100 for a graphic.

*storagesize* is the number of bytes to store the graphic.

If the printer is in Advanced mode, each data byte represents six bits of the graphic bitmap. If the printer is in Emulation mode, each data byte represents one bit of the graphic image.

The printer generates an error code (28) if you enter an invalid number.

**User-Defined Tables, Transmit**

**Purpose:** Causes the printer to upload the user-defined command and protocol tables that the printer receives to download a new command set.

**Syntax:** <ESC>Z*t*  
where *t* identifies the table.

**Printers:**

Printer	Values for <i>t</i>	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i, 7421, and PC41	0 = Print mode commands 1 = Escape print commands 2 = Shift print commands 3 = Status response 4 = Protocol characters	All printers support this command the same way.

**Notes:** You can find tables listing the default values in Appendix D, “User-Defined Interface Tables.”

The printer generates an error code (12) if you enter an invalid number.

Use this command to substitute protocol and command characters.

**Warm Boot**

**Purpose:** Resets the printer with a warm boot.

**Syntax:** <BS>

**Notes:** Unlike the <DLE> command, this command does not take effect immediately. The printer executes all previous commands before the warm boot takes effect.

You will lose any data that is sent after this command and before the printer finishes rebooting. Use this command when configuration changes require a printer reset.

## Configuration Commands

Use configuration commands to set parameters for configuration features and to enable or disable options. When using configuration commands with printers with RFID modules, these commands affect how the RFID tag interacts with the printer.

Configuration commands are effective when the printer is in Print mode. You can switch to Print mode with this command:

```
<STX>R<ETX>
```

For help downloading configuration commands to the printer, see “Sending IPL Commands to the Printer” on page 5.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The printer terminates a configuration command when it receives the next command in the message.

After reconfiguring your printer, you must cycle power or reset the printer for the commands to become effective unless specified otherwise; however, when configuring the 3400e, 4420, and 4440 printers, do not cycle power using the hardware power switch. You must send the Reset command (<BS> character) after issuing the new configuration command or commands.

## Amount of Storage, Define

**Purpose:** Specifies the amount of RAM you have allocated for storage.

**Syntax:** <SI>Nn

where *n* is the amount of RAM in kilobytes.

**Printers:**

Printer	Without Expanded RAM		With Expanded RAM	
	Default	Values for n	Default	Values for n
3240	n = 60	10K to 120K	n = 200	10K to 504K
3400A	n = 20	10K to 32K	n = 120	10K to 128K
3400B 3400C 3400D	n = 60	10K to 120K	n = 200	10K to 504K
3600	n = 60	10K to 120K	n = 200	10K to 504K
4100	n = 20	10K to 32K	n = 120	10K to 128K

**Notes:** The printer buffers this command until you execute it. When you execute this command, it erases all previously stored format, fonts, or UDCs but does not change the printer configuration. Use this command with printers that share image generation and format/UDC/fonts storage area.

## Audible Alarm, Enable or Disable

**Purpose:** Turns the audible alarm feature on or off.

**Syntax:** <SI>a $\bar{n}$

**Printers:**

Printer	Default	Values for n
4400	n = 0	0 = Disables the audible alarm. 1 = Enables the audible alarm
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n=0	0 = Disables the audible alarm. 1 = Enables the audible alarm



## Auto-Transmit 1, Enable

**Purpose:** Enables auto-transmit level 1.

**Syntax:** <ESC>j

**Notes:** The printer uploads the status in the following order of priority for Intermecc Standard Protocol. See Appendix D, “User-Defined Interface Tables,” for codes for other protocols.

<DC1> Fault cleared.  
 (<DC2> transmitted when Flow Control Protocol selected.)

<FS> Label at strip pin

<BS> Takeup reel full

<EM> No label stock

<US> Ribbon fault

<US> Label path open

## Auto-Transmit 2, Enable

**Purpose:** Enables auto-transmit level 2.

**Syntax:** <ESC>d

**Notes:** At level 2, the printer automatically transmits the status response code indicating room in input buffer (<DC1> for Standard Protocol and <DC2> for Flow Control Protocol). Without auto-transmit enabled, the host must use the <ENQ> or <VT> command to determine the status.

## Auto-Transmit 3, Enable

**Purpose:** Enables auto-transmit level 3.

(RFID) The statuses are set after the RFID tag is read from or written to. They are erased when the label is printed.

**Syntax:** <ESC>e

**Notes:** The printer transmits a status response when this condition occurs:

<ACK> RFID tag write successful

<EOT> RFID tag write error

<HT> Imager overrun

<RS> Insufficient RAM for printing or storage

<SOH> Printing is complete and the buffer is empty

<VT> RFID tag read error

## Auto-Transmit 1, 2, and 3, Disable

**Purpose:** Disables the auto-transmit status responses.

**Syntax:** <ESC>k

## Communication Port Configuration, Set

**Purpose:** Sets the serial and parallel port configuration.

**Syntax:** <SI>P [n1] [, n2] [, n3] [, n4] [, n5] [, n6]

where:

*n1* sets the baud rate, *n2* sets the parity, *n3* sets the data bits, *n4* sets the protocol, and *n5* sets the Multi-Drop address (if you are using Multi-Drop).

*n6* sets the parallel port mode.

### Printers:

Printer	Defaults	n1 Values	n2 Values	n3 Values	n4 Values	n5 Values	n6 Values
7421, PC41	n1 = 3 n2 = 0 n3 = 1 n4 = 0 n5 = A n6 = 0	0 = 1,200 1 = 2,400 2 = 4,800 3 = 9,600 4 = 19,200	0 = None 1 = Even 2 = Odd	0 = 7 bits 1 = 8 bits	0 = XON/ XOFF  1 = XON/ XOFF with status  2 = Intermec Standard  3 = Polling Mode D	A - Z, 0 - 5	0 = Centronic Mode  1 = 1284 Nibble Mode
EasyCoder F4	n1 = 3 n2 = 0 n3 = 1 n4 = 0	0 = 1,200 1 = 2,400 2 = 4,800 3 = 9,600 4 = 19,200 5 = 38,400 6 = 57,600 7 = 115,200	0 = None 1 = Even 2 = Odd	0 = 7 bits 1 = 8 bits	0 = XON/ XOFF  2 = Intermec Standard	Not available	Not available
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n1 = 3 n2 = 0 n3 = 1 n4 = 0	0 = 1,200 1 = 2,400 2 = 4,800 3 = 9,600 4 = 19,200 5 = 38,400 6 = 57,600 7 = 115,200	0 = None 1 = Even 2 = Odd	0 = 7 bits 1 = 8 bits	0 = XON/ XOFF  1 = XON/ XOFF with status  2 = Intermec Standard	Not available	Not available

## Control Panel Access Permission, Set

**Purpose:** Sets a security level to restrict access to certain menus.

**Syntax:** <SI>An

where *n* specifies the menus that can be accessed.

**Printers:**

Printer	Default	Values for n
4400	n = 0	0 = Allows access to all menus (operator, configuration, installation, and test and service)
		1 = Allows access to the operator and configuration menus only
		2 = Allows access to the operator menu only
		3 = Denies access to all menus
4X30	n = 0	0 = Allows access to all menus (operator, configuration, installation, and test and service)
		1 = Allows access to the operator and configuration menus only
		2 = Allows access to the operator menu only
		3 = Denies access to all menus
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n=0	0 = Allows access to all Setup menus
		1 = Denies access to all Setup menus

## Cutter, Enable or Disable

**Purpose:** Turns the cutter feature on or off if the cutter option is installed. Reset the printer after sending this command.

**Syntax:** <SI>cn  
where *n* enables or disables the cutter.

**Printers:**

Printer	Default	Values for n	Notes
3400C 3400D	n = 0	0 = Disables the cutter 1 = Enables the cutter	
3400e	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4100	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4400	n = 0	0 = Disables the cutter 1 = Enables the cutter	
44X0	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4X30	n = 0	0 = Disables the cutter 1 = Enables the cutter	
7421, PC41	n = 0	0 = Disables the cutter 1 = Enables the cutter	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = Disables the cutter 1 = Enables the cutter	This option is available on the EasyCoder F4 with IPL v1.4.

## Dark Adjust, Set

**Purpose:** Sets the dark adjust command. This command controls the print darkness on the labels.

**Syntax:** <SI>dn  
where *n* specifies the darkness setting.

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	-10 to +10 (in increments of 1)	This command changes the configuration setting.

**Notes:** The darkest setting is +10 (darkest) and the lightest setting is -10 (lightest).

## Direct Graphics Emulation Mode, Enable or Disable

**Purpose:** Prints direct graphics with the same origin offset as a specific legacy printer.

**Syntax:** <SI>on  
where *n* enables or disables the emulation mode.

**Printers:**

Printer	Default	Values for n
PC41	n = 0	0 = Emulate 7421 printer. 1 = Direct graphics origin is the same as the format's origin.

## Emulation or Advanced Mode on Power-Up

**Purpose:** Selects Emulation or Advanced printer operating mode on power-up.

**Syntax:** <SI>Cn  
where *n* specifies the mode and mil.

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 3	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	
3400	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	
3400e	200 dpi: n = 1 400 dpi: n = 3	200 dpi: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 400 dpi: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	You can only use the Advanced mode 2.5 mil option on the 3400e with the 400 dpi option.
3440	n = 3	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	
3600	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	

**Emulation or Advanced Mode on Power-Up (continued)**

Printer	Default	Values for n	Notes
4100	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil)	
4400	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil)	
44X0	4420: n = 1 4440: n = 3	4420: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)  4440: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	You can use Advanced mode 2.5 mil option only on the 4440.
7421, PC41	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	

**Notes:** Emulation mode lets you print labels that were designed on an 86XX printer in multiples of 10 or 15 mil. Advanced mode lets you print bar code labels in multiples of 2.5 or 5 mil.

**End-of-Print Skip Distance, Set**

**Purpose:** Sets the end-of-print skip distance. This distance is a value in 5 mil increments that the label advances after printing or when you pause printing.

**Syntax:** <SI>D [n]

where *n* is the distance in 5 mil increments (3.3 mil increments on 4X30 printers).

**End-of-Print Skip Distance, Set (continued)****Printers:**

Printer	Default	Values for n
3240	n = 0 Label Stock mode n = 118 Continuous Stock mode	0 to 9999 in 5 mil increments
3400	n = 0 Label Stock mode n = 118 Continuous Stock mode	0 to 9999 in 5 mil increments
3400e	n = 0 Label Stock Mode n = 123 Continuous Stock mode	0 to 9999 in 5 mil increments
3440	n = 0 Label Stock mode n = 123 Continuous Stock mode	0 to 9999 in 5 mil increments
3600	n = 0 Label Stock mode n = 118 Continuous Stock mode	0 to 9999 in 5 mil increments
4100	n = 0 Label Stock mode n = 118 Continuous Stock mode	0 to 9999 in 5 mil increments
4400	n = 0 Label Stock mode n = 141 Continuous Stock mode	0 to 9999 in 5 mil increments
44X0	n = 0 Label Stock mode n = 132 Continuous Stock mode	0 to 9999 in 5 mil increments
4X30	n = 0 Label Stock mode n = 94 Continuous Stock mode	0 to 9999 in 5 mil increments
7421	n = 0 Label Stock mode n = 160 Continuous Stock mode	0 to 9999 in 5 mil increments
PC41	n = 0 Label Stock mode n = 136 Continuous Stock mode	0 to 9999 in 5 mil increments
EasyCoder F4, PF2i, PF4i	n = 0 Label Stock mode n = 103 Continuous Stock mode	
EasyCoder PM4i, PX4i, PX6i	n = 0 Label Stock mode n = 100 Continuous Stock mode	

**Notes:** To advance the label out to the tear bar in label stock mode, set n to the Continuous Stock mode value.

If you enter a value for *n*, it applies to both Continuous mode and Label Stock mode, regardless of the mode in which you enter the value.

If you do not specify a value for *n*, the <SI>D command returns the printer to the default.

This command is ineffective in self-strip applications.

## IBM Language Translation, Enable or Disable

**Purpose:** Turns the IBM language translation feature on or off.

**Syntax:** <SI>*in*

where *n* enables or disables IBM translation.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 0	0 = Disable IBM translation 1 = Enable IBM translation	All printers support this command the same way.

**Notes:** This feature allows IBM compatible characters to replace standard ASCII characters based on the current printer language (see your printer user's manual for international character sets). This command overrides the language translation based on the current printer emulation.

## Intercharacter Delay, Set

**Purpose:** Sets the intercharacter delay. The intercharacter delay is the time delay between characters in a message the printer transmits.

**Syntax:** <SYN>*n*

where *n* is the intercharacter delay in milliseconds.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	<i>n</i> = 0	0 to 9999	All printers support this command the same way.

## Interlabel Ribbon Save, Enable or Disable

**Purpose:** Enables or disables the interlabel ribbon save feature on the 4100 printer.

**Syntax:** <SI>*sn*

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
4100	<i>n</i> = 0	0 = Disable interlabel ribbon save 1 = Enable interlabel ribbon save	If you do not have the ribbon save option installed, the printer ignores this command.



## Label Rest Point, Adjust

**Purpose:** Adjusts the point at which labels stop for removal. Use this command for self-strip and cutter applications.

**Syntax:** `<SI>fn`  
where *n* specifies the label stop point.

**Printers:**

Printer	Default	Values for n
All	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments

**Notes:** You can also set this command by using the control panel or Test and Service DIP switches. For help, see your printer user's manual.

## Label Retract, Enable or Disable

**Purpose:** Turns the label retract option on or off.

**Syntax:** `<SI>Rn`  
where *n* enables or disables the label retract option.

**Printers:**

Printer	Default	Values for n	Notes
44X0, 3400e	n = 1	0 = Disables label retract 1 = Enables label retract 2 = Enables delayed retract	
All other printers	n = 1	0 = Disables label retract 1 = Enables label retract	All other printers support this command the same way.

**Notes:** If you select die-cut label stock, the printer determines the retract distance automatically.

If you select continuous label stock, the printer uses the retract distance set by the Label Retract Distance, Set command. See also the Label Stock Type, Select command.

If you select delayed retract, the printer waits until it receives the next print command to retract.

## Label Retract Distance, Set

**Purpose:** Sets the label retract distance.

**Syntax:** <SI>*rn*

where *n* specifies the label retract distance in 5 mil increments.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
4400	n = 284 n = 216 (6.5 mil printhead)	0 to 399	
All other printers	n = 0	0 to 399	All other printers support this command the same way.

**Notes:** This command works with continuous label stock only. The label retracts to this distance at the start of a print.

## Label Stock Type, Select

**Purpose:** Selects the type of label stock.

**Syntax:** <SI>*Tn*

where *n* specifies the type of stock.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	n = 1	0 = Continuous label stock (no breaks between labels) 1 = Label stock with gaps between labels 2 = Label stock with marks between labels (on back of label stock)	All printers support this command the same way.

**Notes:** To make this command effective, reset the printer or turn the power off and on again after issuing the command.

## Label Width, Set

**Purpose:** Sets the label width to  $n$  in dot increments.

**Syntax:** <SI>W $n$

where  $n$  is a number between the minimum and maximum number of dots for your printer. Calculations for all printers (except the 4440 printer) use a 5 mil dot.

### Printers:

Printer	Default	Values for $n$	Notes
4400	$n = 896$ $n = 672$ (6.5 mil printhead)	50 to 896 or 50 to 672	This command is effective upon execution.
44X0	4420: $n = 896$ 4440: $n = 1792$	4420: 50 to 896 4440: 100 to 1792	This command is effective upon execution. For the 4440 printer, $n$ must be calculated using 2.5 mil dot.
7421, PC41	$n = 832$	50 to 832	This command is effective upon execution.

**Notes:** (44X0 only) When you print narrower labels, set this command to reduce torque. You may need to experiment with this command until your labels print properly. In high humidity environments, you may also want to use the Takeup Motor Torque, Increase command.

## Maximum Label Length, Set

**Purpose:** Defines the maximum label length.

**Syntax:** <SI>Ln

where *n* specifies the maximum label length in 5 mil increments.

**Printers:**

Printer	Default	Values for n
3240	n = 1000	100 to 4800
3400	n = 1000	100 to 4800
3440	n = 1000	100 to 4800
3600	n = 1000	100 to 4800
4100	n = 1000	100 to 4800
4400	n = 1000	200 to 4800
44X0	n = 1000	100 to 4800
4X30	n = 1000	200 to 4800
7421, PC41	n = 1000	100 to 4800
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1200	100 to 4800

**Notes:** The printer uses this number for detecting media faults. It does not use this number to limit the image size of a format on the label.

## Media Fault Recovery Mode, Set

**Purpose:** Sets the media fault recovery mode.

**Syntax:** <SI>en

**Printers:**

Printer	Default	Values for n
3400e	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
4420	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
4440	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
7421, PC41	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label

## Media Sensitivity, Select

**Purpose:** Selects the media sensitivity of the printer.

**Syntax:** <SI>gn [, m]

where:

*n* specifies direct thermal (DT) media or thermal transfer (TTR) media.

*m* specifies the sensitivity.

**Printers:**

Printer	Default	Values for n	Values for ,m	Notes
3240	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400A 3400B	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400C 3400D	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400e	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal (2-5 ips) 720 = Direct thermal (6-8 ips) 567 = Thermal transfer	You can only set n by using the DIP switches.
3440	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3600	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.

**Media Sensitivity, Select (continued)**

Printer	Default	Values for <i>n</i>	Values for <i>,m</i>	Notes
4100	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set <i>n</i> by using the Transfer On switch on the front of the 4100 printer.
4400	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	This command is effective after you cycle printer power.
44X0	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal (2-5 ips) 720 = Direct thermal (6-8 ips) 567 = Thermal transfer	You can only set <i>n</i> by using the DIP switches.
4X30	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	Not available	The <i>,m</i> parameter is not available for the 4630 and 4830 printers.
7421, PC41	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	180 = Direct thermal 567 = Thermal transfer	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	<i>n</i> = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	

**Notes:** For help setting *m*, see your printer user's manual.

This command was called TTR/Direct Thermal Media Grade, Select in the 4630 and 4830 printers user's manual.

**Message Delay, Set**

**Purpose:** Sets the message delay to *n* milliseconds.

**Syntax:** <ESC><SYN>*n*

where *n* is the number of milliseconds to delay the start of a printer transmission.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All except EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	<i>n</i> = 0	0 - 9999	All printers support this command the same way.

## Number of Image Bands, Set

**Purpose:** Selects the number of image bands.

**Syntax:** <SI>In

where  $n$  is the number of image bands.

### Printers:

Printer	Default	Values for n	Notes
3240	n = 3	2 to 5 if the printer has 128K of static RAM. 2 to 7 if the printer has expanded RAM.	This command is effective upon execution.
3400	n = 3	2 to 6 if the printer has 32K of static RAM. 2 to 12 if the printer has expanded RAM	This command is effective upon execution.
3400e	n = 3	200 dpi: 2 to 20 with the standard 1 MB of DRAM. 400 dpi: 2 to 9 with the standard 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
3440	n = 3	2 to 9 if the printer has 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
3600	n = 3	2 to 13 if the printer has 128K of static RAM. 2 to 25 if the printer has expanded RAM.	This command is effective upon execution.
4100	n = 3	2 to 6 if the printer has 32K of static RAM. 2 to 12 if the printer has expanded RAM.	This command is effective upon execution.
4400	n = 3	2 to 10 if the printer has 512K of RAM.	This command is effective upon execution.
44X0	n = 3	4420: 2 to 20 with the standard 1 MB of DRAM. 4440: 2 to 9 with the standard 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
7421, PC41	n = 3	2 to 12 if the printer has 512K of DRAM.	This command is effective upon execution.

## Online or Offline on Power-Up

**Purpose:** Selects the printer to be online or offline when it is turned on.

**Syntax:** <SI>On

where *n* specifies online or offline.

### Printers:

Printer	Default	Values for n
4400	n = 0	0 = Printer is online on power up 1 = Printer is offline on power up
4X30	n = 0	0 = Printer is online on power up 1 = Printer is offline on power up

## Pin 11/20 Protocol, Set

**Purpose:** Sets the protocol for pin 11/20.

**Syntax:** <SI>pn[, m]

where:

*n* sets the protocol for pin 20 (DTR).

*m* sets the protocol for pin 11 (PS).

### Printers:

Printer	Default	Values for n and m	Notes
3400e 44X0	n = 0 m = 0	0 = The pin follows the software protocol 1 = Always ready (high) 2 = Flow control 3 = Ready/Busy	
7421, PC41	n = 0 m = 0	0 = The pin follows the software protocol 1 = Always ready (high) 2 = Flow control 3 = Ready/Busy	The 7421 and PC41 use pins 6 and 9 instead of pins 20 and 11.

**Notes:** When a pin is set to the default, it uses flow control if the serial port is set for XON/XOFF protocol. The pin uses ready/busy if the serial port is set to Intermecc Standard protocol.

When you set a pin to always ready (high), the pin is held high as long as the printer receives power.



**Pin 11/20 Protocol, Set (continued)**

When a pin is set to flow control, the pin is high when there is room in the data buffer. The pin is held low when the data buffer is full.

When a pin is set to ready/busy, the pin is high when the printer status is ready. The pin is held low when the printer is in one of these conditions:

- Offline
- Buffer full
- No label stock
- Ribbon fault
- Label at strip pin
- Printhead hot

**Postamble, Set**

**Purpose:** Sets the postamble character.

**Syntax:** <EOT>*n*  
where *n* specifies the postamble character.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = <NUL>	Any ASCII character	When <i>n</i> = <NUL>, the printer does not send a postamble character.  All printers support this command the same way.

**Preamble, Set**

**Purpose:** Sets the preamble character.

**Syntax:** <SOH>*n*  
where *n* specifies the preamble character.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = <NUL>	Any ASCII character	When <i>n</i> = <NUL>, the printer does not send a postamble character.  All printers support this command the same way.

## Print Speed, Set

**Purpose:** Sets the print speed.

**Syntax:** <SI>Sn

where *n* specifies the print speed.

### Printers:

Printer	Default	Values for n
3240	n = 30	20, 30, or 40 (corresponding to 2, 3, or 4 ips)
3400A 3400B	n = 30	20, 30, 40, or 50
3400C 3400D	n = 30	20, 30, 40, 50, or 60
3400e	n = 30	200 dpi: 20, 30, 40, 50, 60, 70, 80 (no self-strip) 20, 30, 40, 50, 60 (with self-strip) 400 dpi: 20, 30, 40, 50, 60, 70, 80 (no self-strip) 20, 30, 40, 50 (with self-strip)
3440	n = 30	20, 30, 40, or 50
3600	n = 30	20, 30, 40, or 50
4100	n = 30	20, 30, 40, or 50
4400	n = 35	5 mil printhead: A number from 25 to 100 in multiples of 5. 6.5 mil printhead: A number from 25 to 85 in multiples of 5.
44X0	n = 30	20, 30, 40, 50, 60, 70, 80, or 100 (no self-strip) 20, 30, 40, 50, 60, 70, or 80 (self-strip)
4X30	n = 35	20 to 80 in multiples of 5
7421	n = 20	20
PC41	n = 30	20, 30, 40
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 50	40, 50, 60, 70, 80

## Printer Language, Select

**Purpose:** Selects the printer language.

**Syntax:** <SI>ln

where *n* specifies the language as shown in the next table.

### Values for *n*

n	Language	n	Language
0	U.S.A.	13	Code Page 1252, Latin 1, Western Europe
1	United Kingdom	14	Code Page 1253, Greek
2	Germany	15	Code Page 1254, Turkish
3	Denmark	16	Code Page 1255, Hebrew
4	France	17	Code Page 1256, Arabic
5	Sweden	18	Code Page 1257, Baltic Rim
6	Italy	19	Code Page 1258, Vietnamese
7	Spain	20	Code Page 874, Thai
8	8-Bit ASCII	30	Code Page 932, Shift JIS, Japanese
9	Switzerland	31	Code Page 936, GB 2312-80, Simplified Chinese
10	Code Page 850	32	Code Page 949, KSC5601, Korean Hangeul
11	Code Page 1250, Central Europe	33	Code Page 950, Big 5, Traditional Chinese
12	Code Page 1251, Cyrillic, Russian	40	UTF-8

### Printers:

Printer	Default	Values for n
3240	n = 0	0 – 10
3400A 3400B	n = 0	0 – 9
3400C 3400D	n = 0	0 – 10
3400 <sup>e</sup>	n = 0	0 – 20, 30 – 33
3440	n = 0	0 – 20, 30 – 33
3600	n = 0	0 – 9
4100	n = 0	0 – 9
4400	n = 0	0 – 9
44X0	n = 0	0 – 20, 30 – 33
4X30	n = 0	0 – 10

**Printer Language, Select (continued)**

Printer	Default	Values for n
7421, PC41	n = 0	0-10
EasyCoder F4	n = 0	0-20
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0-20, 40

**Notes:** You can only select one printer language per print job. Bitmap user-defined fonts (including bitmap TrueType) do not use code pages. If your label format requires several language fonts, you can:

- bitmap the TrueType fonts. For help, see “Creating Bitmap Fonts From TrueType Fonts” on page 17.
- create your own bitmap fonts. For help, see “Creating User-Defined Bitmap Fonts” on page 245.

Resident fonts (those that were installed at the factory) use language selections 0 through 10. The default setting will probably provide all the special characters you will need, but you may want to look through the page tables in Appendix B, “Character Sets,” to determine if one of the other languages (0 through 10) would be more suitable. Code pages 11 through 33 do not work with resident fonts.

If you are using a TrueType font (not bitmap), you must match the code page to your language needs. Do not use languages 0 through 10 with scalable TrueType fonts.

If you are using a downloaded scalable (that is, not bitmap) Japanese, Chinese, or Korean TrueType font, you must first locate the correct code page and download it to your printer. (All others are already stored in your printer.) Select the corresponding code page using the Printer Language, Select command. See Chapter 2 for more information about downloading fonts and code pages. See Appendix B for tables of the various character sets.

UTF-8 data is encoded using sequences of 1 to 4 bytes. The table below summarizes the different byte sequences of UTF-8 data that is transformed to a character number. The UTF-8 byte sequence (x, y, and z bits) in this table represents a character number in the range of the left column.

**UTF-8 Data Transformation**

Character Number Range	UTF-8 Byte Sequence
0000 – 007F, xxxxxxx	0xxxxxxx
0080 – 07FF, yyyyyxxxxxx	110yyyyy 10xxxxxx
0800 – FFFF, zzzzyyyyyyyxxxxxx	1110zzzz 10yyyyyy 10xxxxxx
10000 – 10FFFF, TBD	TBD

**Printer Language, Select (continued)**

The character number is calculated by getting the lower-order bits from the last byte of the sequence and proceeding to the left until there are no x, y, and z bits left. For example, the UTF-8 byte sequence to print a Greek “e” is 0xCE 0xB5.



**Note:** Font 61 has the most international characters of all of the resident fonts.

**Printhead Loading Mode, Select**

**Purpose:** Selects the printhead loading mode that affects how the whole image prints on the label. Mirror Printing mode reverses the order in which data loads into the printhead. Inverse Printing mode causes all pixels that are white to invert to black and vice versa.

**Syntax:** <SI>hn [, m]

**Printers:**

Printer	Defaults	Values for n	Values for m
3400C 3400D 3400e	n = 0 m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
3440	n = 0 m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
44X0	n = 0 m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
7421, PC41	n = 0 m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0 m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode

**Note:** The printhead is not under warranty if you use Inverse Printing mode for batch printing. Intermec does not recommend using Inverse Printing mode for batch printing. For best results with Inverse Printing mode, use a maximum print density of 35 percent.

## Printhead Pressure, Set

**Purpose:** Compensates for variations in the thickness of label stock.

**Syntax:** <SI>Hn

**Printers:**

Printer	Default	Values for n	Notes
4400	n = 0	0 = Low printhead pressure 1 = High printhead pressure	If your labels are slipping, or you notice that the pressure is too light, try changing the pressure to the other setting.

## Printhead Test Parameters, Set

**Purpose:** Sets the printhead test parameters.

**Syntax:** <SI>Un [, m] [, p] [, q]

where:

- n* determines whether printing continues if the printhead test sends a warning.
- m* is the positive threshold of the percentage of the allowable deviation in resistance.
- p* is the negative threshold of the percentage of the allowable deviation in resistance.
- q* specifies how often (in terms of the number of labels printed) to automatically run the printhead resistance test.

**Printers:**

Printer	Defaults	Values for n ,m ,p and ,q	Notes
4400	n = 0	n = 0    Printing continues when warning occurs n = 1    Printing stops when warning occurs	This command is effective upon execution.
	m = 45	m        A number from 45 to 10	
	p = 45	p        A number from 45 to 10	
	q = 0	q        A number from 0 to 9999. Setting q = 0 disables the test.	

## RFID Parameters, Set

**Purpose:** Sets the RFID mode (on or off) and sets the TAGADJUST value and number of label retries. These parameters are also visible in the Setup menu on the printer console.

**Syntax:** <SI>Jn [, m] [, p]

where:

- n* specifies the RFID mode to be on or off.
- m* specifies the distance (in dots) a label must be moved from the default start of print point to align the RFID tag over the antenna and enable successful read and write operations to the tag's memory. A negative value means the tag is originally positioned in front of the antenna and a positive value means the label is originally positioned behind the antenna. If you change the start of print point, you may also need to change the TAGADJUST value.
- p* specifies the number of labels to retry if accessing a tag fails. If a read or write operation to the tag's memory fails, "VOID" or some other text is printed on the label and the next label is tried. This procedure is repeated until the read or write operation succeeds or until the specified number of labels to retry is reached.

### Printers:

Printer	Defaults	Values for n ,m and ,p	Notes
PM4i	n = 1	n = 0	RFID mode is off
		n = 1	RFID mode is on.
	m = 0	m	<p>A valid distance in dots, positive or negative.</p> <p>Range for ,m is a negative distance (in dots) from the thermal printhead to the tear-off bar or a positive distance up to the maximum label length.</p> <p>The move distance = TAGADJUST – STOPADJUST. STOPADJUST is any adjustment such as end-of-print skip distance that is done at the end of a label.</p> <p>For example, if TAGADJUST = 0 and End of Print (EOP) skip = 100, the label retracts 100 to access the tag. If TAGADJUST = 100 and the EOP skip = 100, the label does not move.</p>

**RFID Parameters, Set (continued)**

Printer	Defaults	Values for <i>n</i> , <i>m</i> and <i>p</i>	Notes
	<i>p</i> = 1	<i>p</i> A number from 0	If <i>p</i> = 0, the printer does not print any “VOID” labels and the labels do not advance. If <i>p</i> = 1, a maximum of 1 “VOID” label prints and so on.

**Notes:** When using thermal transfer media, *m* should not be greater than the maximum rewind spring allowance, since it will affect the print quality of the label.

When using a cutter, the retract distance cannot be greater than the distance from the cutter to the thermal printhead.

**RFID Tag Void Text, Set**

**Purpose:** Defines the text that is printed on labels that have bad RFID tags. This text cannot be changed from the control panel.

**Syntax:** <SI>*Kn*

where *n* is the text that is printed. When the RFID module cannot communicate with the tag on the label, this text will be printed at the start of the label or at the maximum retract distance from the tag.

Printer	Defaults	Values for <i>n</i>	Notes
PM4i	<i>n</i> = VOID	0 to 16 ASCII characters If <i>n</i> is blank, this command is disabled.	Text prints using font 26, with 1.27 cm (0.5 in) tall characters printed in the down direction.

**Ribbon Save Zones, Set**

**Purpose:** Defines the start and stop points of a ribbon save zone within the label. This command does not enable interlabel ribbon save.

**Syntax:** <SI>*Zn* [, *m*]

*n* and *m* are the zone start and zone stop distances, in dot increments, from the detected front of the label.

The difference between *n* and *m* depends on the speed (number of ips) at which you are printing. Also, *m* must be bigger than *n* by at least 100, or the command will be ignored.



**Ribbon Save Zones, Set (continued)****Printers:**

Printer	Notes
4100	The ribbon save option must be installed or the printer will ignore this command. Setting a ribbon save zone enables ribbon save. Entering no ribbon save zones clears all ribbon save zones within this label. If only one parameter is entered, the command is ignored. The maximum number of zones possible on one label is 10. This command is buffered up and becomes effective upon execution.

**Self-Strip, Enable or Disable**

**Purpose:** Turns the self-strip (label taken sensor) option on or off.

**Syntax:** <SI>tn [,m] [,o]

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0	0 = Disabled 1 = Enabled	
3400	n = 0	0 = Disabled 1 = Enabled	
3440	n = 0	0 = Disabled 1 = Enabled	
3600	n = 0	0 = Disabled 1 = Enabled	
4100	Not available	Not available	The 4100 printer ignores this command; however, you can enable self-strip by using the DIP switches.
4400	n = 0	0 = Disabled 1 = Enabled	You must install the self-strip option from the control panel before you can enable or disable the label taken sensor.
44X0	n = 0	0 = Disabled 1 = Enabled	
4X30	n = 0	0 = Disabled 1 = Enabled	
7421, PC41	n = 0	0 = Disabled 1 = Enabled	
EasyCoder F4, PF2i, PF4i, PM4i,	n = 0	0 = Disabled 1 = Enabled	

**Self-Strip, Enable or Disable (continued)**

Printer	Default	Values for n	Notes
EasyCoder PX4i, PX6i	n = 0	0 = Disabled 1 = Enabled 2 = Rewind 3 = Rewind	<p>If n = 2, a VOID label rewinds with the liner when you are using self-strip mode. Values for ,<i>m</i> are 0 for disable (default) and 1 for enable. Values for ,<i>o</i> indicate the number of dots the internal rewind stepper motor will start after the paper starts feeding. The default value for ,<i>o</i> is 100 dots. The maximum value is the media length.</p> <p>If n = 3, values for ,<i>m</i> indicate the number of dots the internal rewind stepper motor starts before or after paper feeding starts. Positive values are the number of dots the motor starts before paper feeding. Negative values are the number of dots the motor starts after the paper feeding starts. A value of -1 turns the stepper motor off.</p>

**Serial Port Configuration, Set**

See the Communication Port Configuration, Set command.

**Slash Zero, Enable or Disable**

**Purpose:** Determines if the regular zero is replaced with a slashed zero.

**Syntax:** <SI>*zn*

**Printers:**

Printer	Default	Values for n
3400e	n = 0	0 = Disabled 1 = Enabled
44X0e	n = 0	0 = Disabled 1 = Enabled
EasyCoder PF4i, PM4i, PX4i, PX6i	n = 0	0 = Disabled 1 = Enabled

**Notes:** This command only works if the Printer Language, Select command <SI>1 is set to 0 (USA). Also, it does not apply to OCR fonts 23 and 24.

## Takeup Motor Torque, Increase

**Purpose:** Increases the takeup motor torque from 0 to 50% above the default value. For printers with firmware version 2.5, varies the torque from 75% below to 50% above the default value.

**Syntax:** <SI>bn

**Printers:**

Printer	Default	Values for n
44X0	n = 0	0 to 50 -75 to 50 for firmware version 2.5

**Notes:** In high humidity environments, you may want to use this command with the Label Width, Set command.

## Top of Form, Set

**Purpose:** Sets the top of form (left margin or start print point) to n, which is the distance in 5 mil increments from the label origin to its leading edge.

**Syntax:** <SI>Fn

**Printers:**

Printer	Default	Values for n	Notes
All	n = 20	-10 to 4000 (in 5 mil increments)	The negative values for n let you decrease the margin and print closer to the edge of the label.

## Program Mode Commands

You can use program mode commands to design label formats and to download user-defined fonts and graphics. When using program mode commands with printers with RFID modules, these commands handle the interaction with the chip in the RFID tag. For example, you can use a command that specifies where in the tag's memory, data is written.

When creating or editing formats, the printer uses a field pointer to designate the field you are going to modify when the printer is in Program mode. To download commands in Program mode, you must specify the field you want to change. If you do not select a field, the pointer continues to point to the last selected field until you select a different format or field. New formats contain a default human-readable field numbered H0. New pages do not contain a default format.

Program mode commands are effective when the printer is in Program mode. You can switch the printer to Program mode with this command:

```
<STX><ESC>P<ETX>
```

For help downloading program mode commands to the printer, see “Sending IPL Commands to the Printer” on page 5.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The semicolon (;) is the command terminator. All commands in Program mode must end with this terminator except the last command in a message. The printer ignores parentheses [( )] and <LF> characters.

## Bar Code, Select Type

**Purpose:** Selects a symbology for a bar code field.

**Syntax:** `cn[,m1][,m2][,m3]`

*n* is the symbology and *m1*, *m2*, and *m3* are modifiers for that symbology. For more information on valid *m* values, see the information for the symbology in the following pages.

### Values for *n*

n	Symbology	n	Symbology	n	Symbology
0	Code 39	8	HIBC Code 39	17	Data Matrix
1	Code 93	9	Code 16K	18	QR Code
2	Interleaved 2 of 5	10	Code 49	19	MicroPDF417
3	Code 2 of 5	11	POSTNET	20	RSS
4	Codabar	12	PDF417	21	EAN.UCC Composite
5	Code 11	14	MaxiCode	22	Planet (EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i only)
6	Code 128	15	JIS-ITF		
7	UPC/EAN Codes	16	HIBC Code 128		

### Printers:

Printer	Default	Values for n
3240	n = 0	0 - 12, 14 - 19
3400A	n = 0	0 - 11
3400B	n = 0	0 - 12, 14 - 17
3400C, 3400D	n = 0	0 - 12, 14 - 19
3440	n = 0	0 - 12, 14 - 19
3600	n = 0	0 - 12, 14 - 17
4100	n = 0	0 - 11      Standard memory 0 - 12, 14 Expanded memory
4400	n = 0	0 - 11
44X0, 3400e	n = 0	0 - 12, 14 - 20
4X30	n = 0	0 - 12, 14, 16, 17
7421, PC41	n = 0	0 - 12, 14 - 19
EasyCoder F4	n = 0	0 - 12, 14 - 19
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 12, 14 - 22

**Bar Code, Select Type (continued)****Code 39**

c0 [, m]

The default for *m* is 0.

**Values for m**

M	Description
0	Selects 8646 compatible Code 39. No check digit.
1	Selects 8646 compatible Code 39. Printer enters check digit.
2	Selects 8646 compatible Code 39. Host enters check digit and printer verifies.
3	Selects full ASCII Code 39. No check digit.
4	Selects full ASCII Code 39. Printer enters check digit.
5	Selects full ASCII Code 39. Host enters check digit and printer verifies.
6	Selects 43 character Code 39. No check digit.
7	Selects 43 character Code 39. Printer enters check digit.
8	Selects 43 character Code 39. Host enters check digit and printer verifies.

Intermec printers support three different types of Code 39:

- 43 character Code 39
- Full ASCII Code 39
- 8646 compatible Code 39 (except the EasyCoder F4, PF2i, PF4i and PM4i)

The 8646 compatible version only differs from the full ASCII version by four characters. The “\$”, “%”, “/”, and “+” are encoded as single characters instead of as “/D”, “/E”, “/O”, and “/K.” The 8646 compatible version allows the printer to be backward compatible with 86XX printers.

When you enter <ESC><SPACE> as data, the printer prints the start and stop characters.

**Code 93**

c1

**Bar Code, Select Type (continued)****Interleaved 2 of 5**`c2 [ , m]`

The default for *m* is 0.

**Values for *m***

<b>m</b>	<b>Description</b>
0	Selects Interleaved 2 of 5. No check digit.
1	Selects Interleaved 2 of 5. Printer enters check digit.
2	Selects Interleaved 2 of 5. Host enters check digit.



**Note:** The printer adds a zero to character strings that are odd in length.

**Code 2 of 5**`c3 [ , m]`

The default for *m* is 0.

**Values for *m***

<b>m</b>	<b>Description</b>
0	Selects Code 2 of 5. 3-bar start/stop code.
1	Selects Code 2 of 5. 2-bar start/stop code.

**Codabar**`c4 [ , m]`

The default for *m* is 0.

**Values for *m***

<b>m</b>	<b>Description</b>
0	Selects Codabar. Host enters start/stop codes and printer verifies.
1, <i>x,y</i>	Selects Codabar. Printer enters start code <i>x</i> and stop code <i>y</i> . The values for <i>x</i> and <i>y</i> can range from A to D and from a to d.

Valid start/stop characters range from A to D and from a to d. You can define them as part of the bar code field, or you can download them as part of the print data. Start/stop characters sent down with printer data override the characters defined by the bar code field.

**Bar Code, Select Type (continued)****Code 11**

c5 [, m]

The default for *m* is 0.

**Values for m**

m	Description
0	Selects Code 11. Printer enters 2 check digits.
1	Selects Code 11. Printer enters 1 check digit.
2	Selects Code 11. Host enters 2 check digits and printer verifies.
3	Selects Code 11. Host enters 1 check digit and printer verifies.

**Code 128**

c6 [, m1] [, m2] [, m3]

The default for *m1*, *m2*, and *m3* is 0.

**Values for m1 and m2**

m1,m2	Description
0,0	Selects Code 128, keep parentheses and spaces.
0,1	Selects Code 128, ignore parentheses and spaces in the bar code but keep them in the interpretive field.
1,0	Selects UCC-128 Serial Shipping Container Code.
1,1	Selects UCC-128 Serial Shipping Container Code and keep parentheses and spaces in interpretive field.

In Emulation mode, you can print the Function 1 character by entering <SUB> 1. In Advanced mode, you can print the Function 1 character by entering <SUB><SUB> 1. You can print the characters for Function 2, 3, and 4 in the same way.

UCC-128 serial shipping container code automatically starts in subset C with a <FNC1>. It is a fixed length version of Code 128 requiring you to enter 19 numeric characters. The printer forces the first two characters to zero.



**Bar Code, Select Type (continued)****Values for m3**

m3	Description
0	Default and recommended settings. Automatically selects character subset.
1	Starts in subset A.
2	Starts in subset B.
3	Starts in subset C.



**Note:** Intermec recommends that you set m3 to 0 unless you are familiar with Code 128 subsets. The printer will automatically determine the correct start subset and perform any necessary switching between subsets.

m3 is valid only in the EasyCoder PF4i and PM4i printers with firmware version 2.10 and higher and m1 must equal 0. If you set m3 to a number other than 0, only characters within the chosen subset are valid. If you enter characters from another subset, the printer generates an error code 11 (invalid bar code data) and the bar code will not print.

**To switch to another character subset within the bar code (if m3 = 1, 2, or 3)**

- Enter:

<SUB><SUB>*n*

where *n* is A, B, or C depending on if you want to switch to subset A, B, or C.

Or,

where *n* is S and the current subset is A or B. The next one character is shifted from the current subset into the other subset (A or B). Then, the following characters will return to the current subset. If you set *n* equal to S and the current subset is C, this command is ignored.

**Bar Code, Select Type (continued)****UPC/EAN**

c7 [, m1] [, m2]

The default for *m1* and *m2* is 0.**Values for m1**

m1	Description
0	Selects UPC/EAN Codes. Printer enters check digit. Flag 1 enabled.
1	Selects UPC/EAN Codes. Printer enters check digit. Flag 1 disabled.
2	Selects UPC/EAN Codes. Host enters check digit and printer verifies Flag 1 enabled.
3	Selects UPC/EAN Codes. Host enters check digit and printer verifies. Flag 1 disabled.

**Values for m2**

m2	Description	m2	Description
0	variable length	5	UPC Version D1
1	EAN 8	6	UPC Version D2
2	EAN 13	7	UPC Version D3
3	UPC Version A	8	UPC Version D4
4	UPC Version E	9	UPC Version D5

The variable length option selects the UPC/EAN version by the number of characters in the data field. The number of data characters and check characters allowed for each version are:

EAN 8	7 data + 1 check character
EAN 13	12 data + 1 check character
UPC version A	11 data + 1 check character
UPC version E	6 data + 1 check character
UPC version D1	13 data + 1 check character
UPC version D2	18 data + 2 check characters
UPC version D3	22 data + 2 check characters
UPC version D4	25 data + 3 check characters
UPC version D5	29 data + 3 check characters

Use a “.” to delimit the bar code data from the supplemental data. Data to the right of the “.” is supplemental data; data to the left is bar code data. You can add the two- or five-digit supplemental to any version of the UPC/EAN code.

**Bar Code, Select Type (continued)**

The flag 1 option only applies to EAN 8, EAN 13, and UPC version A. For EAN 13, enabling the flag 1 option prints the first character of the bar code interpretive. For EAN 8 and UPC version A, enabling the flag 1 option moves the first and last character of the bar code interpretive outside of the guard bars.

UPC Versions D1 - D5 are not supported in the 3400 C, 3400D, 3400e, 4420, 4440, EasyCoder F4, PF2i, PF4i and PM4i printers.

**HIBC Code 39**

c8 [ , m1] [ , m2]

The default for *m1* is 0.

**Values for m1 Conforming to the Supplier Standard**

m1	Description
0	Selects HIBC Code 39. Primary format.
1	Selects HIBC Code 39. Alternate primary format.
2[,m2]	Selects HIBC Code 39. Secondary format. The linkage character comes from m2, which is the field identifier.

**Values for m1 Conforming to the Provider Standard**

m1	Description
3	Single format.
4	First data format.
5[,m2]	Selects HIBC Code 39. Second data format. The linkage character comes from m2, which is the field identifier.
6	Selects HIBC Code 39. Multiple data format.

**Code 16K**

c9

In Emulation mode, use a <SUB> 1 to represent the function 1 character. To represent the function 1 character in Advanced mode, enter <SUB><SUB> 1. Represent the characters for functions 2, 3, and 4 in the same way.

To produce a square symbol, specify a height magnification of 1 in Advanced mode. To specify a square symbol, use a height magnification of 250 in Emulation mode.

**Bar Code, Select Type (continued)****Code 49**

c10

Use a <SUB> 1 to represent the function 1 character in Emulation mode. In Advanced mode, you can represent the function 1 character by entering <SUB><SUB> 1. You can represent the characters for functions 2, 3, and 4 in the same way.

To produce a square symbol, specify a height magnification of 1 in Advanced mode. To specify a square symbol, use a height magnification of 250 in Emulation mode.

The printer supports only the alphanumeric (0) and numeric (2) modes.

**POSTNET**

c11

POSTNET uses the height (“h”) and width (“w”) commands in the same way as a font. Other symbologies use “h” to specify the bar height and “w” to specify the narrow bar width. POSTNET uses “h” and “w” to magnify the base character cell. Each character cell is 13 dots high by 22 dots wide. The default width and height magnification for POSTNET is 2 x 2, resulting in a symbology sized according to the POSTNET specification.

**PDF417**

c12 [ [ , m1 ] [ , m2 ] [ , m3 ] ] ;

PDF417 is a stacked 2D symbology that provides the ability to scan across rows of code. Each row consists of start/stop characters, row identifiers, and symbol characters, which consist of four bars and four spaces each and contain the actual data. This symbology uses error correction symbol characters appended at the end to recover loss of data.

**Default Parameters for PDF417**

Parameter	Default	Description
m1	0	The printer selects the number of columns needed to create a symbol that is as close to square as possible.
m2	9	The printer automatically selects the error correction level based on the amount of data.
m3	0	Truncating disabled.

**Bar Code, Select Type (continued)****Using m1 to Select the Number of Columns**

m1 is the number of columns of data characters. The range for m1 is 0 to 30 and the default is 0. If you select zero, the printer provides the number of columns needed to create a symbol that is as close to a square as possible.



**Note:** When you select zero, the printer selects a height magnification that is three times the width magnification. The specifications of PDF417 recommend these magnification values for creating a symbol that you can scan easily.

**Using m2 to Select an Error Correction Level**

m2 determines the level of error correction. Each level provides a certain number of detection characters, which can detect and recover a specific number of faulty characters. The range for m2 is 0 to 9. The default is 9 and allows the printer to automatically select the appropriate level.

The level of error correction that works best for your data depends on the amount of characters in your symbols. If you decide to select your own error correction level, you will need to estimate the number of characters since they are formed by compressing the raw data you send to the printer. In general, 1.8 alphanumeric characters generate one symbol character. If you are using numeric data, 2.9 digits generate one data symbol character.

Intermec recommends that you leave the error correction level at the default setting of 9. This setting lets the printer select a level, between level 2 and level 5, that provides the most efficient error correction of your data. The printer bases the level selection on the number of symbol characters your data generates.

The following table shows the m2 values (error correction levels), the recommended data amount that you should use for each value, and the number of error correction characters that it generates.

**Bar Code, Select Type (continued)****Values for m2**

m2	Recommended Amount of Data	Error Detection Characters
0	*	2 (error detected, no recovery)
1	*	4
2	1 - 40	8
3	41 - 160	16
4	161 - 320	32
5	321 - 863	64
6	†	128
7	†	256
8	†	512
9	‡	

- \* You should only use m2 = 0 or 1 if your labels do not have enough space for more error correction characters. Usually, these values are not recommended.
- † The printer reserves m2 = 6, 7, or 8 for special applications where the symbol is subject to damage and requires a higher level of error correction.
- ‡ m2 = 9 lets the printer set m2 to the recommended value for each symbol based on the number of characters. An m2 value of 9 is the default setting.

**Using m3 to Set the Truncate Flag**

m3 is a truncate flag that indicates whether to print the symbol in truncated form. If truncated, the symbols print without right row indicators and with only a one-module wide stop character. The values for m3 are 0 to disable truncating and 1 to enable truncating. The default is 0. To minimize errors and maintain the best reading performance, Intermec recommends that you leave m3 equal to 0.

This table shows the approximate data capacity (maximum number of characters allowed) for the three character sets.

**Data Capacity per Character Set**

Character Set	Data Capacity
Full ASCII	1108
Alphanumeric	1850
Numeric	2725

**Bar Code, Select Type (continued)**

**Note:** 2D symbols encode data by compressing it in different amounts. Therefore, use these values as guidelines. The exact data capacity varies with the actual data being encoded.

**MaxiCode**

c14 [, m1]

MaxiCode is a fixed-size 2D symbology where the printer ignores height and width magnification. This symbology is made up of offset rows of hexagonal elements, each of which is 35 mils wide by 40 mils high, arranged around a bull's-eye finder pattern. Each hexagon represents one bit of information and is either black or white depending on the state of the encoded data bit. United Parcel Service (UPS) developed MaxiCode for the specific purpose of encoding information about a parcel.

This table lists the possible values for m1. The default value autodiscriminates between Modes 2, 3, and 4.



**Note:** If you have developed previous applications using Mode 0, your printer will still support your application; however, we recommend using Mode 2 or 3 for new applications.

**Values for m1**

m1	Description
2	Structured Carrier Message for numeric postal codes up to 9 digits
3	Structured Carrier Message for alphanumeric postal codes up to 6 characters
4	Standard Symbol
5	Full Enhanced Error Correction (EEC)
6	Reader Programming

When you select MaxiCode, you must format your data to conform to the five fields described in the next table.



**Note:** The header only applies to Structured Carrier Message (Modes 2 and 3). The Structured Carrier Message header is optional.

**Bar Code, Select Type (continued)****MaxiCode Fields**

Field	Description of Field	Number of Characters	Default
1	Header (optional)	Nine	None
2	Postal code	Six or nine	None
3	Country code	Three	840 (U.S.)
4	Service class	Three	999
5	Secondary Message	84	None

IPL.018

**Notes:** The NULL character is not supported. If the NULL character appears in the user data, you will lose it along with any following data.

All control characters (<RS>, <GS>, <EOT>, etc.) must be preceded by a <SUB> character, as illustrated in the following examples.

This example illustrates the command for MaxiCode Mode 2:

```

<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1<ETX>
<STX>H0;o10,10<ETX>
<STX>B1;o100,300;f1;c14,2;h6;w6;d0,100<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX>MaxiCode Sample Mode 2<CR><ETX>
<STX>[]><SUB><RS>01<SUB><GS>01982039280<SUB><GS>840<SUB>
<GS>001<SUB><GS>1Z94924221455215<SUB><RS>Intermec 6001
36th Ave West Everett, WA 98203<SUB><EOT><ETX>
<STX><ETB><ETX>

```

This example illustrates the command for MaxiCode Mode 3:

```

<STX><ESC>P<ETX>
<STX>E1;F1<ETX>
<STX>H0;o10,10<ETX>
<STX>B1;o100,300;f1;c14,3;h6;w6;d0,100<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX>MaxiCode Sample Mode 3<CR><ETX>
<STX>[]><SUB><RS>01<SUB><GS>96T51654<SUB><GS>484<SUB>
<GS>066<SUB><GS>1Z00000256<SUB><RS><SUB><EOT><ETX>
<STX><ETB><ETX>

```



**Bar Code, Select Type (continued)****JIS-ITF**c15 [, *m*]

The default for *m* is 0.

**Values for *m***

<b>m</b>	<b>Description</b>
0	Selects 5 dot narrow bar width magnification.
1	Selects 8 dot narrow bar width magnification.
2	Selects 10 dot narrow bar width magnification.

The next command defines a data source for the current field and how many characters are in the field.

d [*n*] [, *m*]

The default for *n, m* is 0, 14.

**Values for *n***

<b>n</b>	<b>Description</b>
d0[, <i>m</i> ]	This field receives data from a host. The <i>m</i> is the data length, which can be set to 6 (condensed), 14 (standard), and 16 (extended).
d2[, <i>m</i> ]	This field acts as a slave field and receives its data from another field (master slave). The <i>m</i> is the master slave field ID.
d3[, <i>m</i> ]	The printer defines the data during Program mode (fixed). The <i>m</i> determines the JIS-ITF type. If the data length is not exactly 6, 14, or 16, the printer uses the next highest JIS-ITF type with zero padding in front.

The JIS-ITF bar code is the Japanese Industry Standard for Interleaved 2 of 5. JIS-ITF bar codes are in a box of solid black that measures 4.75 mm (0.19 in) and always include an interpretive field [21 x 14O CR-B (JIS x 9001)] centered beneath the bar code field.

Valid narrow bar width magnifications are 5, 8, and 10 dots. Due to printhead dot size limitations, the printer cannot achieve a true 2.5 to 1 ratio when using a narrow bar width of 5 dots. The printer uses a wide bar width of 12 dots for a true 2.4 to 1 ratio instead.

JIS-ITF bar code fields consist of these three categories: standard, condensed, and enlarged. If you are not using the command to define the source of the field data, the printer automatically chooses a category. If your bar code field contains 14 characters, the printer uses standard JIS-ITF. If your field contains 6, the printer uses the condensed version, and if your field contains 16, the printer uses the enlarged version.

**Bar Code, Select Type (continued)****HIBC Code 128**

c16 [ , m1 ] [ , m2 ]

The default for *m1* is 0.

**Values for m1 Conforming to the Supplier Standard**

m1	Description
0	Selects HIBC Code 128. Primary format.
1	Selects HIBC Code 128. Alternate primary format.
2,m2	Selects HIBC Code 128. Secondary format. The linkage character comes from m2, which is the field identifier.

**Values for m1 Conforming to the Provider Standard**

m1	Description
3	Single format.
4	First data format.
5,m2	Selects HIBC Code 128. Second data format. The linkage character comes from m2, which is the field identifier.
6	Selects HIBC Code 128. Multiple data format.

**Data Matrix Symbolism Versions ECC-100 and ECC-200**

c17 [ , m1 ] [ , m2 ] [ , m3 , m4 [ , m5 , m6 ] ]

Data Matrix is a 2D matrix symbology made up of square modules arranged within a perimeter finder pattern. The finder pattern is a perimeter to the data region and is one module wide. Two adjacent sides are solid dark lines. These lines are used to define physical size, orientation, and symbol distortion. Intermec supports these two versions of Data Matrix: ECC-100 and ECC-200. Use ECC-200 for new applications.

**Data Matrix Default Parameters**

Parameter	Default	Description
m1	200	ECC-200
m2	0	Square
m3	0	Position of current symbol in group
m4	,m3	Total number of symbols in group
m5	1	File identifier
m6	1	File identifier

**Bar Code, Select Type (continued)**

m1 is a three-digit number that selects the Data Matrix version. Possible values are:

- 100 (ECC-100)
- 200 (ECC-200)



**Note:** The EasyCoder F4, PF2i, PF4i, and PM4i printers only support m1 = 200.

m2 is a one-digit value that indicates whether your symbol will be square or rectangular. The amount of data you enter determines the size of the symbol. Possible values are:

- 0 = square
- 1 = rectangular

Use m3, m4, m5, and m6 when you define Structured Append symbols within ECC-200.

**Structured Append Parameter Values for Data Matrix**

Parameter	Description	Possible Values
m3	The position of the current symbol in the group	0 - 16
m4	The total number of symbols in the group	0 - 16
m5	File identifier	1 - 254
m6	File identifier	1 - 254

For example, setting m3, m4, m5, and m6 to 2, 5, 1, 43 indicates that the current symbol definition is the second in a group of 5 with the file identifier of 1, 43.

If you do not set m3 or you set it to 0, you disable Structured Append mode. If you do not set m5, m6, the settings default to 1, 1.

**Notes:** This table lists how many numeric, alpha, or 8-bit characters you can place in a Data Matrix bar code for each version.

**Character Capacity for Data Matrix Versions**

Type of Character	ECC-100	ECC-200
All numeric	88	3116
All alpha	59	2335
All 8-bit	38	1556

**Bar Code, Select Type (continued)****QR Code**

c18 [, m1] [, m2] [, m3]

QR Code is a matrix 2D symbology that encodes data into patterns consisting of black and white dots or modules. A three position detection pattern enables omni-directional reading and ultra high-speed reading. QR Code can handle a wide range of data, including numerical, alphabetical, Kanji, Hiragana, Katakana, graphics, and control codes. A built-in error correction function enables the QR Code to repair errors in the code.

**Values for m1, m2, m3**

Parameter	Default	Description	Possible Values
m1	2	QR model	1 = Model 1 2 = Model 2
m2	M	Error correction level	L = 7% correction M = 15% correction Q = 25% correction H = 30% correction
m3	8	Mask number	0-7 = Mask type 8 = Auto-selection of mask by printer

**Notes:** You can only create QR symbols up to 3550 characters.

**MicroPDF417**

c19 [, m1] [, m2]

MicroPDF417 is a 2D symbology, derived from PDF417. You use MicroPDF417 for applications needing improved area efficiency but without the requirement for PDF417's maximum data capacity. MicroPDF417 replaces PDF417's 17-module-wide start/stop patterns and left/right row indicators with a unique set of 10-module-wide Row Address Patterns, which were designed both to reduce overall symbol width and to enable linear scanning at row heights as low as 2X. MicroPDF417, unlike PDF417, may only be printed in certain defined combinations of number of data columns (m1) and number of data rows (m2), up to a maximum of 4 data columns by 44 data rows.

**Bar Code, Select Type (continued)****Values for m1 and m2**

Parameter	Default	Description
m1	0	Sets the number of data columns in the printed symbol. The default setting (0) allows the printer to determine the most efficient size for given data. Possible values are 0 through 4.
m2	0	Sets the number of data rows in the printed symbol. The default setting (0) allows the printer to determine the most efficient size for given data. Possible values depend on the setting for m1.

MicroPDF417 uses the following symbol sizes (data columns x data rows), each with a distinct error correction capacity:

1x11	2x8	3x6	4x4
1x14	2x11	3x8	4x6
1x17	2x14	3x10	4x8
1x20	2x17	3x12	4x10
1x24	2x20	3x15	4x12
1x28	2x23	3x20	4x15
	2x26	3x26	4x20
		3x32	4x26
		3x38	4x32
		3x44	4x38
			4x44

**RSS**

c20 [ , m1] [ , m2] [ , m3]

The Reduced Space Symbology (RSS) family contains seven different linear bar codes that can be used individually (c20) or as Composite Components for the EAN.UCC Composite symbology (c21).

**RSS Bar Code Descriptions**

RSS Bar Code	Description
RSS-14	Numeric only linear symbology used to encode the Global Trade Item Numbers (GTINs) for scanning in the supply chain. RSS-14 is smaller than EAN-13 or UPC-A and may include up to 13 digits. The check digit is not included in the data.
RSS-14 Truncated	Reduced height symbology designed to fit on small, narrow items. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Stacked	A variation that is stacked in two rows, and is suitable for applications with limited width available. This bar code may include up to 13 digits. The check digit is not included in the data.

**Bar Code, Select Type (continued)****RSS Bar Code Descriptions (continued)**

RSS Bar Code	Description
RSS-14 Stacked Omnidirectional	Full height version symbology with omni directional scanning capability so it can be scanned at retail point-of-sale. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Limited	Numeric only linear symbology used to encode the Global Trade Item Numbers (GTINs) for scanning in the supply chain. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Expanded	Encodes a maximum of 74 numeric or 41 alphanumeric characters from a subset of ISO 646 consisting of the uppercase and lowercase letters, digits, 20 selected punctuation characters and the FNC1 character. See the ISO 646 Subset Characters table on page 167.
RSS-14 Expanded Stacked	RSS-14 Expanded symbology that is stacked in 2 to 11 rows.

**Values for m1, m2, m3**

Parameter	Default	Description	Possible Values
m1	2	Select RSS version	0 = RSS-14 1 = RSS-14 Truncated 2 = RSS-14 Stacked 3 = RSS-14 Stacked Omnidirectional 4 = RSS Limited 5 = RSS Expanded 6 = RSS Expanded Stacked
m2	1	Height of the separator pattern row	,m1 = 2, 3, and 6 only Minimum is 1X the defined bar magnification of the barcode (w[n] command). If too low of a value for m2 is entered, the height will be changed to the smallest legal value for the selected magnification.
m3	2	Number of segments per row	,m1 = 6 only Even numbers in the range of 2 to 22

The height of the bar codes or the height of each row in the stacked bar codes is determined by the bar height magnification command (h[n]). For RSS-14 Stacked, the lower row is set using the value specified in the bar height magnification command and the upper row height is calculated from this value. If the bar height magnification command is not sent, the bar code will default to the proper height specified for the selected width:

- For m1 = 0  $h[n] = 33 * w[n]$
- For m1 = 1  $h[n] = 13 * w[n]$
- For m1 = 2  $h[n] = 7 * w[n]$
- For m1 = 3  $h[n] = 33 * w[n]$

**Bar Code, Select Type (continued)**

- For  $m1 = 4$   $h[n] = 10 * w[n]$
- For  $m1 = 5$   $h[n] = 33 * w[n]$
- For  $m1 = 6$   $h[n] = 34 * w[n]$

If the amount of data sent to the bar code exceeds the defined limit, an Error Code 11 is generated and the bar code does not print.

**ISO 646 Subset Characters**

Character	Description
0-9	
FNC1	
A to Z	
a to z	
!	Exclamation mark
“	Quotation mark
%	Percent sign
&	Ampersand
‘	Apostrophe
(	Left parenthesis
)	Right parenthesis
*	Asterisk
+	Plus sign
,	Comma
-	Minus or hyphen
.	Period or full stop
/	Slash or solidus
:	Colon
;	Semicolon
<	Less-than sign
=	Equals sign
>	Greater-than sign
?	Question mark
—	Underline or low line
	space

**Bar Code, Select Type (continued)****EAN.UCC Composite**

c21 [ , m1] [ , m2] [ , m3] [ , m4] [ , m5] [ , m6]

The EAN.UCC Composite symbology consists of an EAN.UCC linear component associated with an adjacent 2D Composite Component.

The linear component encodes the primary identification so that it is readable by all scanning technologies and so that 2D imagers can use the linear component as a finder pattern for the adjacent 2D Composite Component. The linear components include these bar codes:

- UCC/EAN-128
- UPC-A
- EAN-8
- EAN-13
- RSS family of bar codes

The 2D Composite Component encodes supplementary data, such as batch number or expiration date. There are three types of 2D Composite Components that are all based on the PDF417 symbology:

- CC-A is a structural variant of MicroPDF417.
- CC-B is a MicroPDF417 symbol.
- CC-C is a PDF417 symbol.

The data for the linear and 2D components is separated by the <HT> command with the data for the linear component sent first. For example, to print a Composite bar code with the linear component encoding 112233445566 and the 2D component encoding aabbccddeeff, the data is sent to the printer as 112233445566<HT>aabbccddeeff.

For all possible combinations of linear and 2D Composite components, see the next table, “Combinations of Linear and 2D Composite Components and Capacity.”



**Bar Code, Select Type (continued)****Combinations of Linear and 2D Composite Components and Capacity**



Linear Component		2D Composite Component (Max Data Length)		
Bar Code Type	Data Length	CC-A	CC-B	CC-C
UCC/EAN-128	1-48 digits	56 digits 31 char	338 digits 196 char	2361 digits
EAN-13	13 digits	56 digits 31 char	338 digits 196 char	Not available
EAN-8	8 digits	47 digits 26 char	219 digits 127 char	Not available
UPC-A	12 digits	56 digits 31 char	338 digits 196 char	Not available
UPC-E	8 digits	47 digits 26 char	96 digits 55 char	Not available
RSS-14 RSS-14 Truncated	1-13 digits	56 digits 31 char	338 digits 196 char	Not available
RSS-14 Stacked RSS-14 Stacked Omnidirectional	1-13 digits	47 digits 26 char	96 digits 55 char	Not available
RSS Limited	1-13 digits	47 digits 26 char	219 digits 127 char	Not available
RSS-14 Expanded RSS-14 Expanded Stacked	1-74 digits* 1-41 char*	56 digits 31 char	338 digits 196 char	Not available

**Notes:** Data lengths with an asterisk (\*) indicate that the actual maximum amount of data depends on data content.

UCC/EAN-128 uses the same code set as Code 128, except it does not allow function codes FNC2 through FNC4. FNC1 can be sent to the printer as the data string <SUB><SUB>1.

2D Composite Components encode characters from the ISO 646 code set. See the “ISO 646 Subset Characters” table on page 167.

**Bar Code, Select Type (continued)****Values for m1, m2, m3, m4, m5, m6**

Parameter	Default	Description	Possible Values
m1	0	Select version	0 = UCC/EAN-128 with CC-C 1 = UCC/EAN-128 with CC-A or CC-B 2 = EAN-13 with CC-A or CC-B 3 = EAN-8 with CC-A or CC-B 4 = UPC-A with CC-A or CC-B\ 5 = UPC-E with CC-A or CC-B 6 = RSS-14 with CC-A or CC-B 7 = RSS-14 Truncated with CC-A or CC-B 8 = RSS-14 Stacked with CC-A or CC-B 9 = RSS-14 Stacked Omnidirectional with CC-A or CC-B 10 = RSS Limited with CC-A or CC-B 11 = RSS Expanded with CC-A or CC-B 12 = RSS Expanded Stacked with CC-A or CC-B
			 <b>Note:</b> The printer determines whether CC-A or CC-B will be used based on the amount of data sent to the 2D Composite Component.
m2	1	Height of the separator pattern row	m1 = 0, and 6-12 only: Range is between 1X and 2X the defined bar magnification of the bar code (w[n] command). If too low of a value for m2 is entered, the height is changed to the smallest legal value for the selected magnification. If too high a value is entered, an Error Code 11 "Invalid bar code data" is generated. Example: If w[n] is set to 3 the separator height can be 3 to 6.
m3	0 (m1 = 0) 4 (m1 = 12)	Number of segments or columns per row	m1 = 0: m3 = 0 selects the largest number of columns for the 2D bar code to fit within the 1D bar code including its quiet zones. Values for m3 are from 1 to 30. m1 = 12: the number of segments per row.
m4	1	Display space, “(“ and “)” characters	m4 = 0: the bar code does not include any of the “space”, “(“ and “)” characters in the data, but these characters are displayed in the human readable interpretive field. m4 = 1: the bar code and the human readable interpretive field includes exactly the same data.
m5	0	Height of each row in the 2D bar code	m5 = 0: the height is 3X the magnification (default)
m6	0	Print the linear barcode interpretive field	m6 = 0: do not print the human readable interpretive field for the linear bar code m6 = 1: print the human readable interpretive field for the linear bar code
			 <b>Note:</b> The human readable interpretive field for the 2D Composite Component is displayed if the i[n] is set to 1.

**Bar Code, Select Type (continued)****Planet**

c22

Planet is a linear bar code similar to the POSTNET bar code. Planet bar codes print at a fixed size so any height and width commands are ignored.

**Bar Code Field, Create or Edit**

**Purpose:** Edits or creates a bar code field.

**Syntax:** `Bn [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The <i>name</i> parameter is optional. The field can be up to eight ASCII characters, but cannot start with a numeric character.

**Notes:** When you create a bar code field, you automatically create an interpretive field if you have enabled the Interpretive parameter.

**Bar Code Field Default Parameters**

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Bar code type	c	Code 39
Check digits		Disabled
Prefix		None
Data length		20
Ratio	r	3 to 1
Interpretive	i	Disabled
Height magnification	h	50
Width magnification	w	1

The printer generates an error code (38) if the field number is out of range.

## Bitmap Cell Height for Graphic or UDF, Define

**Purpose:** Defines the height of a graphic or user-defined font.

**Syntax:**  $yn$

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 1	bitmap fonts	<p><math>n</math> is the number of rows for a graphic or font (bitmap). For outline fonts, <math>n</math> represents the height of the base character in number of dots.</p> <p>The printer generates an error code (52) for an invalid height.</p>
	n = 10	outline fonts	
	n = 50	graphics	
3400	n = 1	bitmap fonts	<p><math>n</math> is the number of rows for a graphic or font (bitmap). For outline fonts, <math>n</math> represents the height of the base character in number of dots.</p> <p>The printer generates an error code (52) for an invalid height.</p>
	n = 10	outline fonts	
	n = 50	graphics	
3400e	n = 1	bitmap fonts	<p>200 dpi: <math>n</math> is the number of rows for a graphic or font (bitmap). For outline fonts, <math>n</math> represents the height of the base character in number of dots.</p> <p>400 dpi: <math>n</math> represents the height of the base character in number of dots.</p> <p>The printer generates an error code (52) for an invalid height.</p>
	n = 10	outline fonts	
	n = 50	graphics	
3440	n = 1	bitmap fonts	<p>1 - 1599 <math>n</math> is the number of rows for a graphic or font (bitmap). For outline fonts, <math>n</math> represents the height of the base character in number of dots.</p> <p>The printer generates an error code (52) for an invalid height.</p>
	n = 10	outline fonts	
	n = 50	graphics	
3600	n = 1	bitmap fonts	<p>1 - 599 <math>n</math> is the number of rows for a graphic or font (bitmap). For outline fonts, <math>n</math> represents the height of the base character in number of dots.</p> <p>The printer generates an error code (52) for an invalid height.</p>
	n = 10	outline fonts	
	n = 50	graphics	

**Bitmap Cell Height for Graphic or UDF, Define (continued)**

Printer	Default		Values for n	Notes
4100	n = 1	bitmap fonts or graphics	1 - 599 1 - 799 (with expanded memory)	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
4400	n = 1 n = 10 n = 50	bitmap fonts outline fonts graphics	1 - 599	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
44X0	n = 1 n = 10 n = 50	bitmap fonts outline fonts graphics	4420: 1 - 799 4440: 1 - 1599	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
4X30	n = 1 n = 10 n = 50	bitmap fonts outline fonts graphics	1 - 599	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
7421, PC41	n = 1 n = 10 n = 50	bitmap fonts outline fonts graphics	1 - 799	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1 n = 10 n = 50	bitmap fonts outline fonts graphics	1 - 799	<i>n</i> is the number of rows for a graphic or font (bitmap). For outline fonts, <i>n</i> represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.

## Bitmap Cell Width for Graphic or UDF, Define

**Purpose:** Defines the maximum width for a graphic or any character in a font. Each character has a width within this amount, which should be at least as wide as the widest character in the font. *n* is the number of columns for the UDC, bitmap, or user-defined font. For outline fonts, *n* represents the width of the base character in number of dots.

**Syntax:** *xn*

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
3240	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
3400	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
3400e	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
3440	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
3600	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
4100	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
44X0	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
4400	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	
4X30	<i>n</i> = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	<i>n</i> = 10	outline fonts	

**Bitmap Cell Width for Graphic or UDF, Define (continued)**

Printer	Default	Values for n	Notes
7421, PC41	n = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	n = 10	outline fonts	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1	bitmap fonts or graphics	The printer generates an error code (52) for an invalid width.
	n = 10	outline fonts	

**Bitmap User-Defined Font, Clear or Define**

**Purpose:** Clears or creates a user-defined bitmap font set. The font ID number is n.

**Syntax:** `Tn [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	Not available	3 to 6 and 8 to 19	The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters.

**Notes:** If you have already defined font set n, the printer erases all previous characters in the font. You can recreate an existing font, but you cannot edit it. To change any characters, you must transmit the entire font set.

**Border Around Human-Readable Text, Define**

**Purpose:** Defines a border around a human-readable field.

**Syntax:** `bn`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0	no borders (black letters)	When <i>n</i> > 0, field prints white letters with n dot size border around the field.
3400A 3400B	n = 0	no borders (black letters)	When <i>n</i> > 0, field prints white letters with n dot size border around the field.
3400C 3400D	n = 0	no borders (black letters)	When <i>n</i> > 0, field prints white letters with n dot size border around the field.

**Border Around Human-Readable Text, Define (continued)**

Printer	Default		Values for n	Notes
3400e	n = 0	no borders (black letters)	0 - 999	When $n > 0$ , field prints white letters with n dot size border around the field.
3440	n = 0	no borders (black letters)	0 - 999	When $n > 0$ , field prints white letters with n dot size border around the field.
3600	n = 0	no borders (black letters)	0 - 199	When $n > 0$ , field prints white letters with n dot size border around the field.
4100	n = 0	no borders (black letters)	0 - 199	When $n > 0$ , field prints white letters with n dot size border around the field.
4400	n = 0	no borders (black letters)	0 - 199	When $n > 0$ , field prints white letters with n dot size border around the field.
44X0	n = 0	no borders (black letters)	0 - 999	When $n > 0$ , field prints white letters with n dot size border around the field.
4X30	n = 0	no borders (black letters)	0 - 199	When $n > 0$ , field prints white letters with n dot size border around the field.
7421, PC41	n = 0	no borders (black letters)	0 - 999	When $n > 0$ , field prints white letters with n dot size border around the field.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	no borders (black letters)	0 - 999	When $n > 0$ , field prints white letters with n dot size border around the field.



## Box Field, Create or Edit

**Purpose:** Accesses or creates a box field.

**Syntax:** `wn [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The <i>name</i> parameter is optional. The field can be up to eight ASCII characters, but cannot start with a numeric character.

**Notes:** The next table describes the box field parameters.

### Box Field Parameter Descriptions

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Box length	l	100
Box height	h	100
Box width	w	1

## Character Bitmap Origin Offset, Define

**Purpose:** Defines the offset, to the right, of all characters in a font. If you define each character's width in columns, with the first column numbered 0, then the origin of each character is at the column with the same number as n. For example, n = 2 shifts the character origins over two columns to the right.

**Syntax:** `xn`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0	0 - 599	Use this command only with bitmap fonts.
3400A 3400B	n = 0	0 - 599	Use this command only with bitmap fonts.
3400C 3400D 3400e	n = 0	0 - 800	Use this command only with bitmap fonts.
3440	n = 0	0 - 800	Use this command only with bitmap fonts.

**Character Bitmap Origin Offset, Define (continued)**

Printer	Default	Values for n	Notes
3600	n = 0	0 - 599	Use this command only with bitmap fonts.
4100	n = 0	0 - 599	Use this command only with bitmap fonts.
4400	n = 0	0 - 599	Use this command only with bitmap fonts.
44X0	n = 0	0 - 800	Use this command only with bitmap fonts.
4X30	n = 0	0 - 599	Use this command only with bitmap fonts.
7421, PC41	n = 0	0 - 800	Use this command only with bitmap fonts.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 800	Use this command only with bitmap fonts.

**Character Rotation or Bar Code Ratio, Define**

**Purpose:** Defines the character rotation for human-readable fields, or the bar code ratio for a bar code field.

**Syntax:** `rn`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0	character rotation	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise  Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1
	n = 1	bar code ratio	
			If the bar code width is odd and you select r0, the printer substitutes r1.  The narrow elements of this code are always at least 3 dots, therefore select a width of w = 1 to have the shortest symbol.

**Character Rotation or Bar Code Ratio, Define (continued)**

Printer	Default		Values for n	Notes
3400A 3400B	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise  Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
3400C 3400D 3400e	n = 0	character rotation	Human-readable fields: n = 0 horizontal	n = 3 applies to Code 39 for a ratio of 7 dots to 3 dots.
	n = 1	bar code ratio	n = 1 90° counterclockwise  Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
3440	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise  Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
3600	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise  Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	

**Character Rotation or Bar Code Ratio, Define (continued)**

Printer	Default		Values for n	Notes
4100	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element:	
			n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
4400	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element:	
			n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
44X0	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element:	
			n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
4X30	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element:	
			n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	

**Character Rotation or Bar Code Ratio, Define (continued)**

Printer	Default		Values for n	Notes
7421, PC41	n = 0	character rotation	Human-readable fields:	
			n = 0	horizontal
	n = 1	bar code ratio	n = 1	90° counterclockwise
			Bar code fields, ratios of wide element to narrow element:	
			n = 0	2.5 to 1
	n = 0	character rotation	n = 0	horizontal
			n = 1	90° counterclockwise
	n = 1	bar code ratio	Bar code fields, ratios of wide element to narrow element:	
			n = 0	2.5 to 1
			n = 1	3.0 to 1
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	character rotation	n = 0	horizontal
			n = 1	90° counterclockwise
	n = 1	bar code ratio	Bar code fields, ratios of wide element to narrow element:	
			n = 0	2.5 to 1
			n = 1	3.0 to 1
	n = 0	character rotation	n = 0	horizontal
			n = 1	90° counterclockwise
	n = 1	bar code ratio	Bar code fields, ratios of wide element to narrow element:	
			n = 0	2.5 to 1
			n = 1	3.0 to 1
	n = 0	character rotation	n = 0	horizontal
			n = 1	90° counterclockwise
	n = 1	bar code ratio	Bar code fields, ratios of wide element to narrow element:	
			n = 0	2.5 to 1
			n = 1	3.0 to 1

**Code 39 Prefix Character, Define**

**Purpose:** Defines the prefix for a Code 39 field. The prefix is only valid for Code 39 fields.

**Syntax:** p [n1] [n2] [n3] [n4] ;

**Printers:**

Printer	Default	Values for n	Notes
All	No prefix	A to Z (uppercase only) and 0 to 9	Enter the prefix after you select Code 39. For example, enter c0,3;pABC4; rather than pABC4;c0,3;. When you enter the @ character as n1, it clears all prefixes. Prefix characters do not appear in the interpretive field.

## Command Tables, Load

**Purpose:** Downloads a command table, with *t* as the command table identifier. This command table identifier is followed by the nibblized command entries (*c1*-*cn*) to be loaded into the table. The printer expects two hex digits for every entry in the table.

**Syntax:** `C[t], [command 1], [command 2], ..., [command n]`  
*t* is the command table identifier.

### Printers:

Printer	Default	Values for <i>t</i>	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i, 7421, and PC41	Not available	0 = Print mode commands 1 = Escape print commands 2 = Shift print commands 3 = Status response 4 = Protocol characters	Data must be nibblized ASCII characters ranging from 0 to 9 and A to F.

**Notes:** New commands become effective after you reset the printer or turn the power off and back on. For help, see Appendix D, “User-Defined Interface Tables.”

To change an entry in the table, you must send the entire table to the printer as a string of ASCII characters in hexadecimal form. Any entry that you do not redefine retains its old value. To modify only a few commands, send the <ESC>Z command, capture the output, modify it, and send it back to the printer.

## Current Edit Session, Save

**Purpose:** Saves the current page, format, UDC, or UDF being edited. The printer remains in Program mode.

**Syntax:** `N`

**Notes:** The printer automatically saves the current page, format, or UDC when you call a new one or when you exit Program mode.

## Data Source for Format in a Page, Define

**Purpose:** Defines a data source for a format assigned to a page position.

**Syntax:** `en [, m1] [, m2]`

**Printers:**

Printer	Default	Values for n		Notes
All except 4X30	n = 0 m1 = a m2 = 0	n = 0	format receives its data during Print mode	The format ID must be the same for both the master and slave formats.
		n = 1	format is a slave of another format within this page.	For the 4X30, this command was called Format Page Position, Define Data Source. All values are the same.

*m1* is the position of the master format within the page.

*m2* is the data offset to apply to the slave format. You can only offset data that is delimited by numeric field separator <FS> or alphanumeric field separator <GS>.

## Field, Delete

**Purpose:** Deletes field n from the format.

**Syntax:** `Dn`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 -199.	You cannot delete the last field in a format. If you delete the current field, the field pointer points to the next field. If you delete a master field, you also delete all slave fields of that master field.

## Field Data, Define Source

**Purpose:** Defines a data source for the current field and how many characters are in the field.

**Syntax:** `dn [, m1] [, m2]`

**Printers:**

Printer	Default		Values for n	Values for m1 (d0, d1)
3240	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3400	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3440	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550 (incl. 2D fields)
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3600	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
4100	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 250
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
4400	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 250
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
44X0	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 250
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	



**Field Data, Define Source (continued)**

Printer	Default		Values for n	Values for m1 (d0, d1)
4X30	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
7421, PC41	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
EasyCoder PM4i (RFID)	0,64,0	RFID fields	0 = Data entered in Print mode 1 = Data entered in Print mode 2 = Not available 3 = Fixed data	0 - 3550

The syntax for this command is illustrated in these examples.

```
d0 [, m1]
d1 [, m1] ;
```

Enter optional data in Print mode. *m1* is the maximum amount of data that you can enter into this field. The default for *m1* is 20 characters for bar code fields, 30 characters for human-readable fields, and 64 characters for RFID fields.

For variable RFID fields, make sure to allow for field separator commands. Also, fields in hex format need at least twice as many characters as defined in the RFID tap setup command. For example, to write 4 hex bytes to a tag, you need to allow at least 8 characters in the variable data field.

```
d2 , m1 [, m2] ;
```

Copy data into this field from field *m1*. You must define the field before you can use it. *m2* is an optional positive integer numeric field offset that can range from 0 to 9999, with 0 as the default. You can only offset data delimited by numeric field separator <FS> or alphanumeric field separator <GS>. A bar code field cannot copy data from a human-readable field, but a human-readable field can copy data from a bar code field. You can use up to 19 slave fields in each format,

```
d3 , m1 ;
```

**Field Data, Define Source (continued)**

Fixed data *m1* is stored as part of the format, and you use it every time you print the current field. You cannot change entered data with print commands.

Many formats divide data into separate fields and then rearrange these fields to fit the RFID tag or composite bar codes. Use the <HT> character to divide the fields to enable you to enter the entire source data with one command.

The following example shows how to separate the fields with <HT>:

```
<STX>Q3;a3,1;d3,0<HT>4011661<HT>0030000001;<ETX>
<STX><ESC>J3,1<ETX>
```

**Field Direction, Define**

**Purpose:** Defines the field rotation.

**Syntax:** `f n`

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Horizontal 1 = Rotated 90° counterclockwise from horizontal 2 = Rotated 180° counterclockwise from horizontal 3 = Rotated 270° counterclockwise from horizontal

**Field Origin, Define**

**Purpose:** Defines the origin for a field. The field origin is the upper left corner of the field. Horizontal *n* and vertical *m* locations represent the number of dots from the label's origin. The origin (0,0) is the upper left square on the label.

**Syntax:** `o n, m`

**Printers:**

Printer	Default	Values for n and m
All	n = 0 m = 0	n = 0 to 19999 m = 0 to 19999

## Font Character Width, Define

**Purpose:** Defines the amount of space from the origin of one letter to the origin of the next. If *n* is too small, characters may overlap.

**Syntax:** *zn*

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
3240	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 999 With expanded memory: 1 - 1999	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
3400	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
3400e	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	200 dpi: 1 - 799 400 dpi: 1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
3440	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
3600	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
4100	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 599 With expanded memory: 1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.
4400	Character's bitmap width, minus the font character offset ( <i>Xn</i> ) plus the intercharacter space ( <i>zn</i> )	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command ( <i>zn</i> ) if you use it with this command.

**Font Character Width, Define (continued)**

Printer	Default	Values for n	Notes
4420	Character's bitmap width, minus the font character offset (Xn) plus the intercharacter space (zn)	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command (zn) if you use it with this command.
4440	Character's bitmap width, minus the font character offset (Xn) plus the intercharacter space (zn)	1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command (zn) if you use it with this command.
4X30	Character's bitmap width, minus the font character offset (Xn) plus the intercharacter space (zn)	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command (zn) if you use it with this command.
7421, PC41	Character's bitmap width, minus the font character offset (Xn) plus the intercharacter space (zn)	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command (zn) if you use it with this command.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Character's bitmap width, minus the font character offset (Xn) plus the intercharacter space (zn)	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command (zn) if you use it with this command.

## Font Type, Select

**Purpose:** Selects a font type for human-readable fields.

**Syntax:** `cn [ , m] [ , o]`

where:

*n* is the font ID number.

*m* is the intercharacter gap (the space between characters). If you do not specify *m*, the printer uses the default value of the selected font.

*o* is the language for the field. If you do not specify the language, the printer uses the default setting of the <SI>l command on the PM/PF/PX printers.

### Printers:

Printer	Default	Values for n	Values for m
3240	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3400A	n = 0	0 to 24	-199 to 199
3400B	n = 0	0 to 25, 30 to 41, 50 to 56 with the Kanji option	-199 to 199
3400C 3400D	n = 0	0 to 25, 26, 28, 30 to 71 50 to 56 with the Kanji option	-199 to 199
3400e	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3440	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3600	n = 0	0 to 25, 30 to 41 50 to 56 with the Kanji option	-199 to 199
4100	n = 0	0 to 24	-199 to 199
4400	n = 0	0 to 25	-199 to 199
44X0	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
4X30	n = 0	0 to 26, 28, 30 to 41	-199 to 199
7421, PC41	n = 0	0 to 26, 28, 30 to 41	-199 to 199
EasyCoder F4	n = 0	0 to 26, 28, 30 to 41	-199 to 199
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 to 26, 28, 30 to 41, 61 to 70	-199 to 199

**Font Type, Select (continued)**

**Notes:** You can set *n* to a number from 0 to 56 for human-readable fields, depending on the fonts your printer supports. The next table includes values for *n* and the font name associated with it.

**Values for *n***

<b>n</b>	<b>Font Name</b>	<b>n</b>	<b>Font Name</b>
0	7 x 9 Standard (86XX font)	38	24 point monospace standard
1	7 x 11 OCR (86XX font)	39	24 point monospace bold
2	10 x 14 Standard (86XX font)	40	30 point monospace bold
3 - 6	User-defined fonts	41	36 point monospace bold
7	5 x 7 Standard (86XX font)	50	Kanji outline font
8 - 19	User-defined fonts	51	Kanji monospace outline font
20	8 point monospace	52	Katakana 12 x 16 bitmap
21	12 point monospace	53	Katakana 16 x 24 bitmap
22	20 point monospace	54	Katakana 24 x 36 bitmap
23	OCR A	55	Kanji 16 x 16 bitmap
24	OCR B size 2	56	Kanji 24 x 24 bitmap
25	Swiss Mono 721 standard outline font	61	Swiss 721
26	Swiss Mono 721 bold outline font	62	Swiss 721 bold
28	Dutch Roman 801 proportional outline font	63	Swiss 721 bold condensed
30	6 point monospace bold	64	Prestige bold
31	8 point monospace bold	65	Zurich extra condensed
32	10 point monospace standard	66	Dutch 801 bold
33	10 point monospace bold	67	Century Schoolbook
34	12 point monospace bold	68	Futura light
35	16 point monospace standard	69	Letter Gothic
36	16 point monospace bold	70	DingDings
37	20 point monospace bold		

For more information about fonts, see the Printer Language, Select command in this chapter. For more information about designing and using fonts, see Chapter 2, “Downloading Fonts to the Printer,” and Appendix C, “Creating User-Defined Bitmap Graphics and Fonts.”

## Format, Create or Edit

**Purpose:** Edits or creates a format.

**Syntax:** `An[,name]` or `Fn[,name]`

**Printers:**

Printer	Default	Values for n	Notes
3240	Not available	1 - 99	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
3400A 3400B	Not available	1 - 19	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
3400C 3400D	Not available	*, 1 - 19	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3400e	Not available	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3440	Not available	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3600	Not available	1 - 19	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
4100	Not available	1 - 19	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
4400	Not available	1 - 19	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.

**Format, Create or Edit (continued)**

Printer	Default	Values for n	Notes
44X0	Not available	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
4X30	Not available	1 - 19	<i>n</i> is the format ID number. The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
7421, PC41	Not available	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Not available	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.

**Notes:** The printer generates an error code (36) if the format number is out of range.

**Format Direction in a Page, Define**

**Purpose:** Defines the format directions within a page.

**Syntax:** `qn`

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Horizontal 1 = Rotated 90° counterclockwise from horizontal 2 = Rotated 180° counterclockwise from horizontal 3 = Rotated 270° counterclockwise from horizontal



## Format, Erase

**Purpose:** Erases format ID number *n*.

**Syntax:** *En*

**Printers:**

Printer	Default	Values for n	Notes
3240	Not available	1 - 99	You cannot erase format 0.
3400	Not available	1 - 19	You cannot erase format 0.
3400e	Not available	1 - 99	You cannot erase format 0.
3440	Not available	1 - 99	You cannot erase format 0.
3600	Not available	1 - 19	You cannot erase format 0.
4100	Not available	1 - 19	You cannot erase format 0.
4400	Not available	1 - 19	You cannot erase format 0.
44X0	Not available	1 - 99	You cannot erase format 0.
4X30	Not available	1 - 19	You cannot erase format 0.
7421, PC41	Not available	1 - 99	You cannot erase format 0.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Not available	1 - 99	You cannot erase format 0.

## Format Offset Within a Page, Define

**Purpose:** Defines the format offsets within a page and creates new origins for fields within a format by adding the format offsets to the original field offsets. *m* and *n* represent increments of dot sizes.

**Syntax:** *On, m*

**Printers:**

Printer	Default	Values for n	Values for m
All	n = 0 ,m = 0	0 - 19999	0 - 19999

## Format Page Position, Define Data Source

See the Data Source for Format in a Page, Define command.

## Format Position From Page, Delete

**Purpose:** Deletes the format position  $p$  from a page, where  $p$  is the page position.

**Syntax:**  $m p$

**Printers:**

Printer	Default	Values for $p$
All	$p = a$	$a$ to $z$

## Format Position in a Page, Assign

**Purpose:** Assigns the format  $n$  to page position,  $p$ . The  $n$  is the numeric format ID and the  $p$  is the page position.

**Syntax:**  $m p, n$

**Printers:**

Printer	Default	Values for $p$	Values for $n$
3240	$p = a$	$a$ to $z$	0 - 19
3400	$p = a$	$a$ to $z$	0 - 19
3400e	$p = a$	$a$ to $z$	0 - 99
3440	$p = a$	$a$ to $z$	0 - 99
3600	$p = a$	$a$ to $z$	0 - 19
4100	$p = a$	$a$ to $z$	0 - 19
4400	$p = a$	$a$ to $z$	0 - 19
44X0	$p = a$	$a$ to $z$	0 - 99
43X0	$p = a$	$a$ to $z$	0 - 19
7421, PC41	$p = a$	$a$ to $z$	0 - 99
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	$p = a$	$a$ to $z$	0 - 99

**Notes:** A format may be in multiple positions.

The printer generates an error code (36) if the format ID is out of range.

## Graphic, Select

**Purpose:** Selects a graphic for graphic fields.

**Syntax:** *cn*

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 99	This applies to a graphic field only.

## Graphic or UDC, Define

**Purpose:** Maps one column of bitmap for a graphic or a font character. n is the column to be mapped.

**Syntax:** *un, m . . . m*

**Printers:**

Printer	Default	Values for n	Notes
3240	Not available	1 - 999 With expanded memory: 1 - 1999	
3400	Not available	1 - 799	
3400e	Not available	200 dpi: 1 - 799 400 dpi: 1 - 1599	
3440	Not available	1 - 1599	
3600	Not available	1 - 599	
4100	Not available	1 - 599 With expanded memory: 1 - 799	
4400	Not available	1 - 599	
44X0	Not available	4420: 1 - 799 4440: 1 - 1599	
4X30	Not available	1 - 599	These printers do not support Emulation mode.
7421, PC41	Not available	1 - 799	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Not available	1 - 799	

In Emulation mode, *m...m* is a string of 1s and 0s that make up the column and specify whether or not to print in that row element of the

**Graphic or UDC, Define (continued)**

column ( $m = 1$  prints,  $m = 0$  does not). Any unmapped columns or row elements default to  $m = 0$ . In Advanced mode, each data byte  $m$  represents 6 bits of the bitmap.

**Height Magnification of Bar, Box, or UDC, Define**

**Purpose:** Defines box, bar code, or UDC height magnification. For bar code and box fields, define the height  $n$  in number of dots.

**Syntax:** `hn`

**Printers:**

Printer	Default		Values for n: Human-readable fields and graphics	Values for n: bar codes and box fields
3240	$n = 50$	Bar code height	1 - 250 (graphics)	1 - 1999
	$n = 100$	Box height	1 - 400 (human readable fields)	(bar codes)
	$n = 2$	POSTNET and human- readable		1 - 9999
	$n = 1$	Graphics		(box fields)
3400A 3400B	$n = 50$	Bar code height	1 - 250 (graphics)	1 - 1999
	$n = 100$	Box height	1 - 400 (human readable fields)	(bar codes)
	$n = 2$	POSTNET readable fields		1 - 9999
	$n = 1$	Graphics		(box fields)
3400C 3400D	$n = 50$	Bar code height	1 - 999	1 - 9999
	$n = 100$	Box height		
	$n = 2$	POSTNET readable fields		
	$n = 1$	Graphics		
3400e	$n = 50$	Bar code height	1 - 999	1 - 9999
	$n = 100$	Box height		
	$n = 2$	POSTNET readable fields		
	$n = 1$	Graphics		
3440	$n = 50$	Bar code height	1 - 999	1 - 9999
	$n = 100$	Box height		
	$n = 2$	POSTNET readable fields		
	$n = 1$	Graphics		

**Height Magnification of Bar, Box, or UDC, Define (continued)**

<b>Printer</b>	<b>Default</b>	<b>Values for n: Human-readable fields and graphics</b>	<b>Values for n: Bar codes and box fields</b>
3600	n = 50 Bar code height	1 - 250 (graphics)	1 - 1999 (bar codes)
	n = 100 Box height	1 - 400 (human readable fields)	1 - 9999 (box fields)
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
4100	n = 50 Bar code height	1 - 250	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
4400	n = 50 Bar code height	1 - 250	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
44X0	n = 50 Bar code height	1 - 999	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
4X30	n = 50 Bar code height	1 - 250	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
7421, PC41	n = 50 Bar code height	1 - 999	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 50 Bar code height	1 - 999	1 - 9999
	n = 100 Box height		
	n = 2 POSTNET and human- readable fields		
	n = 1 Graphics		

**Height Magnification of Bar, Box, or UDC, Define (continued)**

**Notes:** For human-readable fields, graphics, and the POSTNET symbology,  $n$  represents the vertical magnification of the character bitmap.

If you set  $n$  to a number that is too large, the printer uses the highest value it can support.

In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 and 300 dpi (PM4i, PX4i, PX6i) printers, a dot is 3.3 mil.

**Human-Readable Field, Create or Edit**

**Purpose:** Edits or creates a human-readable field.

**Syntax:** `Hn [ , name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The <i>name</i> parameter is an optional field. You can use eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** The parameters for the default field are listed in the next table.

**Human-Readable Default Parameters**

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Character rotation	r	0 degrees
Font	c	7 x 9 standard
Height magnification	h	2
Width magnification	w	2
Pitch	g	Disabled
Point	k	Disabled
Border	b	Disabled
Data origin	d	Print mode
Data length		30

## Intercharacter Space for UDF, Define

**Purpose:** Defines the amount of space added to the default intercharacter gap length for a bitmap font. The number of dots you select for  $n$  define the intercharacter gap length.

**Syntax:**  $zn$

**Printers:**

Printer	Default	Values for $n$	Notes
3240	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
3400	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
3440	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
3600	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
4100	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
4400	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
44X0	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
4X30	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
7421, PC41	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command (Zn).

**Notes:** The printer generates an error code (52) for invalid lengths.

The unit for  $n$  is in number of dots per pixels. In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 printers, a dot is 3.3 mil.

## Interpretive Field, Edit

**Purpose:** Edits an interpretive field.

**Syntax:** `IN`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	n is the field ID number of the bar code field to be interpreted.

**Notes:** You cannot create interpretive fields with this command; you can only create or delete them when enabling the interpretive of the corresponding bar code field. The parameters for the default field are listed in the next table.

### *Interpretive Field Default Parameters*

Parameter	Syntax	Default
Field origin	o	2 dots below bar code, left justified
Field direction	f	0 degrees
Character rotation	r	0 degrees
Font	c	7 x 9 standard
Height magnification	h	2
Width magnification	w	2
Pitch	g	Disabled
Point	k	Disabled
Border	b	Disabled
Data origin	d	Print mode
Data length		30

Each interpretive field is counted as an individual field in the maximum number of 200 fields (0 – 199).



## Interpretive Field, Enable or Disable

**Purpose:** Determines if the interpretive field of the current bar code field prints.

**Syntax:** `in`

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Disable 1 = Enable with start and stop characters 2 = Enable without start or stop characters

**Notes:** When you enable the interpretive field, the human-readable information in the default font (font 0, 7 x 9 standard) prints 2 dots below the bar code field and is left justified.

Use the I command to edit an interpretive field.

## Length of Line or Box Field, Define

**Purpose:** Defines the length of a line or box. You define the length of a line or box field in the number of dots.

**Syntax:** `ln`

**Printers:**

Printer	Default	Values for n
All	n = 100	1 to 9999

**Notes:** In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 printers, a dot is 3.3 mil.

## Line Field, Create or Edit

**Purpose:** Accesses or creates a line field.

**Syntax:** `Ln [ , name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 199	The <i>name</i> parameter is an optional field. The field can be up to eight ASCII characters.

**Notes:** The parameters for the default field are listed in the next table.

### Line Field Default Parameters

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Line length	l	100
Line width	w	1

## Outline Font, Clear or Create

**Purpose:** Clears or creates an outline font or graphic.

**Syntax:** `Jn [ , name] [ , type] [ , size]`

where:

*n* is the font or graphic ID.

*name* is a string of up to eight ASCII characters (not counting the semicolon) that provides a name for the font or graphic.

*type* is the type of the font.

*size* defines the size of a TrueType font and is only needed for double-byte fonts that exceed 512K bytes.

**Outline Font, Clear or Create (continued)****Printers:**

Printer	Values for n	Values for type	Notes
3240	3 to 6, 8 to 19	0 = Speedo font	
3400A 3400B	3 to 6, 8 to 19	0 = Speedo font	
3400C	3 to 6, 8 to 19	0 = Speedo font (default) 2 = Double-byte bitmap font	
3400e	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
3440	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
3600	3 to 6, 8 to 19	0 = Speedo font	
4100	Not available	Not available	This command is only available on the 4100 with the addition of expanded RAM.
4400	3 to 6, 8 to 19	0 = Speedo font	
44X0	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
4X30	3 to 6, 8 to 19	0 = Speedo font (default)	
7421, PC41	3 to 6, 8 to 19	0 = Speedo font (default) 2 = Double-byte bitmap font	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	3 to 6, 8 to 19	1 = TrueType font	

**Notes:** If you have already defined font set n, the printer erases all previous characters in the font.

## Outline Font, Download

**Purpose:** Downloads outline font descriptions.

**Syntax:** `jnn...nn`

where *n* is the information that describes all characters within the font.

You must send the font information to the printer as a string of ASCII characters in hexadecimal form. The printer expects two hex digit bytes for every 8-bit byte of information. Data must be ASCII characters, ranging from 0 to 9 and A to F. All characters are loaded at once, not individually as with bitmap fonts. The description for the whole font can be thousands of characters long; however, the maximum message length is only 255. Therefore, the font description may have to be split between successive `j` commands.

**Notes:** The printer stores the incoming font description in the font you select with the `J` command.

See Chapter 2 for more information about downloading fonts.

## Page, Create or Edit

**Purpose:** Edits or creates a page.

**Syntax:**  $Sn$   
where  $n$  is the numeric page ID.

**Printers:**

Printer	Default	Values for $n$	Notes
All	Not available	1 to 9	You cannot edit the default page (page 0).

**Notes:** The printer generates an error code (26) if a page number is out of range.

The following example illustrates the Page, Create or Edit command:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o1000,100;f3;b10;c0;h3;w2;d0,35<ETX>
<STX>H1;o300,250;c0;f3;h3;w3;<ETX>
<STX>B2;o250,100;c0;f3;h200;w2;i1;<ETX>
<STX>W3;o25,50;l300;h600;w5;<ETX>
<STX>R<ETX>
<STX><ESC>P<ETX>
<STX>E2;F2;<ETX>
<STX>H0;o800,250;c0;f3;h3;w3;<ETX>
<STX>B1;o750,100;c0;f3;h200;w2;i1;<ETX>
<STX>W2;o525,50;l300;h600;w5;<ETX>
<STX>R<ETX>
<STX><ESC>P<ETX>
<STX>S1;Ma,1;O0,0;Mb,2;O0,0<ETX>
<STX>R<ETX>
<STX><ESC>G1<CAN><ETX>
<STX><ESC>Ea<ETX>
<STX>Example using the page command<CR><ETX>
<STX>Format 1<CR><ETX>
<STX>Format1<STX>
<STX><ESC>Eb<ETX>
<STX>Format 2<CR><ETX>
<STX>Format2<STX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
<STX><ESC>G0<ETX>
```

## Page, Delete

**Purpose:** Deletes a page.

**Syntax:** *sn*

where *n* is the numeric page ID.

**Printers:**

Printer	Default	Values for n	Notes
All	Not available	1 to 9	You cannot edit the default page (page 0).

## Pitch Size, Set

**Purpose:** Sets the pitch size that defines the size of the characters in human-readable fields. You can only use this command in Advanced mode. When you use the pitch size command, you disable the height and width magnification and point.

**Syntax:** *gn*

**Printers:**

Printer	Default	Values for n	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 12	1 to 50	You can use this command for both bitmap and outline fonts. Pitch is characters per line. The higher the pitch, the smaller the characters.

**Notes:** Use the pitch size command to scale outline fonts smoothly.

## Point Size, Set

**Purpose:** Sets the point size that defines the size of the characters in human-readable fields. You can only use this command in Advanced mode.

**Syntax:** `k.n`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 12	4 - 180	This command works most effectively on fonts c25, c26, and c27.
3400	n = 12	4 - 288	This command works most effectively on outline fonts.
3400e	n = 12	200 dpi: 3 - 288 400 dpi: 3 - 255	This command works most effectively on outline fonts.
3440	n = 12	3 - 255	This command works most effectively on fonts c25, c26, and c27.
3600	n = 12	4 - 288	This command works most effectively on font c25.
4100	n = 12	4 - 212	This command works most effectively on fonts c20, c21, and c22.
4400	n = 12	4 - 212	This command works most effectively on fonts c20, c21, c22, and c25.
44X0	n = 12	4420: 3 - 288 4440: 3 - 255	This command works most effectively on outline fonts.
4X30	n = 12	4 - 212	This command works most effectively on fonts c20, c21, c22, and c25.
7421, PC41	n = 12	3 - 288	This command works most effectively on outline fonts.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 12	4 - 288	This command works most effectively on outline fonts.

**Notes:** A point size equals 1/72 inch. A higher point size means larger characters.

## Print Line Dot Count Limit, Set

**Syntax:** `vn`

**Notes:** This is a null command and the printer ignores it.

## Program Mode, Exit

**Purpose:** Instructs the printer to exit Program mode and enter Print mode. It saves any format or page currently being edited.

**Syntax:** `R`

## RFID Tag Field Setup

**Purpose:** Defines an RFID tag field for the write command.

**Syntax:** `an, m, p, q`

where:

- n* specifies the format number of a tag format for the source data.
- m* specifies a tag segment from which data is read or to which data is written.
- p* specifies the first byte of the declared segment (*m*) on the aligned tag to which data is written.
- q* specifies how many bytes on the tag are reserved for the data to be written, starting at the position stated by the start of field data command.

### Printers:

Printer	Default	Values	Notes
EasyCoder PM4i (RFID)	<i>n</i> = 1	0 – 18	
	<i>m</i> = 1	1 = ID 2 = Data 3 = All  10 = RESERVED 11 = EPC 12 = TID 13 = USER	Values 10-13 are only supported by EPCglobal Gen 2 tags.
	<i>p</i> = 0	Varies by RFID tag type	The first byte of a segment is always 0, regardless of the segment's physical location on the tag.
	<i>q</i> = 8	Varies by RFID tag type	The length of field data may differ, depending on the segment and tag air interface ISO standard.



**RFID Tag Field Setup (continued)**

**Notes:** This command specifies how data is stored on the tag. Use the next table to match the format number with the format name.

**Tag Format Field Parameters**

Format Number	Format Name	Format Number	Format Name
0	NUM	10	SGLN-96
1	HEX	11	SGLN-64
2	ASCII	12	GRAI-96
3	SSCC-96	13	GRAI-64
4	SSCC-64	14	GIAI-96
5	SGTIN-96	15	GIAI-64
6	SGTIN-64	16	GID-96
7	EPC-URN	17	USDOD-96
8	EPC-HEX96	18	USDOD-64
9	EPC-HEX64		

The next table provides examples of how choosing the NUM, HEX, or ASCII formats affects how data is stored on the tag. The Data column shows the original field data. Depending on the format (NUM, HEX, ASCII) you choose, the appropriate column shows you the data (in hex) that is stored on the tag.

**Tag Format, Example of NUM, HEX, ASCII**

Data	NUM	HEX	ASCII
ABCD	Not applicable since the data is not numeric.	AB,CD	41,42,43,44
1234	00,00,04,D2 Hex equivalent of the number 1234.	12,34	31,32,33,34
ABC	Not applicable since the data is not numeric.	Not applicable since the data does not contain an even number of digits (pairs)	42,42,43
RFID	Not applicable since the data is not numeric.	Not applicable since the data is not in hex.	52,46,49,44
257	00,00,01,01	Not applicable since the data does not contain an even number of digits (pairs)	32,35,37

**RFID Tag Field Setup (continued)****Tag Format Details and Descriptions**

Tag Format	Details	Description
SSCC-96	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 6-12 digits  <b>Serial Reference:</b> Numeric, 11-5 digits	SSCC is intended for assignment to individual objects and does not require any additional fields to serve as an EPC pure identity. Size of segment is 12 bytes.  Company Prefix + Serial Reference = 17 digits  Example for a fixed data field: "d3,filter<HT>company prefix<HT>serial reference;"
SSCC-64	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 0-16 383  <b>Serial Reference:</b> Numeric, 0-99 999 999 999	Same description as SSCC-96 except that the size of segment is 8 bytes.  Example for a fixed data field: "d3,filter<HT>company prefix index<HT>serial reference;"
SGTIN-96	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 6-12 digits  <b>Item Reference:</b> Numeric, 7-1 digits  <b>Serial Number:</b> Numeric, 0-274 877 906 943	A GTIN by itself does not fit the definition of an EPC pure identity, because it does not uniquely identify a single physical object. Instead, a GTIN identifies a particular class of object, such as a particular kind of product. To create a unique identifier for individual objects, the GTIN is augmented with a serial number, which the managing entity is responsible for assigning uniquely to individual object classes. The combination of GTIN and a unique serial number is called a Serialized GTIN (SGTIN). Size of segment is 12 bytes.  Company prefix + item reference = 13 digits  Example for a fixed data field: "d3,filter<HT>company prefix<HT>item reference<HT>serial number;"
SGTIN-64	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 0-16 383  <b>Item Reference:</b> Numeric, 0-1 048 575  <b>Serial Number:</b> Numeric, 0-33 554 431	Same description as SGTIN-96 except that the tag holds 8 bytes.  Example for a fixed data field: "d3,filter<HT>company prefix index<HT>item reference<HT>serial number;"
EPC-URN	URN string  For the EPCglobal tag formats, the pure identity URI representation is as follows: urn:epc:tag:epc-format: parameter 1.parameter 2.parameter 3	A standardized format for writing data to a tag. URI forms are provided for pure identities, which contain just the EPC fields that serve to distinguish one object from another. These URIs take the form of Uniform Resource Names (URNs), with a different URN namespace allocated for each pure identity type.  Example for fixed data field: "d3,urn:epc:tag:sscc-96:0.12345678.987654321;"

**RFID Tag Field Setup (continued)****Tag Format Details and Descriptions (continued)**

Tag Format	Details	Description
EPC-HEX96	Hex string (0-9, a-f, A-F)	Hex representation of the complete memory area on a 12 byte tag. Example for fixed data field: "d3,0102030405060708090A0B0C;"
EPC-HEX64	Hex string (0-9, a-f, A-F)	Hex representation of the complete memory area of the tag holds 8 bytes of data.
SGLN-96	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 6-12 digits  <b>Location Reference:</b> Numeric, 6-0 digits  <b>Serial Number:</b> Numeric, 0-2 199 023 255 551	A SGLN can represent either a discrete, unique physical location such as a dock door or a warehouse slot, an aggregate physical location such as an entire warehouse, or a logical entity such as an organization that performs a business function such as placing an order. The serial number, that makes it a SGLN, should not be used until specified by the EAN.UCC general specifications. The tag holds 12 bytes of data.  Company prefix + location reference = 12 digits  Example for a fixed data field: "d3,filter<HT>company prefix index<HT>location reference<HT>serial number;"
SGLN-64	<b>Filter Value:</b> Numeric, 0- 7  <b>Company Prefix Index:</b> Numeric, 0-16 383  <b>Location Reference:</b> Numeric, 0-999 999  <b>Serial Number:</b> Numeric, 0-524 287	Same description as SGLN-96 except that the tag holds 8 bytes of data.  Example for a fixed data field: "d3,filter<HT>company prefix index<HT>location reference<HT>serial number;"
GRAI-96	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 6-12 digits  <b>Asset Type:</b> Numeric, 6-0 digits  <b>Serial Number:</b> Numeric, 0-274 877 906 943	GRAI is intended for assignment to individual objects and therefore does not require any additional fields to serve as an EPC pure identity. Holds 12 bytes of data.  Company prefix + asset type = 12 digits  Example for a fixed data field: "d3,filter<HT>company prefix<HT>asset type<HT>serial number;"
GRAI-64	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix Index:</b> Numeric, 0-16 383  <b>Asset Type:</b> Numeric, 0-999 999  <b>Serial Number:</b> Numeric, 0-524 287	Same description as GRAI-96 except that the tag holds 8 bytes of data.  Example for a fixed data field: "d3,filter<HT>company prefix index<HT>asset type<HT>serial number;"

**RFID Tag Field Setup (continued)****Tag Format Details and Descriptions (continued)**

Tag Format	Details	Description
GIAI-96	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix:</b> Numeric, 6-12 digits  <b>Individual Asset Reference:</b> Numeric, 18-12 digits	Intended for assignment to individual objects and therefore does not require any additional fields to serve as an EPC pure identity. The tag can store 12 bytes of data.  Company prefix + Individual asset reference = 24 digits  Example for a fixed data field: <code>"d3,filter&lt;HT&gt;company prefix&lt;HT&gt;individual asset reference;"</code>
GIAI-64	<b>Filter Value:</b> Numeric, 0-7  <b>Company Prefix Index:</b> Numeric, 0-16 383  <b>Individual Asset Reference:</b> Numeric, 0-549 755 813 887	Same description as GIAI-96 except that the tag holds 8 bytes of data.  Example for a fixed data field: <code>"d3,filter&lt;HT&gt;company prefix index&lt;HT&gt;individual asset reference;"</code>
GID-96	<b>General Manager Number:</b> Numeric, 0-268 435 455  <b>Object Class:</b> Numeric, 0-16 777 215  <b>Serial Number:</b> Numeric, 0-68 719 476 735	Independent of any known, existing specifications or identity schemes, 12 byte General Identifier.  Example for a fixed data field: <code>"d3,general manager number&lt;HT&gt;object class&lt;HT&gt;serial number;"</code>
USDOD-96	<b>Filter Value:</b> Numeric, 0-15  <b>Government Managed Identifier:</b> Always 5 characters. 8 bit ASCII, 0-9, SPACE and A-Z except I and O allowed  <b>Serial Number:</b> Numeric, 0-68 719 476 735	The Department of Defense has constructed a tag format with header, filter, government managed identifier (supplier), and serial number. The tag can store 12 bytes of data.  Example of a fixed data field: <code>"d3,filter&lt;HT&gt;government managed identifier &lt;HT&gt;serial number;"</code>
USDOD-64	<b>Filter Value:</b> Numeric, 0-3  <b>Government Managed Identifier:</b> Always 5 characters, 0-9, SPACE and A-Z except I and O allowed  <b>Serial Number:</b> Numeric, 0-16 777 215	Same description as USDOD-96 except that the tag holds 8 bytes of data  Example of a fixed data field: <code>"d3,filter&lt;HT&gt;government managed identifier &lt;HT&gt;serial number;"</code>

## RFID Tag Protect

**Purpose:** Marks whether or not the data that is defined by the RFID field is permanently protected. If the data is protected, another RFID device cannot overwrite it.

**Syntax:** *nn*

**Printers:**

Printer	Default	Values for n	Notes
EasyCoder PM4i (RFID)	n = 0	0 = no write protection 1 = write protection	

## RFID Tag Write Field, Create or Edit

**Purpose:** Edits or creates a field that allows for setting up data to write to an RFID tag. Note that if a program mode command parameter is left out, the default value applies. Temporary format settings are lost at reboot.

**Syntax:** *Qn*

**Printers:**

Printer	Default	Values for n	Notes
EasyCoder PM4i (RFID)	n = 0	0 – 199	

**Notes:** The parameters for the default field are listed in the next table.

### *RFID Tag Write Field Default Parameters*

Parameter	Syntax	Default
RFID tag field setup	a	1,1,0,8
Field data, define source (write operations only)	d	0,30,0
RFID tag protect	n	0

If the tag write fails, an error status of <EOT> is set. If the write succeeds, a status of <ACK> is set. If auto-transmit level 3 is enabled, an <EOT> status response is returned to the host upon error and an <ACK> upon success.

## User-Defined Character, Clear or Create

**Purpose:** Clears or creates a graphic bitmap.

**Syntax:** *Gn* [, *name*]

**Printers:**

Printer	Default	Values for n	Notes
All	Not available	0 to 99	The <i>name</i> parameter is an optional field of up to eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** If you have already defined graphic *n*, the printer erases it and redefines it.

## User-Defined Character Field, Create or Edit

**Purpose:** Edits or creates a graphic field.

**Syntax:** *Un* [, *name*]

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 199	The <i>name</i> parameter is an optional field of up to eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** The parameters for the default field are listed in the next table.

### Parameters for the Default Field

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Character rotation	r	0 degrees
Height magnification	h	1
Width magnification	w	1

## User-Defined Font Character, Create

**Purpose:** Specifies which font character you will define next.

**Syntax:** `t n`

**Printers:**

Printer	Default	Values for n	Notes
3240	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
3400	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
3440	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
3600	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
4100	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
4400	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
44X0	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
4X30	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
7421, PC41	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Not available	0 - 255	<i>n</i> is the decimal representation of the ASCII character. The printer erases existing characters.

## Width of Line, Box, Bar, or Character, Define

**Purpose:** Defines the width magnification of a line, box, bar code, or character. You define the width of line, box, or bar code fields by the number of dots that you specify for  $n$ . For human-readable fields, graphics and the POSTNET symbology,  $n$  is the magnification of the character width.

**Syntax:** `wn`

**Printers:**

Printer		Default	Values for $n$
3240	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 400 HR fields, POSTNET: 1 – 250
3400A 3400B	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 400 HR fields, POSTNET: 1 – 250
3400C 3400D	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
3400e	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
3440	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
3600	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 400 HR fields, POSTNET: 1 – 250
4100	$n = 1$	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 9999
	$n = 2$	Human-readable fields and POSTNET	Graphics: 1 – 250 HR fields, POSTNET: 1 – 250



**Width of Line, Box, Bar, or Character, Define (continued)**

Printer	Default		Values for n
4400	n = 1	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 9999
	n = 2	Human-readable fields and POSTNET	Graphics: 1 – 250 HR fields, POSTNET: 1 – 250
44X0	n = 1	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
4X30	n = 1	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 9999
	n = 2	Human-readable fields and POSTNET	Graphics: 1 – 250 HR fields, POSTNET: 1 – 250
7421, PC41	n = 1	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1	Line, box, bar code fields and graphics	Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET	Graphics: 1 – 999 HR fields, POSTNET: 1 – 999

**Notes:** In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4x30 and 300 dpi (PM4i, PX4i, PX6i) printers, a dot is 3.3 mil.

## Test and Service Commands

You can use Test and Service commands to query the printer for hardware diagnostic information. Test and Service commands are effective when the printer is in Test and Service mode. You can switch the printer to Test and Service mode with this command:

<ESC>T

For help downloading Test and Service commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.



**Note:** All commands in Test and Service mode end with the command terminator (;), except the last command in a message.

### 12 Volt Supply Value, Transmit

**Purpose:** Transmit the 12 volt supply A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** U

**Printer:** 4400

### Ambient Temperature, Transmit

**Purpose:** Transmits the ambient temperature sensor A/D output back to the host. The value ranges from 00 to 255.

**Syntax:** A

**Printer:** 4400

### Command Terminator

**Purpose:** All commands in Test and Service mode must end with the command terminator except for the last command in a message.

**Syntax:** ;

### Dark Adjust

**Purpose:** This command changes the darkness of the print on your labels. It is for fine-tuning only.

**Syntax:** K

**Printers:** 3440

## Factory Defaults, Reset

**Purpose:** Sets the printer configuration to the factory defaults. When you exit Test and Service mode after sending this command, the printer performs a warm boot (it resets).

**Syntax:** D

Use this example to reset the factory defaults:

```
<STX><ESC>T;D;R;<ETX>
```

## Formats, Print

**Purpose:** Prints all stored formats.

**Syntax:** f

## Hardware Configuration Label, Print

**Purpose:** Prints a label that provides information about the printer's hardware configuration.

**Syntax:** h

## Label Path Open Sensor Value, Transmit

**Purpose:** Transmits the paper path open switch value back to the host. A value of 0 indicates the paper path is open, and a value of 1 indicates it is closed. On the EasyCoder F4, PF2i, PF4i and PM4i printers, a value of 1 indicates the paper path is open, and a value of 0 indicates it is closed.

**Syntax:** L

**Printers:**

Printer	Notes
3400A 3400B	This printer ignores this command.
3600	This printer ignores this command.

## Label Taken Sensor Value, Transmit

**Purpose:** Transmits the label taken sensor A/D output back to the host. The value can range from 00 to 255. On the EasyCoder F4, PF2i, PF4i and PM4i printers, a value of 0 indicates the label is removed, and a value of 1 indicates the label is at the strip pin.

**Syntax:** T

## Pages, Print

**Purpose:** Prints the pages stored on the printer.

**Syntax:** p

## Pitch Label, Print

**Purpose:** Prints the pitch label.

**Syntax:** c

## Print Quality Label, Print

**Purpose:** Prints the print quality program and model number label.

**Syntax:** Q

## Printhead Resistance Test, Begin

**Purpose:** Starts the printhead resistance test. The printer will respond with the ASCII character string “pass” or “fail.”

**Syntax:** B

**Printer:** 4400

## Printhead Resistance Values, Transmit

**Purpose:** Sends the average, maximum, and minimum printhead dot resistance value to the host. Each value is a numeric data string, separated by comma.

**Syntax:** S

**Printer:** 4400

## Printhead Temperature Sensor Value, Transmit

**Purpose:** This command transmits the printhead thermistor A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** P

## Printhead Volt Supply Value, Transmit

**Purpose:** Transmits the printhead volt supply A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** V

**Printer:** 4400

## Reflective Sensor Value, Transmit

**Purpose:** Transmits the label mark reflective sensor A/D output back to the host. The value ranges from 00 to 255. The EasyCoder F4, PF2i, PF4i and PM4i will not respond if the paper is moving. For these printers, the values are 0 (label) or 1 (mark).

**Syntax:** M

## Software Configuration Label, Print

**Purpose:** Prints a label providing software configuration information.

**Syntax:** S

## Test and Service Mode, Exit

**Purpose:** Causes the printer to exit Test and Service mode.

**Syntax:** R

## Transmissive Sensor Value, Transmit

**Purpose:** Transmits the label gap transmissive sensor A/D output back to the host. The value ranges from 00 to 255. The EasyCoder F4, PF2i, PF4i and PM4i will not respond if the paper is moving. For these printers, values are 0 (gap) or 1 (label).

**Syntax:** G

## User-Defined Characters (UDC) and Graphics, Print

**Purpose:** Prints the user-defined characters and graphics stored on the printer.

**Syntax:** g

## User-Defined Fonts, Print

**Purpose:** Prints the user-defined fonts stored on the printer.

**Syntax:** t





# **A Full ASCII Table**

This appendix contains the full ASCII chart. For each ASCII character, it also provides its binary, hexadecimal, and Code 39 equivalent. This appendix also contains an ASCII control character chart and provides an explanation for each control character.

## Full ASCII Table

Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>	Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>
00000000	00	00	%U	NUL	00100011	23	35	/C	#
00000001	01	01	\$A	SOH	00100100	24	36	/D	\$
00000010	02	02	\$B	STX	00100101	25	37	/E	%
00000011	03	03	\$C	ETX	00100110	26	38	/F	&
00000100	04	04	\$D	EOT	00100111	27	39	/G	'
00000101	05	05	\$E	ENQ	00101000	28	40	/H	(
00000110	06	06	\$F	ACK	00101001	29	41	/I	)
00000111	07	07	\$G	BEL	00101010	2A	42	/J	*
00001000	08	08	\$H	BS	00101011	2B	43	/K	+
00001001	09	09	\$I	HT	00101100	2C	44	/L	,
00001010	0A	10	\$J	LF	00101101	2D	45	/M	-
00001011	0B	11	\$K	VT	00101110	2E	46	/N	.
00001100	0C	12	\$L	FF	00101111	2F	47	/O	/
00001101	0D	13	\$M	CR	00110000	30	48	/P	0
00001110	0E	14	\$N	SO	00110001	31	49	/Q	1
00001111	0F	15	\$O	SI	00110010	32	50	/R	2
00010000	10	16	\$P	DLE	00110011	33	51	/S	3
00010001	11	17	\$Q	DC1	00110100	34	52	/T	4
00010010	12	18	\$R	DC2	00110101	35	53	/U	5
00010011	13	19	\$S	DC3	00110110	36	54	/V	6
00010100	14	20	\$T	DC4	00110111	37	55	/W	7
00010101	15	21	\$U	NAK	00111000	38	56	/X	8
00010110	16	22	\$V	SYN	00111001	39	57	/Y	9
00010111	17	23	\$W	ETB	00111010	3A	58	/Z	:
00011000	18	24	\$X	CAN	00111011	3B	59	%F	;
00011001	19	25	\$Y	EM	00111100	3C	60	%G	<
00011010	1A	26	\$Z	SUB	00111101	3D	61	%H	=
00011011	1B	27	%A	ESC	00111110	3E	62	%I	>
00011100	1C	28	%B	FS	00111111	3F	63	%J	?
00011101	1D	29	%C	GS	01000000	40	64	%V	@
00011110	1E	30	%D	RS	01000001	41	65	A	A
00011111	1F	31	%E	US	01000010	42	66	B	B
00100000	20	32	SP	SP <sup>3</sup>	01000011	43	67	C	C
00100001	21	33	/A	!	01000100	44	68	D	D
00100010	22	34	/B	"	01000101	45	69	E	E



**Full ASCII Table (continued)**

Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>	Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>
01000110	46	70	F	F	01100011	63	99	+C	c
01000111	47	71	G	G	01100100	64	100	+D	d
01001000	48	72	H	H	01100101	65	101	+E	e
01001001	49	73	I	I	01100110	66	102	+F	f
01001010	4A	74	J	J	01100111	67	103	+G	g
01001011	4B	75	K	K	01101000	68	104	+H	h
01001100	4C	76	L	L	01101001	69	105	+I	i
01001101	4D	77	M	M	01101010	6A	106	+J	j
01001110	4E	78	N	N	01101011	6B	107	+K	k
01001111	4F	79	O	O	01101100	6C	108	+L	l
01010000	50	80	P	P	01101101	6D	109	+M	m
01010001	51	81	Q	Q	01101110	6E	110	+N	n
01010010	52	82	R	R	01101111	6F	111	+O	o
01010011	53	83	S	S	01110000	70	112	+P	p
01010100	54	84	T	T	01110001	71	113	+Q	q
01010101	55	85	U	U	01110010	72	114	+R	r
01010110	56	86	V	V	01110011	73	115	+S	s
01010111	57	87	W	W	01110100	74	116	+T	t
01011000	58	88	X	X	01110101	75	117	+U	u
01011001	59	89	Y	Y	01110110	76	118	+V	v
01011010	5A	90	Z	Z	01110111	77	119	+W	w
01011011	5B	91	%K	[	01111000	78	120	+X	x
01011100	5C	92	%L	\	01111001	79	121	+Y	y
01011101	5D	93	%M	]	01111010	7A	122	+Z	z
01011110	5E	94	%N	^	01111011	7B	123	%P	{
01011111	5F	95	%O	_	01111100	7C	124	%Q	
01100000	60	96	%W	`	01111101	7D	125	%R	}
01100001	61	97	+A	a	01111110	7E	126	%S	~
01100010	62	98	+B	b	01111111	7F	127	%T <sup>5</sup>	n <sup>6</sup>

Notes:

0 Bit positions are 76543210.

1 Hexadecimal value

2 ASCII character

3 SP is the SPACE character.


4 The Code 39 characters /P through /Y may be interchanged with the numbers 0 through 9.

5 May be interchanged with %X or %Y or %Z.

6 n is the DELETE character.

## Full ASCII Control Characters Table

Control Character	Definition	Control Character	Definition
NUL	Null, or all zeroes	DC1	Device Control 1 (XON)
SOH	Start of Heading	DC2	Device Control 2
STX	Start of Text	DC3	Device Control 3 (XOFF)
ETX	End of Text	DC4	Device Control
EOT	End of Transmission	NAK	Negative Acknowledge
ENQ	Enquiry	SYN	Synchronous Idle
ACK	Acknowledgment	ETB	End Transmission Block
BEL	Bell	CAN	Cancel
BS	Backspace	EM	End of Medium
HT	Horizontal Tab	SUB	Substitute
LF	Line Feed	ESC	Escape
VT	Vertical Tab	FS	File Separator
FF	Form Feed	GS	Group Separator
CR	Carriage Return	RS	Record Separator
SO	Shift Out	US	Unit Separator
SI	Shift In	SP	Space
DLE	Data Link Escape	DEL	Delete

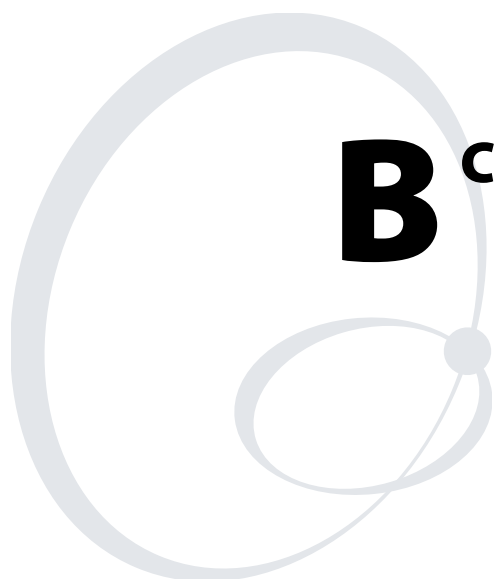

# **B** Character Sets

This appendix contains the extended character set substitution tables available on your printer.

## International Character Sets

The following tables show which hex codes to download for international characters not available in the U.S. character set. To use the tables, find the hex code for the U.S. character that corresponds with the character in your language.

### Advanced Character Table

If you are running your printer in Advanced mode, use this table to find the right hex codes for the international character sets.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII	#	\$	@	[	\	]	^	`	{		}	~
U.K. ASCII	£	\$	@	[	\	]	^	`	{		}	—
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	£	\$	à	°	ç	§	^	`	é	ù	è	..
Norway/Denmark	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	—
Sweden/Finland	#	□	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
Spain	£	\$	§	¡	Ñ	¿	^	`	°	ñ	ç	~
Switzerland	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	£	\$	§	°	ç	é	^	ù	à	ò	è	ì

### 8636/46 Character Table

This table shows the hex codes for the character sets that print if your printer is running under 86XX emulation mode.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII	#	\$	@	[	\	]	^	`	{		}	~
U.K. ASCII	£	\$	@	[	\	]	^	`	{		}	~
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	£	\$	à	°	ç	§	^	`	é	ù	è	..
Norway/Denmark	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
Sweden/Finland	#	□	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
Spain	P <sub>t</sub>	\$	@	¡	Ñ	¿	^	`	°	ñ	ç	~
Switzerland	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	#	\$	§	°	ç	é	^	ù	à	ò	è	ì

## IBM Translation Character Table

This table shows the hex codes for the international character sets that print if your printer is running with Translation enabled.

	21	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII		#	\$	@	¢	\	!	¬	`	{		}	~
U.K. ASCII		#	£	@	\$	\	!	¬	`	{		}	—
Germany	!	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	!	£	\$	à	°	ç	§	^	`	é	ù	è	..
Norway/Denmark	!	Æ	Å	Ø	#	\	□	^	`	æ	ø	å	ü
Sweden/Finland	!	Ä	Å	Ö	§	É	□	^	é	ä	ö	å	ü
Spain		Ñ	P <sub>t</sub>	@	[	\	]	¬	`	{	ñ	}	..
Switzerland	!	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	!	£	\$	§	°	ç	é	^	ù	à	ò	è	ì

## Code Page 850 Character Table

This table shows the character set that prints if your printer has Code Page 850 selected as the printer language.



**Note:** Some Intermec printers do not support Code Page 850. For more information, see the “Printer Language, Select” command on page 139.

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F
30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F
40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F
50	51	52	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F
60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F
70	71	72	73	74	75	D6	77	78	79	7A	7B	7C	7D	7E	7F
80	81	82	83	84	85	E6	87	88	89	8A	8B	8C	8D	8E	8F
90	91	92	93	94	95	F6	97	98	99	9A	9B	9C	9D	9E	9F
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF

IPL019.eps

## Extended Character Sets

Each internal font in the printer has a different character set associated with it as shown in the following tables. The hex codes accompany each character. *You must set the serial port communication to 8 data bits to use the extended character sets.*

### Characters in Fonts

- c0 7x9 Standard
- c1 7x11 OCR
- c2 10x14 Standard
- c7 5x7 Standard

NL	SH	SX	EX	ET	EO	EX	BL	BS	HT	LF	UT	FF	CR	SO	SI
00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL	DL
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
	!	=	#	\$	%	&	'	(	)	*	+	,	-	.	/
20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F
Ø	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
50	51	52	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F
'	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F
p	q	r	s	t	u	v	w	x	y	z	{		}	~	■
70	71	72	73	74	75	76	77	78	79	7A	7B	7C	7D	7E	7F
R	à	■	□	△	△										
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F
	i		£	¤	¥		§	¨							
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF
•															¿
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF
				Ä	Å	Æ			É						
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF
	Ñ					Ö		Ø				Ü			ß
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF
à				ä	å	æ	ç	è	é		ë	ì			
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF
	ñ	ò				ö		ø	ù			ü			
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF

IPL020.eps

## Characters in Fonts

c20 8 point

c21 12 point

c22 20 point

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~
80	€														
90															
A0	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	ÿ

IPL022.eps



**Characters in Font**

c23 OCR A

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	h	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~
80															
90															
A0			f		Y										
B0															
C0				Ä	Å	Æ									
D0	Ń					ö		ø			ü				
E0															
F0															

IPL024.eps

**Characters in Font**

c24 OCR B Size 2

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	a	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~
80															
90															
A0			£	¤	¥	¦	§	¨							
B0				'				'							
C0				À	Á	Æ									
D0	Ñ					Ö		Ø				Ü			ß
E0				ä	å	æ									
F0	ñ					ö		ø				ü			

IPL025.eps

**Characters in Fonts**

c25 8 point

c26 12 point

c28 20 point

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~
80	€	,	f	„	...	†	‡	^	‰	Š	‹	Œ		Ž	
90		‘	’	“	”	•	—	~	™	š	›	œ		ž	ÿ
A0	ı	ø	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	?	Ø	Ù	Ú	Û	Ü	Ý	Þ
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ

IPL026.eps





# **C** Creating User-Defined Bitmap Graphics and Fonts

This appendix explains how to create user-defined bitmap fonts and graphics.

## Creating User-Defined Bitmap Graphics

You can create user-defined graphics (user-defined characters, or UDCs) in two ways: one bit per byte or six bits per byte. To use the UDC in a format, you must first define a graphic field using the IPL command `Un[,name]`. For help using the `Un[,name]` (User-Defined Character Field, Create or Edit) command, see Chapter 7, “IPL Command Reference.”

### Creating One Bit Per Byte User-Defined Graphics

One bit per byte is the standard graphic format used for downloading to an Intermec 8636/8646 printer. You can download a one bit per byte graphic to the printer when it is in 86XX Emulation mode. A one bit per byte bitmap image is an arrangement of ones and zeros that looks similar to the following example.


#### *Example of One Bit Per Byte Bitmap Image*

Bitmap Pattern	Row
000000010000000	Row 0
000000111000000	Row 1
000001011100000	Row 2
000010011110000	Row 3
000100011111000	Row 4
001000011111100	Row 5
010000011111110	Row 6
100000011111111	Row 7
010000010000010	Row 8
001000010000100	Row 9
000100010001000	Row 10
000010010010000	Row 11
000001010100000	Row 12
000000111000000	Row 13
000000010000000	Row 14

If you look closely at the bitmap pattern above, you can see that it is the outline of a diamond with a line down the middle and the upper right corner blacked in.

### To create your own graphic

- 1 Draw your design on a piece of graph paper:

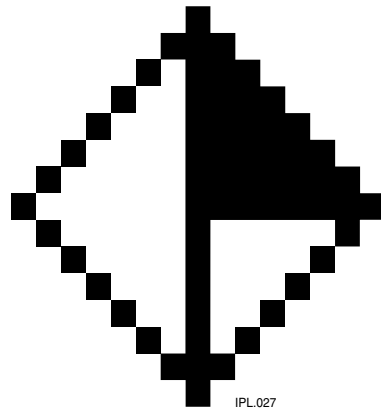

- 2 Convert each of the squares to either a one or a zero (the zeros are blanks and the ones are dots), and type it into a text file column by column. When you send the file to the printer, a character in the file represents either a dot or a blank when the image prints.

U0 —————> U14

```

O O O O O O O | O O O O O O O
O O O O O O | | | O O O O O O
O O O O O | O | | | O O O O O
O O O O | O O | | | | O O O O
O O O | O O O | | | | | O O O
O O | O O O O | | | | | | O O
O | O O O O O | | | | | | | O
| O O O O O O | | | | | | | |
O | O O O O O | O O O O O | O
O O | O O O O | O O O O | O O
O O O | O O O | O O O | O O O
O O O O | O O | O O | O O O O
O O O O O | O | O | O O O O O
O O O O O O | | | O O O O O O
O O O O O O O | O O O O O O O

```

IPL.028

- 3 Read the pattern of ones and zeros down each column starting at the top left corner. The first column on the left becomes the data for the u0 command line, the second column becomes the data for the u1 command line, and so on. Type this into a text file:

```

U0,  0 0 0 0 0 0 0 0 | 0 0 0 0 0 0 0 0
U1,  0 0 0 0 0 0 0 0 | 1 0 0 0 0 0 0 0
U2,  0 0 0 0 0 0 0 0 | 0 1 0 0 0 0 0 0
U3,  0 0 0 0 0 0 0 0 | 0 0 1 0 0 0 0 0
U4,  0 0 0 0 0 0 0 0 | 0 0 0 1 0 0 0 0
U5,  0 0 0 0 0 0 0 0 | 0 0 0 0 1 0 0 0
U6,  0 0 0 0 0 0 0 0 | 0 0 0 0 0 1 0 0
U7,  1 1 1 1 1 1 1 1 | 0 0 0 0 0 0 0 1
U8,  0 1 1 1 1 1 1 1 | 0 0 0 0 0 0 0 1
U9,  0 0 1 1 1 1 1 1 | 0 0 0 0 0 0 0 1
U10, 0 0 0 1 1 1 1 1 | 0 0 0 0 0 0 0 1
U11, 0 0 0 0 1 1 1 1 | 0 0 1 0 0 0 0 0
U12, 0 0 0 0 0 1 1 1 | 0 1 0 0 0 0 0 0
U13, 0 0 0 0 0 0 1 1 | 1 0 0 0 0 0 0 0
U14, 0 0 0 0 0 0 0 1 | 0 0 0 0 0 0 0 0

```

IPL.029



- 4 Ensure that the printer is in 86XX Emulation mode, and then add the protocol characters and define the bitmap as a user-defined graphic. The following example gives the graphic the number 3, the name “diamond,” the dimensions 15 rows by 15 columns, and adds the ASCII characters necessary for the printer to understand the graphic.

**Example of Defining a Bitmap as a User-Defined Graphic**

Command Line	Description
<STX><ESC>c<ETX>	Selects 86XX mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>G3,diamond;x15;y15;<ETX>	Create UDC bitmap 3 (diamond)
<STX>u0,000000010000000;<ETX>	Define column 0
<STX>u1,000000101000000;<ETX>	Define column 1
<STX>u2,000001000100000;<ETX>	Define column 2
<STX>u3,000010000010000;<ETX>	Define column 3
<STX>u4,000100000001000;<ETX>	Define column 4
<STX>u5,001000000000100;<ETX>	Define column 5
<STX>u6,010000000000010;<ETX>	Define column 6
<STX>u7,111111111111111;<ETX>	Define column 7
<STX>u8,011111110000010;<ETX>	Define column 8
<STX>u9,001111110000100;<ETX>	Define column 9
<STX>u10,000111110001000;<ETX>	Define column 10
<STX>u11,000011110010000;<ETX>	Define column 11
<STX>u12,000001110100000;<ETX>	Define column 12
<STX>u13,000000111000000;<ETX>	Define column 13
<STX>u14,000000010000000;<ETX>	Define column 14
<STX>R;<ETX>	Save and exit to Print mode

## Creating Six Bits Per Byte User-Defined Graphics

The six bits per byte format is more compact than one bit per byte. When you use six bits per byte, you can download large graphics more quickly. The printer must be in Advanced mode (2.5 mil or 5.0 mil) to use the six bits per byte format. The only difference between 2.5 mil and 5.0 mil mode is the size of the image when it prints.

The arrangement of the bits is very important in this format. Eight bits (0 through 7) compose every byte, but the printer only uses bits 0 through 5 to map the image.

You must always set bit 6 (the seventh bit) to 1 so you can download data to the printer. 7-bit hosts reserve bit 7 (the eighth bit) for parity and compatibility, so the range of characters for any given UDC is 40 hex (@) to 127 hex (■ delete character).

You can download graphics like the previous one bit per byte (diamond) bitmap example in a six bits per byte format by following the procedure below. Please refer to “Creating Six Bits Per Byte User-Defined Fonts” on page 239 for an illustrated example of creating a six bits per byte format.

### To download a six bits per byte graphic

- 1 Draw the graphic on graph paper.
- 2 Change the graph paper drawing into a pattern of ones (square is filled in) and zeros (square is empty).
- 3 Starting from the top row, divide each vertical column into groups of six digits. (If the bottom group has less than six digits, add zeros to this group until it also has six.) The six digits in each group are the six bits that you download in a byte of data. The top digit of each group is bit 0, the bottom digit is bit 5.
- 4 Add a 1 in the bit 6 position, and then add a 0 in the bit 7 position so that each group now has eight digits. (Eight digits complete the byte.)
- 5 Starting with the first group of 8 bits in the first column, reverse the order of each group so that bit 0 is now last and bit 7 is first. Work from the top of each column to the bottom. Each eight-digit group is now a binary representation of an ASCII character.
- 6 Translate each eight-digit group into an ASCII character according to the full ASCII table in Appendix A.
- 7 Make sure the printer is in Advanced mode and not in 86XX Emulation mode. For help, see the 86XX command or the “Emulation or Advanced Mode on Power-up” command on page 125.
- 8 Download the graphic so that each column is represented by a command string.

Here is the same format for the diamond shape graphic shown earlier, but this time it is in six bits per byte format with ASCII characters.

 
### Example of Six Bits Per Byte Graphic Image

Command	Definition
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>G2,diamond;x15;y15;<ETX>	Create UDC bitmap 2 (diamond), 15 rows by 15 columns
<STX>u0,@B@;<ETX>	Define column 0
<STX>u1,@E@;<ETX>	Define column 1
<STX>u2,`H@;<ETX>	Define column 2
<STX>u3,PP@;<ETX>	Define column 3
<STX>u4,H`@;<ETX>	Define column 4
<STX>u5,D@A;<ETX>	Define column 5
<STX>u6,B@B;<ETX>	Define column 6
<STX>u7,<DEL><DEL>G;<ETX>	Define column 7
<STX>u8,~CB;<ETX>	Define column 8
<STX>u9, CA;<ETX>	Define column 9
<STX>u10,xc@;<ETX>	Define column 10
<STX>u11,pS@;<ETX>	Define column 11
<STX>u12,`K@;<ETX>	Define column 12
<STX>u13,@G@;<ETX>	Define column 13
<STX>u14,@B@;<ETX>	Define column 14
<STX>R;<ETX>	Save and exit to Print mode

After downloading the graphic to the printer, download the following format to see how the graphic prints. A label similar to the one following the format is printed.

**Example- Downloading Format for Six Bits Per Byte Graphic**

Command	Definition
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>E4 ; F4<STX>	Create format 4
<STX>U1 ; 01050 , 650 ; c2 ; w20 ; h20 ; <ETX>	Create graphic field 1, origin of 1050,650, use graphic 2, and magnify it by a factor of 20
<STX>R ; <ETX>	Save and exit to Print mode
<STX><ESC>E4<ETX>	Select format 4
<STX><ETB><ETX>	Print



IPL.030

**Six Bits Per Byte Graphic:** After downloading the graphic image and the format for the graphic, this graphic is what your printer prints.

## Creating User-Defined Bitmap Fonts

There are two ways to create user-defined fonts: one bit per byte format (86XX Emulation mode) or six bits per byte format (Advanced mode).

### Creating One Bit Per Byte User-Defined Fonts

In 86XX Emulation mode, the printer receives downloaded fonts in the same manner as the 8636/8646 printers. You create characters column by column, from the top of the column downward. In 86XX Emulation mode, each byte of data represents one bit in the bitmap. The following example lists the commands and data required to define a font with the two characters “\$” (t36) and “i” (t105). See “Creating One Bit Per Byte User-Defined Graphics” on page 238 for more information.

#### *Example of User-Defined Font, One Bit Per Byte*


Commands	Definition
<STX><ESC>c<ETX>	Selects 86XX Emulation mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>T11, FONT11<ETX>	Create bitmap font 11
<STX>x10; y14; <ETX>	Define cell width and height
<STX>t36; Z12; <ETX>	Create character 36 (\$), character width is 12
<STX>u0, 001111110001100; <ETX>	Define column 0
<STX>u1, 011111111001110; <ETX>	Define column 1
<STX>u2, 01100011000110; <ETX>	Define column 2
<STX>u3, 01100011000110; <ETX>	Define column 3
<STX>u4, 11111111111111; <ETX>	Define column 4
<STX>u5, 11111111111111; <ETX>	Define column 5
<STX>u6, 01100011000110; <ETX>	Define column 6
<STX>u7, 01100011000110; <ETX>	Define column 7
<STX>u8, 01110011111110; <ETX>	Define column 8
<STX>u9, 00110001111100; <ETX>	Define column 9
<STX>t105; Z4; <ETX>	Create character 105 (i), character width is 4
<STX>u4, 00110011111111; <ETX>	Define column 4
<STX>u5, 00110011111111; <ETX>	Define column 5
<STX>R; <ETX>	Save and exit to Print mode

## Creating Six Bits Per Byte User-Defined Fonts

You can also create bitmaps in Advanced mode. In Advanced mode, each data byte represents six bits in the bitmap. See the following example to create a six bits per byte format like the previous one bit per byte (“\$” and “i”) bitmap font examples.

### To download a six bits per byte format

- 1 Draw the character on graph paper.
- 2 Change the graph paper drawing into a pattern of ones and zeros.

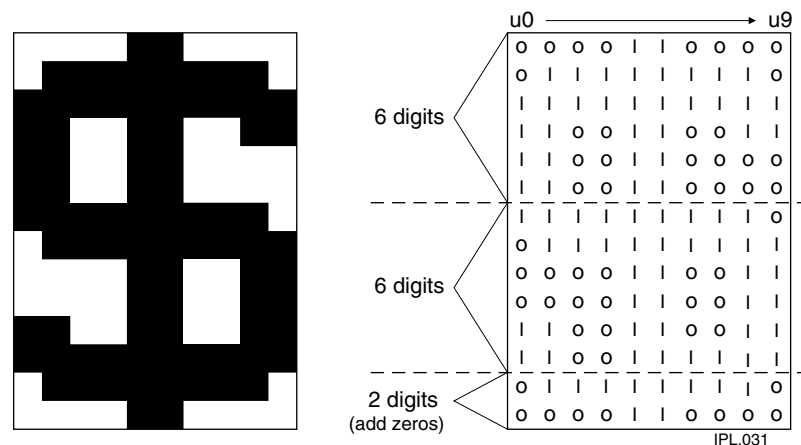

- 3 Starting with the first column, divide each vertical column into groups of six digits. (If the bottom group has less than six digits, add zeros to this group until it also has six.) The six digits in each group are the six bits that you download in a byte of data. The top digit of each group is bit 0, and the bottom digit is bit 5.

	u0	u1	u2	u3	u4	u5	u6	u7	u8	u9
bit 0	0	0	0	0	1	1	0	0	0	0
	0	1	1	1	1	1	1	1	1	1
	1	1	0	0	1	1	0	0	1	1
	1	1	0	0	1	1	0	0	0	0
bit 5	1	1	0	0	1	1	0	0	0	0
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0
bit 0	1	1	1	1	1	1	1	1	1	0
	0	1	1	1	1	1	1	1	1	1
	0	0	0	0	1	1	0	0	1	1
	1	1	0	0	1	1	0	0	1	1
bit 5	1	1	0	0	1	1	0	0	1	1
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0
bit 0	0	1	1	1	1	1	1	1	1	0
	0	0	0	0	1	1	0	0	0	0
	0	0	0	0	0	0	0	0	0	0
	0	0	0	0	0	0	0	0	0	0
	0	0	0	0	0	0	0	0	0	0
bit 5	0	0	0	0	0	0	0	0	0	0
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0

IPL.032

**Byte Mapping:** This illustration shows how to map a character in the six bits per byte format.

- 4 Add a 1 in the bit 6 position, and then add a 0 in the bit 7 position so that each group now has eight digits. Eight digits complete the byte.
- 5 Starting with the first group of eight bits in the first column (u0), reverse the order of each group so that bit 0 is now last and bit 7 is first. Work from the top of each column to the bottom. Each eight-digit group is now a binary representation of an ASCII character.



**Note:** In this illustration, each row now represents a column.

	bit 7		bit 0		bit 7		bit 0		bit 7		bit 0
u0	0	1	1	1	1	0	0	0	0	1	0
u1	0	1	1	1	1	1	0	0	1	0	0
u2	0	1	0	0	0	1	0	0	1	0	0
u3	0	1	0	0	0	1	0	0	1	0	0
u4	0	1	1	1	1	1	1	1	1	1	1
u5	0	1	1	1	1	1	1	1	1	1	1
u6	0	1	0	0	0	1	0	0	1	0	0
u7	0	1	0	0	0	1	0	0	1	0	0
u8	0	1	0	0	1	1	0	0	1	0	0
u9	0	1	0	0	1	0	0	0	0	0	0

IPL.033

- 6 Translate each eight-digit group into an ASCII character according to the full ASCII table in Appendix A.

```

u0 = |q@
u1 = ~sA
u2 = FcA
u3 = FcA
u4 = <DEL><DEL>C
u5 = <DEL><DEL>C
u6 = FcA
u7 = FcA
u8 = N<DEL>A
u9 = L~@

```

- 7 Make sure the printer is in Advanced mode and not in 86XX Emulation mode.

- 8 Download the font so that you represent each column with a command string.

Here are the previously defined characters shown in a six bits per byte format with ASCII characters.

### **Example of User-Defined Font, Six Bits Per Byte**

Commands	Definitions
<STX><ESC>C<ETX>	Selects Advanced mode
<ESC>P; <ETX>	Enters Program mode
<STX>T11, FONT11<ETX>	Create bitmap font 11
<STX>x10; y14; <ETX>	Define cell width (10) and cell height (14)
<STX>t36; Z12; <ETX>	Create ASCII character 36 (\$), define character width as 12
<STX>u0,  q@; <ETX>	Defines column 0
<STX>u1, ~sA; <ETX>	Defines column 1
<STX>u2, FcA; <ETX>	Defines column 2
<STX>u3, FcA; <ETX>	Defines column 3
<STX>u4, <DEL><DEL>C; <ETX>	Defines column 4
<STX>u5, <DEL><DEL>C; <ETX>	Defines column 5
<STX>u6, FcA; <ETX>	Defines column 6
<STX>u7, FcA; <ETX>	Defines column 7
<STX>u8, N<DEL>A; <ETX>	Defines column 8
<STX>u9, L~@; <ETX>	Defines column 9
<STX>t105; Z4; <ETX>	Creates ASCII character 105 (i), define character width as 4
<STX>u0, L<DEL>C; <ETX>	Defines column 0
<STX>u1, L<DEL>C; <ETX>	Defines column 1
<STX>R; <ETX>	Saves and exits to Print mode





# **D** User-Defined Interface Tables

This appendix contains the user-defined interface tables, which you may need when programming with IPL. These tables show commands in the order that you must download them when you replace the User-Defined Command/Protocol characters. A table is shown for each type of command specified by a value for “t”.

## Print Commands (t = 0)

This list shows the Print Mode commands in the order you must download them when you are replacing the command codes.

### *Print Commands (t = 0)*

Default Print Command	Hex Value	Print Command Description
NUL	00	Command Terminator 1
SOH	01	Set Preamble
EOT	04	Set Postamble
ENQ	05	Status Inquiry
ACK	06	Select First Data Entry Field
BEL	07	Transmit Error Code
BS	08	Warm Boot
LF	0A	Command Terminator 2
VT	0B	Status Dump
FF	0C	Form Feed
CR	0D	Select Next Data Entry Field
SO	0E	Label Cut Command
SI	0F	Go to Shift Command Table
DLE	10	Reset
SYN	16	Set Intercharacter Delay
ETB	17	Print
CAN	18	Clear All Data
EM	19	Abort Print Job
SUB	1A	Data Shift
ESC	1B	Go to Escape Command Table
FS	1C	Numeric Field Separator
GS	1D	Alphanumeric Field Separator
RS	1E	Set Quantity Count
US	1F	Set Batch Count
DEL	7F	Clear Data From Current Field

## Escape Print Commands (t = 1)

This table lists the <ESC> commands in the order you must download them.

### *Escape Print Commands (t=1)*

Default Escape Command	Hex Value	Escape Command Description
SYN	16	Set Message Delay
(space)	20	Enter Start/Stop Character
C	43	Select Advanced Mode
D	44	Set Field Decrement
E	45	Select Format
F	46	Select Field
G	47	Select Page
H	48	Transmit Printhead Parameters
I	49	Set Field Increment
L	4C	Transmit Label and Gap Length
M	4D	Transmit Software Version Number
N	4E	Disable Increment/Decrement
O	4F	Transmit Options Selected
P	50	Enter Program Mode
Q	51	Transmit Quantity and Batch Count
T	54	Enter Test and Service Mode
Z	5A	Transmit User-Defined Command Tables
c	63	Select 86XX Emulation Mode
d	64	Enable Auto-Transmit 2
e	65	Enable Auto-Transmit 3
g	67	Select Direct Graphics Mode
j	6A	Enable Auto-Transmit 1
k	6B	Disable Auto-Transmit 1, 2, and 3
m	6D	Transmit Static RAM Usage
p	70	Transmit Configuration Parameters
u	75	Transmit User-Defined Characters
v	76	Transmit Font
x	78	Transmit Format
y	79	Transmit Page

## Shift Print Commands (t = 2)

This list shows the Shift commands in the order you must download them. You must precede these commands with the “Go to Shift Command Table” command (default value SI) listed in the table of Print Commands ( $t = 0$ ) on page 250.

### Shift Print Commands (t = 2)

Default Shift Command	Hex Value	Shift Command Description
A	41	Control Panel Access
C	43	86XX or Advanced Mode on Power-Up
D	44	Set End-of-Print Skip Distance
F	46	Set Top of Form
H	48	Set Printhead Pressure
I	49	Set Number of Image Bands
L	4C	Set Maximum Label Length
N	4E	Define Amount of Storage
O	4F	Online or Offline on Power-Up
R	52	Enable or Disable Label Retract
S	53	Set Print Speed
T	54	Select Label Stock Type
U	55	Set Printhead Test Parameters
W	57	Set Label Width
Z	5A	Set Ribbon Save Zone
a	61	Audible Alarm
b	62	Increase Takeup Motor Torque
c	63	Enable or Disable Cutter
d	64	Set Dark Adjust
f	66	Adjust Label Rest Point
g	67	Select TTR or Direct Thermal
h	68	Select Printhead Loading Mode
i	69	IBM Language Translation
l	6C	Select Printer Language
p	70	Set Pin 11/20 Protocol
r	72	Set Label Retract Distance
t	74	Enable or Disable Self-Strip

## Status Responses and Auto-Transmit Commands (t = 3)

This list contains the status responses and auto-transmit commands in the order you must download them

### *Status Responses and Auto-Transmit Commands (t = 3)*

Status Command	Hex Value	Status Description
GS	1D	Buffer Already Full
SO	0E	Printhead Test Fail
US	1F	Label Path Open
US	1F	Ribbon Fault
EM	19	No Label Stock
DC3	13	Buffer Now Full
EOT	04	RFID Tag Write Error
VT	01	RFID Tag Read Error
BS	08	Takeup Reel Full
SI*	0F	Printhead Hot
FS	1C	Label at Strip Pin
ACK	06	RFID Tag Write Ok
DC1**	11	Skipping
DC1**	11	Printing
DC1**	11	Ready
DC1 Auto-Transmit 1**	11	Clear
FS Auto-Transmit 1	1C	Label at Strip Pin
BS Auto-Transmit 1	08	Takeup Reel Full
EM Auto-Transmit 1	19	No Label Stock
US Auto-Transmit 1	1F	Ribbon Fault
DC1 Auto-Transmit 2	11	Room in Buffer
HT Auto-Transmit 3	09	Imager Overrun
SOH Auto-Transmit 3	01	Print Job Complete and Buffer Empty
RS Auto-Transmit 3	1E	Insufficient RAM

\*Some older Intermec printers may not support this entry.

\*\*The status responses in the above table are for standard protocol. In XON/XOFF protocol, most of the status responses are the same; however, instead of DC1, the status response is DC2, and instead of DC2, the status response is DC4.

See your printer user's manual for more information about protocols and status responses.

## Protocol Commands (t = 4)

This list contains the protocol codes in the order you must download them.

### ***Protocol Commands (t = 4)***

Command Characters	Hex Value	Command Description
GS	1D	SELECT IN
FS	1C	POLL IN
EOT	04	RES IN
ENQ	05	REQ IN
STX	02	SOM IN
ETX	03	EOM IN
ACK	06	AFF IN
NAK	15	NEG IN
DLE	10	DLE IN
DC1	11	XON IN
DC3	13	XOFF IN
GS	1D	SELECT OUT
FS	1C	POLL OUT
EOT	04	RES OUT
ENQ	05	REQ OUT
STX	02	SOM OUT
ETX	03	EOM OUT
ACK	06	AFF OUT
NAK	15	NEG OUT
DLE	10	DLE OUT
DC1	11	XON OUT
DC3	13	XOFF OUT
ENQ	05	Proto-Cmd 1
VT	0B	Proto-Cmd 2
20 (ms) (Range: 0 - 255)	14	Timeout on EOM ACK

## Communications Protocol Characters

This table shows the characters available for different protocols. Refer to the protocol you are using for your system.

### Communications Protocol Characters

Protocol Characters	Standard	XON/XOFF	Polling Mode D	Multi-Drop
Select In			GS	GS
Poll In			FS	FS
Reset In			EOT	EOT
Request for Acknowledgment In			ENQ	ENQ
Start of Message In	STX	STX	STX	STX
End of Message In	ETX	ETX	ETX	ETX
Acknowledgment In			ACK	ACK
Negative Acknowledgment In			NAK	NAK
Data Line Escape In	DLE	DLE	DLE	DLE
XON In		DC1		
XOFF In		DC3		
Select Out				GS
Poll Out				FS
Reset Out			EOT	EOT
Request for Acknowledgment Out			ENQ	ENQ
Start of Message Out			STX	STX
End of Message Out			ETX	ETX
Acknowledgment Out			ACK	ACK
Negative Acknowledgment Out	NAK		NAK	NAK
Data Line Escape Out	DLE	DLE	DLE	DLE
XON Out		DC1		
XOFF Out		DC3		
Status Enquiry In	ENQ	ENQ		
Status Dump In	VT	VT		
Timeout on EOM ACK			DC4	DC4







## **E Using Direct Graphics Mode**

This appendix explains how to use Direct Graphics mode, which can significantly reduce the amount of time needed to download and image a graphic.

## What Is Direct Graphics Mode?

You can significantly reduce the amount of time necessary to download and image a graphic by using Direct Graphics mode. Direct Graphics mode allows the printer to receive a compressed bitmap graphic and image it directly into the image bands without storing it in the printer.

Before you download the graphic, you must compress it into run-length encoded (RLE) data. The data compression greatly reduces the amount of data to download and the rasterized graphic requires minimal processing to image it into the image bands. You no longer need to store the graphic in Program mode and then set up a format in Print mode.

When you download a direct graphic to the printer, the printer stores the graphic in the image bands until you:

- clear the label data.
- set up another format.
- enter Program mode or Test and Service mode.

When printing a label with direct graphics, you must have enough dynamic RAM installed in your printer to contain the entire label. Because Intermec printers normally reuse image bands, you can print long labels with standard RAM; however, when you download direct graphics, the printer retains no information regarding the existence of the graphic in its image bands. Therefore, the printer cannot reuse those image bands when you download a direct graphic.

With standard dynamic RAM, you should be able to print almost any label up to 2.4 cm (6 in.) long. You may need to install expanded dynamic RAM for longer labels.

## What Is Run-Length Encoding?

Run-length encoding (RLE) is a method of compressing bitmap graphics. RLE compresses graphics that have repeated runs of white or black dots in a column, reducing the amount of time required to download the graphics to a printer.

RLE sends a series of commands that define each bitmap column of a graphic and takes advantage of a series of repeated dots within a column by encoding them as transition commands. Instead of sending the entire column of bitmap data, it sends commands telling the printer how many series of black and white dots to image.

If columns are identical, a command can instruct the printer to repeat the last column. RLE is ideal for bar code graphics or designs with simple patterns.

In cases where patterns do not exist, you can send uncompressed bitmap data to the printer. You can mix raw bitmap data and RLE commands to ensure the most efficient way to download a graphic.

The RLE file may contain five types of data, each of which is one byte long:

### Data Types in RLE Files

Type	Description	Byte Format, Range, and Data Represented
Immediate commands	<ul style="list-style-type: none"> <li>Recognized and executed as regular IPL commands or protocol commands</li> <li>Removed from compressed data</li> </ul>	Byte format (7-0): 000xxxx Range: 0-31 Data represented: N/A
Compression encodation commands	<ul style="list-style-type: none"> <li>Used as part of the compressed graphics file to change or set data modes, repeat lines, change the origin for the next lines of data, or end the compress graphics file and return to IPL command printing</li> </ul>	Byte format (7-0): 001xxxx Range: 32 - 63 Data represented: N/A
Low order data	<ul style="list-style-type: none"> <li>7 bits long and may be combined with high order data. 8th bit is always set to 1.</li> <li>Can represent up to 7 bits of data (0-127)</li> <li>Must be preceded by a command byte so the printer knows how to interpret them</li> </ul>	Byte format (7-0): 1xxxxxx Range: 128 - 255 Data represented: 0 - 127
High order data	<ul style="list-style-type: none"> <li>6 bits long and always combined with low order data. 7th bit is always set to 1 and 8th bit is always set to 0.</li> <li>When combined with low order data, can represent up to 13 bits of data (0-8191)</li> <li>Must be preceded by a command byte so the printer knows how to interpret them</li> <li>Printer ignores high order data followed by a command or more high order data</li> </ul>	Byte format (7-0): 01xxxxx Range: 64 - 127 Data represented: 0 - 63
Bitmap data	<ul style="list-style-type: none"> <li>Composed of uncompressed bytes (7 data bits per byte) that represent columns of your graphic. 8th bit is always set to 1.</li> </ul>	Byte format (7-0): 1xxxxxx Range: 128 - 255 Data represented: Raw data

## How Do I Send a Direct Graphic to the Printer?

Once you have compressed the graphic, use the following commands to send the RLE file to the printer.

### Direct Graphics Mode, Enter

**Purpose:** Instructs the printer to receive RLE compressed graphics data in nibblized format.

**Default:**  $m = 0$

**Syntax:** <ESC>gm

where  $m$  specifies the format of the data to follow.

$m = 0$             8 bits per byte.

$m = 1$             7 bits per byte of nibblized data.

When you select  $m = 0$ , the printer parses subsequent data streams as RLE commands. The printer still recognizes immediate IPL commands. Non-immediate commands are not parsed. The printer resumes normal IPL parsing when it receives an end of bitmap RLE command.

When you select  $m = 1$ , the printer receives the RLE compressed graphics data in nibblized format. The printer converts each pair of bytes from ASCII to their numerical equivalent and combines them to form the original byte. For example:

ASCII	Numerical	Original byte
1,B	0x1,0xB	0x1B

**Change Origin**

**Purpose:** Tells the printer the X and Y coordinates of the next RLE data column.

**Default:** 0,0

**Syntax:** 0x21 [*x*, *y*]

where *x* and *y* are the coordinates of the next data column. Values for *x* and *y* range from 0 to 8191.

The change origin command tells the printer where to place the graphic on the label. If you do not send the command, the printer uses the default setting of 0,0.

You can use the command to place different sections of the RLE graphic in different parts of the label.

**Notes:** It is not necessary to use this command for every column. Column-to-column transitions are automatic following the end of line command.

The default origin of any direct graphic (0,0) is in the lower left corner instead of in the upper left corner. The upper left corner is the label format origin.

**End of Bitmap**

**Purpose:** Marks the end of RLE encoded data.

**Syntax:** 0x28

**Notes:** The printer parses subsequent characters as IPL commands.

On the final column of the RLE encoded data, an end of line command does not need to precede the end of bitmap command.

**End of Line**

**Purpose:** Causes the printer to assign subsequent bitmap data to the next column.

**Syntax:** 0x22

**Notes:** The printer images the next data stream in the next column position, incrementing the X position. This command causes an action similar in function to a carriage return.

## Raw Bitmap Data Follows

**Purpose:** Indicates raw bitmap data bytes follow.

**Syntax:** `0x27 [data]`

**Notes:** The printer only uses the first 7 bits of the data byte. If you set a bit to 1, it prints black. The most significant bit prints farthest to the left. Data order runs from right to left, so the first dot in a column is the least significant bit of the first data byte.

## Repeat Last Line

**Purpose:** Causes the printer to copy the previously defined column *n* number of times.

**Syntax:** `0x24n`  
Values for *n* range from 0 - 8191.

**Notes:** The printer automatically increments the X origin of each column. This command is only valid when preceded by a column of encoded, raw data or an end of line command.

## Transition Black

**Purpose:** Transition data follows. The first transition is black.

**Syntax:** `0x25 [data, data, ... data]`  
where *data* specifies the number of black or white dots. Values for *data* can range from 0 - 8191.

**Notes:** Each transition data specifies the number of dots to draw (either black or white). Each data alternates black and white dot counts.

## Transition White


**Purpose:** Transition data follows. The first transition is white.

**Syntax:** `0x26 [data, data, ... data]`  
where *data* specifies the number of black or white dots. Values for *data* can range from 0 - 8191.

**Notes:** Each transition data specifies the number of dots to draw (either black or white). Each data alternates black and white dot counts.

## Using Direct Graphics Commands

This example consists of two parts: a graphic and a line. The origin of the direct graphic is defined the same as the origin of a normal graphic. In this example, the coordinates for the origin of the complex graphic are X0,Y450; however, once you enter Direct Graphics mode, your printer loads the information in the reverse Y direction. Each column of the graphic loads from the bottom to the top. Y coordinates now start at 0 from the bottom left corner and increase in size as the data loads. So, the printer starts loading data for the complex graphic at X0,Y450 and loads up to X0,Y425. Likewise, the data for the line starts loading at X19,Y450 and loads up to X19,Y0.

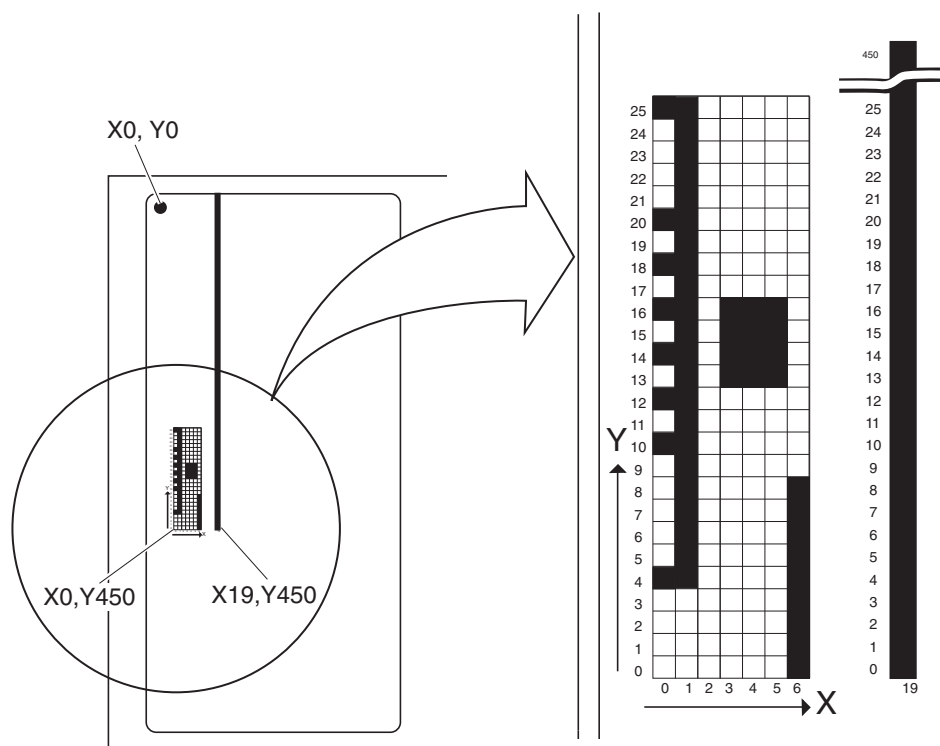

3440A.001

**Direct Graphics Commands:** This example shows how the printer loads information in Direct Graphics mode.

Here is a hex data file for the example above:

1B	67	30	21	80	43	C2	27	90	A8	D5
90	22	26	84	96	22	22	26	8C	84	22
24	82	25	88	22	21	93	43	C2	25	43
C2	28									

The next table explains the hex data file in the example.

**Hex Data Commands in Example**

<b>Data</b>	<b>Command</b>	<b>Description</b>
1B 67 30	<ESC>g0	Enter Direct Graphics mode
21 80 43 C2	0x21 80 43 C2	Change origin 80 - 80 (LO) = 0x00 -> X0 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
27 90 A8 D5 90 22	0x27 90 A8 D5 90 0x22	Raw bitmap data follows, starts at Y0 90 - 80 (LO) = 0x10 -> 1 dot at Y4 A8 - 80 (LO) = 0x28 -> 2 dots at Y10 and Y12 D5 - 80 (LO) = 0x45 -> 3 dots at Y14, Y17, and Y20 90 - 80 (LO) = 0x10 -> 1 dot at Y25 End of line
26 84 96 22	0x26 84 96 0x22	Transition white 84 - 80 (LO) = 4 white 96 - 80 (LO) = 22 black End of line
22	0x22	End of line
26 8C 84 22	0x26 8D 84 0x22	Transition white 8D - 80 (LO) = 13 white 84 - 80 (LO) = 4 black End of line
24 82	0x24 82	Repeat last line 82 - 80 (LO) = 2 times
25 88 22	0x25 88 0x22	Transition black 89 - 80 (LO) = 9 black End of line
21 93 43 C2	0x21 93 43 C2	Change origin 93 - 80 (LO) = 0x13 -> X19 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
25 43 C2	0x25 43 C2	Transition black 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
28	0x28	End of bitmap





**Numbers**

- 12 volt supply value, transmit command, 84, 218
- 8636/46 character table, 228
- 86XX Emulation mode
  - character table, 228
  - summary of commands supported, 61
  - using, 60

**A**

- abort print job command, 84, 91
- advanced character table, 228
- Advanced mode
  - on power up command, 125
  - select command, 84, 96
- alphanumeric field separator command, 84, 97
- ambient temperature, transmit command, 84, 218
- amount of storage, define command, 84, 120
- application, using to download IPL commands, 7
- ASCII
  - table of character equivalents, 224
  - table of control characters, 226
  - text file, creating from IPL commands, 6
- ASCII control characters, *See* control characters
- Asian fonts, 18
  - installing code page tables, 19
  - RAM requirements, 16
- audible alarm, enable or disable command, 84, 120
- auto-transmit
  - 1, 2, 3, disable command, 84, 122
  - 1, enable command, 84, 121
  - 2, enable command, 84, 121
  - 3, enable command, 84, 121
  - commands, downloading order, 253

**B**

- bar code
  - field
    - create or edit command, 84, 171
    - defining, 29
    - editing commands, list of, 76
    - scaling, 39
  - select type command, 84, 149
    - Codabar, 151
    - Code 11, 152
    - Code 128, 152
    - Code 16K, 155
    - Code 2 of 5, 151
    - Code 39, 150
    - Code 49, 156
    - DataMatrix, 162
    - EAN.UCC Composite, 168
    - HIBC Code 128, 162
    - HIBC Code 39, 155
    - Interleaved 2 of 5, 151
    - JIS-ITF, 161
    - MaxiCode, 159
    - MicroPDF417, 164
    - PDF417, 156

- Planet, 171
- POSTNET, 156
- QR Code, 164
- RSS, 165
- UPC/EAN, 154

**batch**

- count, set command, 84, 98
- printing, optimizing with image bands, 60

**bitmap**

- cell height for graphic or UDF, define command, 84, 172
- cell width for graphic or UDF, define command, 84, 174

**fonts**

- creating with IPL, 245, 246
- downloading, 12
  - using IPL commands, 20
  - using PrintSet, 13
- generating from TrueType, 16, 17
- resident in printer, 30
- user-defined font
  - clear or define command, 84, 175
  - editing commands, list of, 76

- border around human-readable text, define command, 84, 175

**box field**

- create or edit command, 84, 177
- defining, 30
- editing commands, list of, 76

**C**

- change origin command, 261

**character**

- bitmap origin offset, define command, 84, 177
- fields
  - defining, 29
  - magnifying, 38
- fonts, defining, 29
- rotation or bar code ratio, define command, 84, 178
- sets

- extended, 231
- international, 228

**table**

- 8636/46, 228
- advanced, 228
- Code Page 850, 230
- IBM translation, 229

- clear all data command, 85, 98
- clear data from current field command, 85, 98

**Codabar, 151****Code 11, 152****Code 128, 152****Code 16K, 155****Code 2 of 5, 151****Code 39, 150**

- prefix character, define command, 85, 181

- table of ASCII characters, 224

**Code 49, 156****Code 93, 150**

- Code Page 850 character table, 230
  - code page tables
    - installing, 19
    - list of, 228
  - codes, error, 50
  - command tables, load command, 85, 182
  - command terminator 1 command, 85, 98
  - command terminator 2 command, 85, 99
  - command terminator command, 85, 218
  - commands
    - identifying those supported by your printer, 84
    - immediate, list of, 75
    - listed by name, 66
    - listed by syntax, 71
    - listed by task, 75
    - print mode, list of, 80
    - program mode, list of, 76
    - summary of types, 2
    - test and service, list of, 82
    - See also* immediate commands.
    - See also* Test and Service mode, commands.
    - See also* Program mode, commands.
    - See also* Print mode, commands.
    - See also* configuration commands.
  - communication port configuration, set command, 85, 122
  - communication protocol characters, 255
  - configuration commands
    - amount of storage, define, 120
    - audible alarm, enable or disable, 120
    - auto-transmit
      - 1, 2, 3, disable, 122
      - 1, enable, 121
      - 2, enable, 121
      - 3, enable, 121
    - communication port configuration, set, 122
    - control panel access permission, set, 123
    - cutter, enable or disable, 124
    - dark adjust, set, 124
    - Direct Graphics Emulation mode, enable or disable, 125
    - Emulation or Advanced mode on power up, 125
    - end-of-print skip distance, set, 126
    - format, create or edit, 191
    - IBM language translation, enable or disable, 128
    - intercharacter delay, set, 128
    - interlabel ribbon save, enable or disable, 128
    - label
      - rest point, adjust, 129
      - retract distance, set, 130
      - retract, enable or disable, 129
      - stock type, select, 130
      - width, set, 131
    - list of, 80
    - maximum label length, set, 132
    - media
      - fault recovery mode, set, 133
      - sensitivity number, select, 133
    - message delay, set, 134
    - number of image bands, set, 135
    - online or offline on power up, 136
    - pin 11/20 protocol, set, 136
    - postamble, set, 137
    - preamble, set, 137
    - print speed, set, 138
    - printer language, select, 139
    - printhead
      - loading mode, select, 141
      - pressure, set, 142
      - test parameters, set, 142
    - RFID parameters, set, 143
    - RFID tag void text, set, 144
    - ribbon save zones, set, 144
    - self-strip, enable or disable, 145
    - slash zero, enable or disable, 146
    - takeup motor torque, increase, 147
    - top of form, set, 147
  - configuration parameters, transmit command, 85, 99
  - connecting the printer to a PC, 5
  - control characters
    - creating ASCII with control codes, 4
    - table of full ASCII, 226
    - using in IPL commands, 4
    - using printable, 5
  - control panel access permission, set command, 85, 123
  - creating
    - ASCII text file of IPL commands, 6
    - bitmap fonts from TrueType, 17
    - formats, 24
    - IPL commands, general principles, 4
    - one bit per byte user-defined graphics, 238
    - six bits per byte user-defined graphics, 242
    - user-defined bitmap graphics, 238
    - user-defined fonts, 245
  - current edit session, save command, 85, 182
  - cut command, 85, 99
  - cutter, enable or disable command, 85, 124
- ## D
- dark adjust command, in Test and Service mode, 85, 218
  - dark adjust, set command, 85, 124
  - data shift international characters command, 85, 99
  - data source for format in a page, define command, 85, 183
  - data types, in RLE files, 259
  - DataMatrix, 162
  - defining
    - bar code fields, 29
    - box or line fields, 30
    - graphic fields, 32
    - human-readable fields, 29
    - label design fields, 29
  - deleting
    - fields, 36
    - human-readable field, 33
  - description of IPL commands, 2

- designing
    - formats, 24
    - pages, 40
  - determining print position of a field, 36
  - direct graphics
    - commands
      - change origin, 261
      - direct graphics mode, enter, 260
      - end of bitmap, 261
      - end of line, 261
      - raw bitmap data follows, 262
      - repeat last line, 262
      - transition black, 262
      - transition white, 262
      - using in an example, 263
    - Emulation mode, enable or disable, 85
    - IPL commands, list of, 260
    - mode
      - definition, 258
      - enter command, 260
      - select command, 85, 101
    - requirements, 258
    - sending to the printer, 260
  - Direct Graphics Emulation mode, enable or disable command, 125
  - downloading
    - auto-transmit commands, interface table, 253
    - escape print commands, interface table, 251
  - fonts
    - one bit per byte, 245
    - six bits per byte, 246
    - using IPL commands, 20
    - with PrintSet, 13
  - graphics
    - one bit per byte, 239
    - six bits per byte, 242
  - IPL commands, 5
    - general principles, 4
    - using an application, 7
    - using HyperTerminal from Windows, 6
  - print mode commands, interface table, 250
  - protocol commands, interface table, 254
  - shift print commands, interface table, 252
  - status responses, interface table, 253
- E**
- EAN.UCC Composite, 168
  - editing
    - fields, 35
    - labels, 33
  - Emulation mode
    - character table, 228
    - enter command, 85, 102
    - or Advanced mode on power up command, 85, 125
    - summary of commands supported, 61
    - using, 60
  - end of bitmap command, 261
  - end of line command, 261
  - end-of-print skip distance, set command, 85, 126
  - entering
    - Print mode, 8
    - Program mode, 8
  - EPC-HEX64 tag format, 211
  - EPC-HEX96 tag format, 211
  - EPC-URN tag format, 210
  - error
    - codes
      - list of, 50
      - table, 50, 51, 52
      - troubleshooting, 50
    - conditions, handling, 48
    - image overrun, 49
    - insufficient storage RAM, 49
    - invalid numeric character, 49
    - parameter, 49
    - syntax, 48
  - error code request command, 85, 91
  - escape print commands, 251
  - example
    - label format
      - complex, 40
      - RFID, 44
    - using direct graphics commands, 263
  - extended character sets, 231
- F**
- factory defaults, reset command, 85, 219
  - field
    - bar code, 29
    - box or line, defining, 30
    - character, defining, 29
    - data, define source command, 85, 184
    - decrement, set command, 86, 103
    - delete command, 85, 183
    - deleting, 36
    - direction, define command, 86, 186
    - editing, 33, 35
    - first data entry, select command, 104
    - graphic, defining, 32
    - height, change magnification, 38
    - human-readable, 33
      - defining, 29
    - increment, set command, 86, 104
    - label design, 29
    - magnifying, 38
    - origin, define command, 86, 186
    - origin, locating, 36
    - positioning, 36
    - reimage only modified fields, 59, *See also* format, select command
    - rotating, 37
    - scaling, 38
    - select command, 85, 102
    - width, change magnification, 38
  - first data entry field, select command, 86, 104
  - flash memory, *See* memory

- font
  - character width, define command, 86, 187
  - choosing type to use, 12
  - downloadable types, 12
  - downloading, 245, 246
    - using IPL commands, 20
    - using PrintSet, 13
  - generating bitmap from TrueType, 16, 17
  - installing international character sets, 15
  - licensing requirements, 17
  - magnifying, 38
  - one bit per byte, creating, 245
  - RAM requirements, 16
  - resident in printer, 30
  - selection table, 13
  - six bits per byte
    - creating, 246
    - example, 248
  - supported by GLOBE, 15
  - transmit command, 86, 108
  - TrueType support, 16
  - type, select command, 86, 189
  - user-defined, creating, 245
  - using, 140
- font, transmit command, 105
- form feed command, 86, 106
- format
  - create or edit command, 86, 191
  - creating with IPL, 26
  - designing a basic, 24
  - direction in a page, define command, 86, 192
  - editing, 33
    - commands, list of, 77
  - erase command, 86, 193
  - offset within a page, define command, 86, 193
  - position from page, delete command, 86, 194
  - position in a page, assign command, 86, 194
  - print command, 86, 219
  - programming with IPL, 26
  - RFID tag, 212
  - select command, 86, 106
  - storing, 24
  - transmit command, 86, 108
  - using, 24
- full ASCII
  - control characters table, 226
  - table of characters, 224
- G**
  - GIAI-64 tag format, 212
  - GIAI-96 tag format, 212
  - GID-96 tag format, 212
  - GLOBE
    - supported fonts, 15
    - using to install international character sets, 15
  - GRAI-64 tag format, 211
  - GRAI-96 tag format, 211
  - graphic or UDC, define command, 86, 195
  - graphic select command, 86, 195
- graphics
  - converting to one bit per byte, 239
  - creating
    - one bit per byte, 238
    - six bits per byte, 242
    - user-defined bitmap, 238
  - downloading
    - one bit per byte, 239
    - six bits per byte, 242
  - field, defining, 32
  - one bit per byte, example, 238
  - six bits per byte, example, 243
- H**
  - hardware configuration label, print command, 86, 219
  - height magnification of bar, box, or UDC, define command, 86, 196
  - HIBC Code
    - 128, 162
    - 39, 155
  - human-readable field, 33
    - create or edit command, 86, 198
    - defining, 29
    - deleting, 33
    - editing commands, list of, 77
  - HyperTerminal, using to download IPL commands, 6
- I**
  - IBM language translation, enable or disable command, 86, 128
  - IBM translation character table, 229
  - image
    - bands
      - description, 55
      - example, 57
      - function, 56
      - optimizing with print speed, 56
      - using for batch printing, 60
    - overrun errors, 49
  - immediate commands, 2
    - abort print job, 91
    - error code, request, 91
    - label and gap length, transmit, 92
    - list of, 75
    - remaining quantity and batch count, transmit, 92
    - reset, 92
    - status dump, 93
    - status enquiry, 94
    - system, list of, 75
  - increasing throughput, 55
  - increment and decrement, disable command, 86, 109
  - installing
    - code page tables, 19
    - international character sets, 15
  - insufficient storage RAM errors, 49
  - intercharacter
    - delay, set command, 86, 128
    - space for UDF, define command, 87, 199

## Index

interlabel ribbon save, enable or disable command, 87, 128

Interleaved 2 of 5, 151

Intermec

telephone support, xiv

warranty information, xiii

web support, xiv

Intermec Printer Language, *See* IPL

international character sets, 228

installing fonts, 15

interpreting error codes, 50

interpretive field

edit command, 87, 200

editing commands, list of, 77

enable or disable command, 87, 201

invalid numeric character errors, 49

IPL

commands

downloading, 5

listed by name, 66

listed by syntax, 71

listed by task, 75

structure, 4

summary of types, 2

using control characters, 4

using to download fonts, 20

using to program printers, 3

what's new, 3

## J

JIS-ITF, 161

## L

label

and gap length, transmit command, 87, 92

design fields, 29

format

command description, 42, 45

designing, 24

editing, 33

example, 40, 44

storing, 24

using, 24

pages, designing, 40

path open sensor value, transmit command, 87, 219

rest point, adjust command, 87, 129

retract

distance, set command, 87, 130

enable or disable command, 87, 129

stock type, select command, 87, 130

taken sensor value, transmit command, 87, 219

width, set command, 87, 131

languages

international character sets, 228

selecting on printer, 19

length of line or box field, define command, 87, 201

licensing fonts, 17

line field

create or edit command, 87, 202

defining, 30

editing commands, list of, 78

## M

magnifying

bar code fields, 39

character fields and fonts, 38

manual

document change record, iii

roadmap, 10

telephone support, xiv

warranty information, xiii

web support, xiv

MaxiCode, 159

maximum label length, set command, 87, 132

media

fault recovery mode, set command, 87, 133

sensitivity number, select command, 87, 133

memory

image band, description, 55

increasing amount available, 54

usage

described, 54

limitations, 54

problems, 54

transmit command, 87, 110

using efficiently, 54

message delay, set command, 87, 134

MicroPDF417, 164

Multi-Drop protocol, characters available, 255

## N

next data entry field, select command, 87, 111

number of image bands, set command, 87, 135

numeric character errors, invalid, 49

numeric field separator command, 87, 111

## O

one bit per byte

font

creating, 245

example, 245

graphics

creating, 238

example, 238

online or offline on power up command, 87, 136

optimizing

image bands, for batch printing, 60

print speed, using image band setting, 56

options selected, transmit command, 87, 112

origin of field, 36

outline fonts

clear or create command, 87, 202

download command, 87, 204

downloading, 12

using IPL commands, 20

using PrintSet, 13

example, nibblized file, 21

resident in printer, 30

- outline fonts (*continued*)
  - TrueType support, 16
  - using, 140
- P**
- page
  - create or edit command, 88, 205
  - delete command, 88, 206
  - designing, 40
  - editing commands, list of, 78
  - print command, 88, 220
  - select command, 88, 113
  - transmit command, 88, 113
- parameter, errors, 49
- PC, connecting to a printer, 5
- PDF417, 156
- pin 11/20 protocol, set command, 88, 136
- pitch
  - label, print command, 88, 220
  - size, set command, 88, 206
- Planet, 171
- point size, set command, 88, 207
- Polling Mode D protocol, characters available, 255
- positioning fields, 36
- postamble, set command, 88, 137
- POSTNET, 156
- preamble, set command, 88, 137
- print
  - commands, list of, 81
  - IPL command, 88, 114
  - line dot count limit, set command, 88, 208
  - quality label, print command, 88, 220
  - speed, set command, 88, 138
- Print mode, 2
  - commands
    - Advanced mode, select, 96
    - alphanumeric field separator, 97
    - batch count, set, 98
    - clear all data, 98
    - clear data from current field, 98
    - command terminator 1, 98
    - command terminator 2, 99
    - configuration commands, list of, 80
    - configuration parameters, transmit, 99
    - cut, 99
    - data shift - international characters, 99
    - Direct Graphics mode, select, 101
    - download order, 250
    - Emulation mode, enter, 102
    - field decrement, set, 103
    - field first data entry, select, 104
    - field increment, set, 104
    - field, select, 102
    - font, transmit, 105
    - form feed, 106
    - format, select, 106
    - format, transmit, 108
    - increment and decrement, disable, 109
    - list of, 80
    - memory usage, transmit, 110
    - next data entry field, select, 111
    - numeric field separator, 111
    - options selected, transmit, 112
    - page, select, 113
    - page, transmit, 113
    - print, 114
    - print commands, list of, 81
    - printhead parameters, transmit, 114
    - Program mode, enter, 114
    - program number, transmit, 114
    - protocol modification commands, list of, 82
    - quantity count, set, 115
    - RFID tag, read, 115
    - start and stop codes (Code 39), print, 117
    - storage area usage, transmit, 117
    - Test and Service mode, enter, 117
    - user-defined character, transmit, 117
    - user-defined tables, transmit, 118
    - warm boot, 118
  - entering, 8
- print speed
  - adjusting for use with image bands, 56
  - increasing, 55
- printable control characters, using, 5
- printer
  - batch printing, optimizing, 60
  - connecting to a PC, 5
  - error conditions, 48
  - increasing throughput, 55
  - language, select command, 88, 139
  - memory, using efficiently, 54
  - programming, 3
  - RAM requirements, for fonts, 16
  - RAM, understanding, 54
  - selecting language, 19
  - storage memory, described, 54
  - supported fonts, 12
  - troubleshooting checklist, 48
- printhead
  - loading mode, select command, 88, 141
  - parameters, transmit command, 88, 114
  - pressure, set command, 88, 142
  - resistance test, begin command, 88, 220
  - resistance values, transmit command, 88, 220
  - temperature sensor value, transmit command, 88, 220
  - test parameters, set command, 88, 142
  - volt supply value, transmit command, 88, 220
- PrintSet, using to download fonts, 13
- Program mode, 2
  - commands
    - bar code field, create or edit, 171
    - bar code, select type, 149
    - Codabar, 151
    - Code 11, 152
    - Code 128, 152
    - Code 16K, 155

Program mode, commands, bar code, select type

(continued)

- Code 2 of 5, 151
- Code 39, 150
- Code 49, 156
- Code 93, 150
- DataMatrix, 162
- EAN.UCC Composite, 168
- HIBC Code 128, 162
- HIBC Code 39, 155
- Interleaved 2 of 5, 151
- JIS-ITF, 161
- MaxiCode, 159
- MicroPDF417, 164
- PDF417, 156
- Planet, 171
- POSTNET, 156
- QR Code, 164
- RSS, 165
- UPC/EAN, 154
- bitmap
  - cell height for graphic or UDF, define, 172
  - cell width for graphic or UDF, define, 174
  - user-defined font, clear or define, 175
  - user-defined font, editing commands, 76
- border around human-readable text, define, 175
- box field, create or edit, 177
- box field, editing commands, 76
- character
  - bitmap origin offset, define, 177
  - rotation or bar code ratio, define, 178
- Code 39 prefix character, define, 181
- command tables, load, 182
- current edit session, save, 182
- data source for format in a page, define, 183
- enter, 88, 114
- exit, 88, 208
- field
  - data, define source, 184
  - delete, 183
  - direction, define, 186
  - origin, define, 186
- font
  - character width, define, 187
  - type, select, 189
- format
  - direction in a page, define, 192
  - editing commands, list of, 77
  - erase, 193
  - offset within a page, define, 193
  - position from page, delete, 194
  - position in a page, assign, 194
- graphic
  - or UDC, define, 195
  - type, select, 195
- height magnification of bar, box, or UDC, define, 196
- human-readable field, create or edit, 198

human-readable field, editing commands, 77

intercharacter space for UDF, define, 199

interpretive field

edit, 200

editing commands, list of, 77

enable or disable, 201

length of line or box field, define, 201

line field, create or edit, 202

line field, editing commands, 78

outline font, clear or create, 202

outline font, download, 204

page, create or edit, 205

page, delete, 206

page, editing commands, 78

pitch size, set, 206

point size, set, 207

print line dot count limit, set, 208

Program mode, exit, 208

programming commands, list of, 78

RFID tag editing commands, list of, 78

RFID tag field setup, 208

RFID tag protect field, 213

RFID tag write field, 213

UDC editing commands, list of, 79

UDC field editing commands, list of, 79

user-defined character field, create or edit, 214

user-defined character, clear or create, 214

user-defined font character, create, 215

width of line, box, bar, or character, define, 216

commands, bar code field editing commands, 76

commands, list of, 76

entering, 8

program number, transmit command, 88, 114

programming

commands, list of, 78

printers, described, 3

protocol commands, downloading, 254

protocol modification commands, list of, 82

protocols, characters available, 255

## Q

QR Code, 164

quantity count, set command, 88, 115

## R

RAM

error, insufficient storage, 49

increasing amount available, 54

requirements for fonts, 16

using efficiently, 54

raw bitmap data follows command, 262

readable characters, determining from control

character, 5

reflective sensor value, transmit command, 89, 221

reimaging modified fields, 59

remaining quantity and batch count, transmit command, 89, 92

repeat last line command, 262

reset command, 89, 92



- RFID
    - storing data on tags, 9
      - ASCII format, 9
      - Hex format, 9
      - numerical format, 9
    - working with tags, 8
    - writing data to tags, 9
  - RFID parameters, set command, 89, 143
  - RFID tag
    - editing commands, list of, 78
    - field create or edit command, 89
    - field setup command, 89, 208
    - format
      - EPC-HEX64, 211
      - EPC-HEX96, 211
      - EPC-URN, 210
      - GIAI-64, 212
      - GIAI-96, 212
      - GID-96, 212
      - GRAI-64, 211
      - GRAI-96, 211
      - SGLN-64, 211
      - SGLN-96, 211
      - SGTIN-64, 210
      - SGTIN-96, 210
      - SSCC-64, 210
      - SSCC-96, 210
      - USDOD-64, 212
      - USDOD-96, 212
    - protect command, 213
    - read command, 89, 115
    - void text, set command, 89, 144
    - write field command, 213
  - ribbon, save zones, set command, 89, 144
  - RLE
    - data, 258
    - data types, 259
    - definition, 258
  - rotating fields, 37
  - RSS, 165
  - run-length encoded (RLE) data, *See* RLE
- S**
- scaling fields, 38
  - selecting the printer language, 19
  - self-strip, enable or disable command, 89, 145
  - sending IPL commands to the printer, 5
    - using an application, 7
    - using HyperTerminal from Windows, 6
  - serial port configuration, set, *See* Communication Port Configuration, Set
  - SGLN-64 tag format, 211
  - SGLN-96 tag format, 211
  - SGTIN-64 tag format, 210
  - SGTIN-96 tag format, 210
  - shift print commands, 252
  - six bits per byte
    - font
      - creating, 246
      - example, 248
    - graphics
      - creating, 242
      - example, 243
  - sizing fields, 38
  - slash zero, enable or disable command, 89, 146
  - software configuration label, print command, 89, 221
  - Speedo fonts, *See* font, *See* outline fonts
  - SSCC-64 tag format, 210
  - SSCC-96 tag format, 210
  - standard protocol, characters available, 255
  - start and stop codes (Code 39), print command, 89, 117
  - static RAM, *See* RAM
  - status
    - dump command, 89, 93
    - enquiry command, 89, 94
    - responses, downloading order, 253
  - storage area usage, transmit command, 117
  - storage memory, *See* memory
  - storing label formats, 24
  - structure of IPL commands, described, 4
  - switching between Print mode and Program mode, 8
  - syntax errors, 48
  - system commands, list of, 75
- T**
- tag
    - formats, RFID, 209
      - EPC-HEX64, 211
      - EPC-HEX96, 211
      - EPC-URN, 210
      - GIAI-64, 212
      - GIAI-96, 212
      - GID-96, 212
      - GRAI-64, 211
      - GRAI-96, 211
      - SGLN-64, 211
      - SGLN-96, 211
      - SGTIN-64, 210
      - SGTIN-96, 210
      - SSCC-64, 210
      - SSCC-96, 210
      - USDOD-64, 212
      - USDOD-96, 212
    - RFID, field setup, 208
  - takeup motor torque, increase command, 89, 147
  - telephone support, xiv
  - Test and Service mode commands, 2
    - 12 volt supply value, transmit, 218
    - ambient temperature, transmit, 218
    - command terminator, 218
    - dark adjust, 218
    - enter, 89, 117
    - exit, 89, 221
    - factory defaults, reset, 219
    - formats, print, 219
    - hardware configuration label, print, 219
    - label path open sensor value, transmit, 219

## Index

### Test and Service mode commands (*continued*)

- label taken sensor value, transmit, 219
- list of, 82
- pages, print, 220
- pitch label, print, 220
- print quality label, print, 220
- printhead
  - resistance test, begin, 220
  - resistance values, transmit, 220
  - temperature sensor value, transmit, 220
  - volt supply value, transmit, 220
- software configuration label, print, 221
- transmissive sensor value, transmit, 221
- user-defined characters and graphics, print, 221
- user-defined fonts, print, 221
- throughput, increasing, 55
- top of form, set command, 89, 147
- transition black command, 262
- transition white command, 262
- transmissive sensor value, transmit command, 89, 221
- troubleshooting
  - checklist, 48
  - error codes, 50
  - printer, 48
- TrueType fonts, *See* font, *See* outline fonts
- tutorial, label format, 24

## U

- UDC editing commands, list of, 79
- UDC field editing commands, list of, 79
- UPC/EAN, 154
- USDOD-64 tag format, 212
- USDOD-96 tag format, 212
- user-defined
  - bitmap graphics, creating, 238
  - character
    - and graphics, print command, 89, 221
    - clear or create command, 89, 214
    - field, create or edit command, 89, 214
    - transmit command, 89, 117
  - fonts
    - character, clear or create command, 89, 215
    - creating, 245
    - print command, 89, 221
  - tables, transmit command, 90, 118
- using
  - control characters, in IPL commands, 4
  - Emulation mode, 60
  - IPL commands to download fonts, 20
  - PrintSet to download fonts, 13
- UTF-8, 140

## W

- warm boot command, 90, 118
- warranty information, xiii
- web support, xiv
- width of line, box, bar, or character, define command, 90, 216

## X

- XON/XOFF protocol, characters available, 255





**Corporate Headquarters**  
6001 36th Avenue West  
Everett, Washington 98203  
U.S.A.

**tel** 425.348.2600

**fax** 425.355.9551

[www.intermec.com](http://www.intermec.com)

IPL Programmer's Reference Manual



P/N 066396-012